


SERVICE KIT INSTRUCTIONS

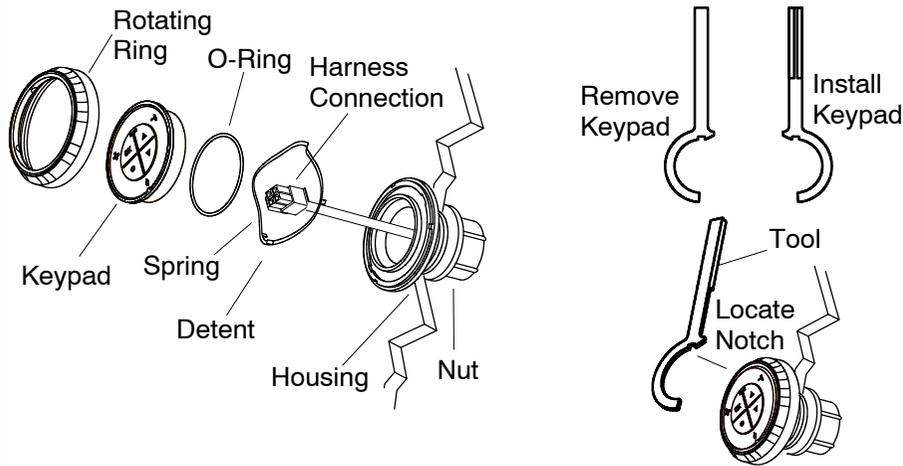

Remove Old Keypad

- Turn power to the whirlpool off.
 - Inspect new keypad for damage before you begin installation. Verify that new keypad decals are the same as the old keypad.
 - Slip the tool between the whirlpool and the rotating ring in the removal position. Align the notch in the tool with the tab on the keypad. With the notch engaged with the tab, rotate the tool approximately 30° counterclockwise.
 - Carefully pull the keypad out of the housing. The O-ring and detent spring may come loose. Inspect them and replace if necessary.
- IMPORTANT!** Make sure the harness cable does not fall back through the housing.
- Pull a minimum of 12" (30.5cm) of cable through the housing. Disconnect the harness connection from the keypad.
 - Use your thumbs to press the keypad out of the rotating ring.

Install New Keypad

- Place the new keypad on a flat surface with the decal side down. Align the tabs with the rotating ring. Gently compress the tabs until the ring slides over the keypad. Snap the ring into place on the keypad. The ring should rotate freely around the keypad.
- Pull the wiring harness through the detent spring and O-ring and plug into the back of the keypad.
- Make sure the detent spring is in place in the housing. The spring has tabs that must be located properly in the housing. The plastic detent button is located at the bottom.
- Make sure the O-ring is in the correct location on the back of the keypad.
- Align the keypad to the housing with the keypad tab at the top. Slip the tool between the whirlpool and keypad ring in the install position. Gently press on the face of the keypad while using the tool to rotate the keypad approximately 30° clockwise until it locks in position in the housing.

Test New Keypad

- Restore power to the whirlpool.
- The keypad will automatically download information to the whirlpool control. This process takes approximately five seconds. A light sequence will illuminate up and down the indicator bar until the process is complete.
- Press the power button and verify that all modes work properly. Refer to the Homeowners Guide shipped with your whirlpool.
- If a remote control is used, refer to the Homeowners Guide for programming instructions.

USA: 1-800-4-KOHLER
Canada: 1-800-964-5590
Mexico: 001-877-680-1310
kohler.com

© 2003 Kohler Co.

1021552-9-A