


Single Lever Dual Hole Lavatory Faucet

10319T-4 单把双孔脸盆龙头

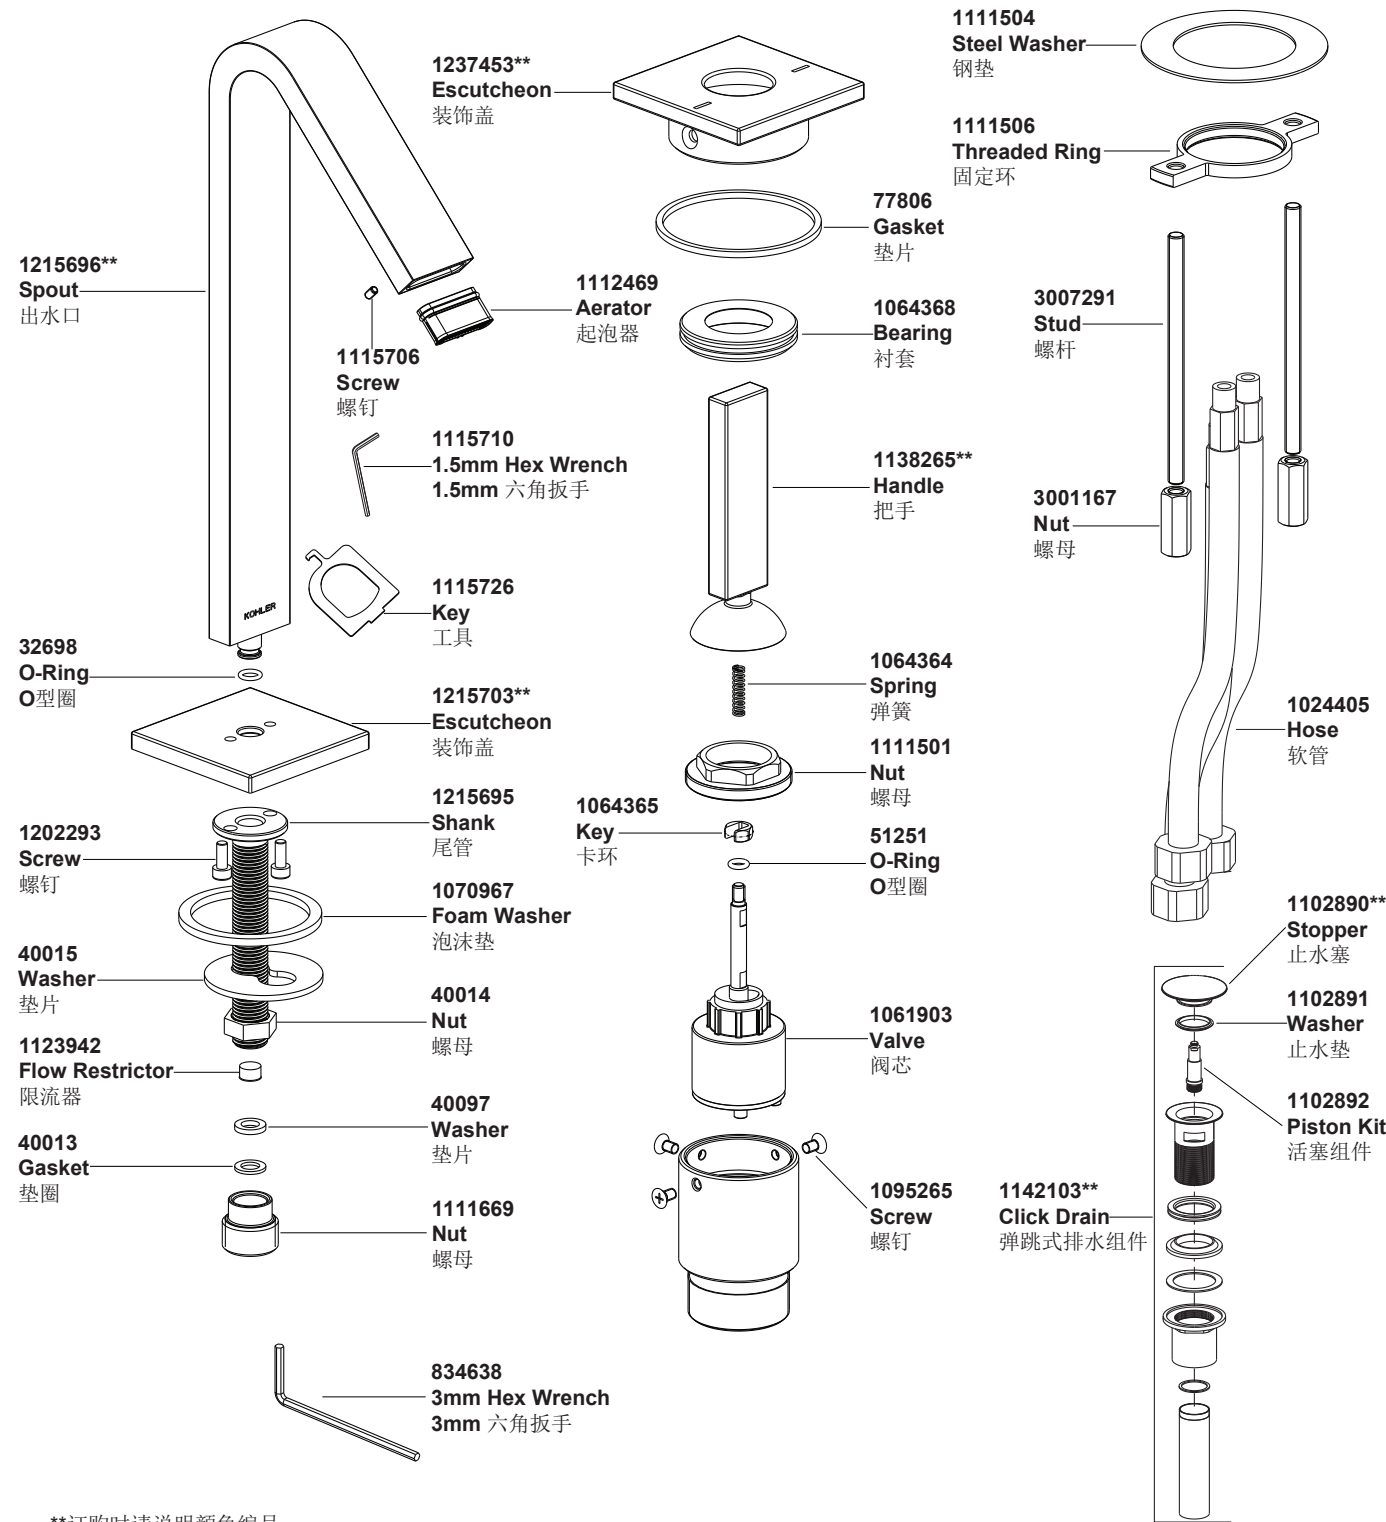

**订购时请说明颜色编号
**Color code must be specified when ordering

Single Lever Dual Hole Lavatory Faucet

10319T-4 单把双孔脸盆龙头

安装之前

所有的资料是按最新出版的产品资料编写而成。科勒公司保留任何时候不经通知即可改变产品特性、包装或产品可供类型的权利。

说明书包括重要的安装、保养及清洁方面的内容，请把这些资料交给用户阅读。


注意事项：

1. 一定要先彻底冲洗供水管以清除管道中的杂质。
2. 如果是安装新的洗脸盆，可将水龙头和排水组件先装好到洗脸盆上。
3. 阀体组件安装孔直径不小于54mm。
4. 龙头最高工作压力：**0.4MPa(4bar)**。水压超过**0.4MPa(4bar)**须安装减压阀，否则可能损坏龙头。

使用说明

开关龙头及冷热水操作如下图所示。

安装尺寸

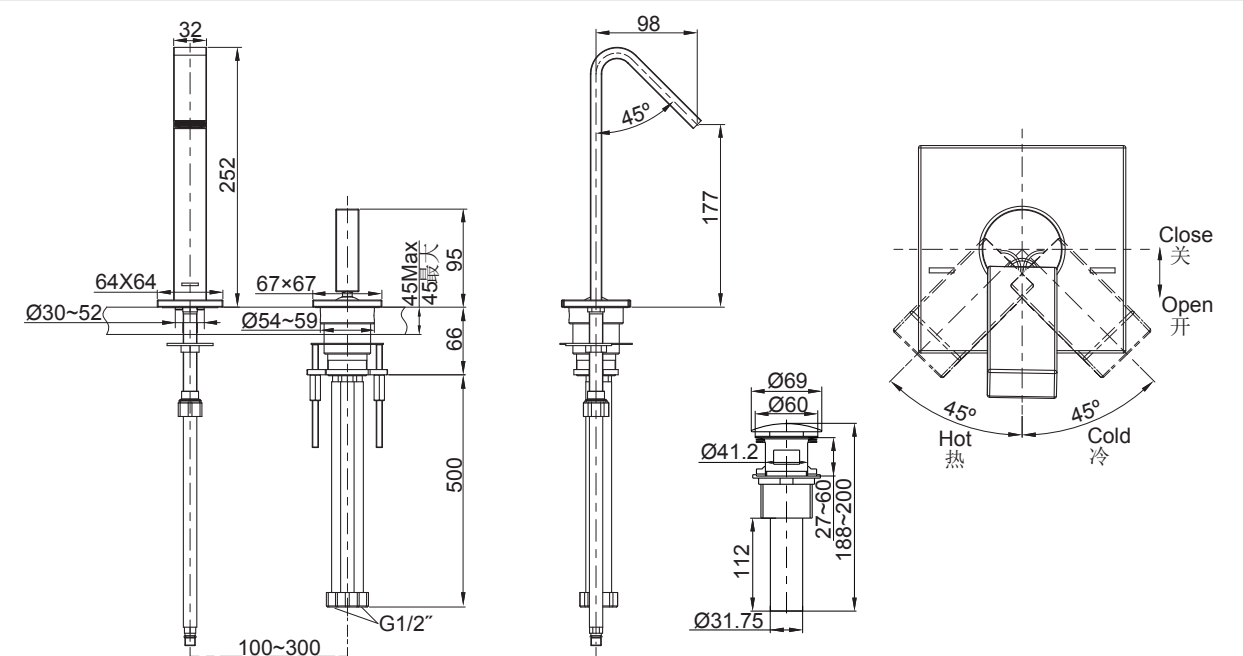

BEFORE YOU BEGIN

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please leave these instructions for the consumer. They contain important information.

NOTES:

1. Flush the water supply pipes thoroughly to remove debris.
2. For new installations, assemble faucet and drain to lavatory before installing lavatory.
3. The diameter of mounting hole for valve kit no less than 54mm.
4. The highest working pressure for faucet is **0.4MPa(4bar)**. If it exceeds **0.4MPa(4bar)**, a pressure reducer is needed. Or maybe damage the faucet.

HANDLE OPERATION

Operation for open and close, hot and cold water as shown below.

ROUGH-IN DIMENSIONS

安装说明

如何安装水龙头



取下固定环(4)和钢垫(3), 将橡胶垫片(2)放入阀体组件(1)装饰盖底部凹槽, 将阀体组件插入脸盆安装孔中。从脸盆下方将钢垫(3)和固定环(4)装到阀体上。保持螺杆(5)扳手孔朝下, 旋到固定环上。调整阀体组件, 用3mm的六角扳手(7)锁紧螺杆以固定阀体组件。锁紧螺母(6)。

把软管(8)接到水源, 有蓝色标志的软管接冷水, 红色标志的软管接热水。

从出水口组件(9)上取下螺母(16)、螺母(12)和垫片(11)。注意: 限流器(13)不允许取出, 并要定期清理, 将橡胶垫片(14)和塑料垫片(15)留在螺母内。

将泡沫垫片(10)装到出水口装饰盖底部凹槽, 然后将出水口装于脸盆安装孔中。从脸盆下方安装垫片(11)和螺母(12), 找正出水口。拧紧螺母(12)固定出水口组件。

锁紧螺母(16)。把出水软管(8)连接到螺母。

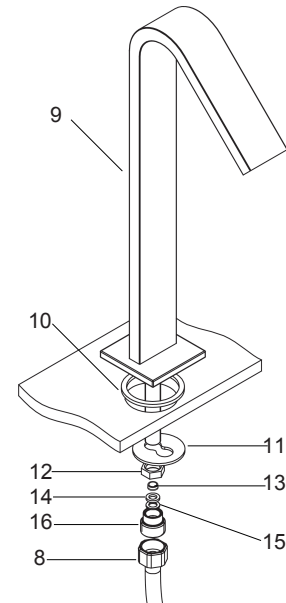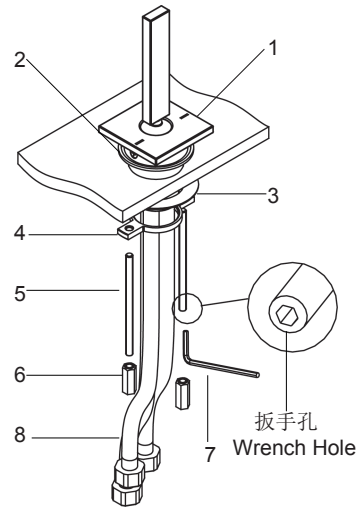


如何安装排水器

将锁紧螺母(21)、塑料垫片(20)、橡胶垫圈(19)从排水本体上依次取下。把排水本体从脸盆上部孔插入。再依次将橡胶垫圈(小面朝上)、塑料垫片和锁紧螺母从排水本体底部装入。锁紧螺母。

注意: 如果需要, 可直接在排水器法兰(17)底面沿周围涂一圈密封油灰或其他密封剂, 而不使用橡胶垫片(18)。

在锁紧螺母拧紧后, 不可调整排水本体的位置, 否则会破坏油灰密封或密封剂密封。去除多余的油灰。

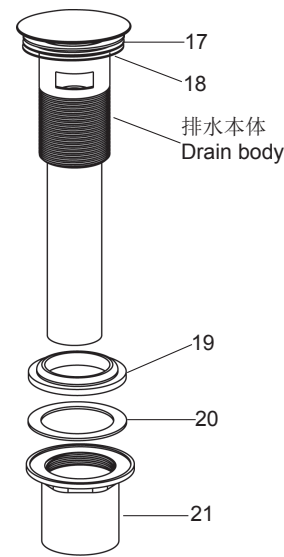

INSTALLATION

How to Install the Faucet

Remove the threaded ring(4) and steel washer(3). Put the rubber gasket(2) into the bottom groove of the valve kit(1) escutcheon. Put the valve kit into the hole of the lavatory. From underside of the lavatory, install the steel washer(3) and the threaded ring(4) onto the valve kit. Keep the wrench holes of the studs (5) facing downwards, thread them onto the threaded ring. Position the valve kit. Secure the valve kit by tightening studs with 3mm hex wrench(7). Tighten the nuts(6) onto the studs.

Attach the hoses(8) to water supplies. The hose with blue mark connects to cold water. The hose with red mark connects to hot water.

Remove the nut(16), nut(12) and steel washer(11) from the spout kit(9). **Note:** Don't take out the flow restrictor(13) in the spout kit and must clear it regularly. Leave the rubber washer(14) and plastic gasket(15) in the nut.

Put the foam washer(10) into the bottom groove of the spout kit escutcheon. Then fit the spout kit to the hole of lavatory. From underside of the lavatory, install the steel washer(11) and nut(12). Position the spout. Secure the spout kit by tightening nut(12).

Tighten nut(16). Attach the hose(8) for spout onto nut.

How to Install the Drain

Remove the locknut(21), plastic washer(20), rubber gasket(19) from the drain body. Insert the drain body into the lavatory. Reinstall the rubber gasket (Tapered side up), plastic washer and locknut back to the drain body in turn. Tighten the locknut.

NOTE: If needed, apply a ring of plumbers putty or other sealants around the underside of the drain flange(17), instead of using rubber washer(18).

Do not reposition the drain after the locknut is tightened, or you may break the putty or sealant seal. Remove any excess putty.

安装结果检查



检查并确保所有的衔接处都已拧紧。确保手柄处于关闭位置。

打开排水系统和主要供水源, 检查并修理有漏水的接口。

用1.5mm六角扳手(22)旋松螺钉(25), 用工具(23)小心地卸下起泡器(24), 打开水龙头, 让水流出出水口一分钟以清除杂质。冲洗起泡器, 关闭水龙头, 保持固定孔朝下重新装回起泡器。

更换止水塞及活塞组件

逆时针旋下止水塞(26), 取出止水垫(27)。更换新的止水垫。逆时针旋下活塞组件(28), 更换新的活塞组件。装回止水垫及止水塞。

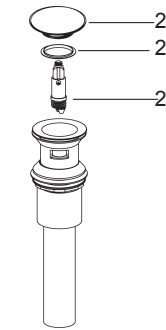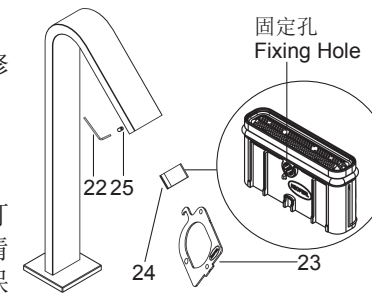

清洗说明

适用于所有加工处理过的表面: 以中性肥皂水清洗镀层表面, 再以干净的软布彻底擦干整个表面, 许多清洁剂, 比如氨水、去污粉及洁厕灵等, 会对电镀表面造成伤害, 切忌使用。

有磨损性的清洁用具或清洁剂也不可适用于科勒牌的水龙头及其配件上。

INSTALLATION CHECKOUT

Ensure that all connections are tightened and the handle is in the off position.

Open the drain. Turn on main water supply and check for leaks. Repair as required.

Loosen screw(25) with 1.5mm hex wrench(22). Remove the aerator(24) carefully with key(23). Turn on the faucet. Run the water through the spout for about one minute to remove any debris. Remove any debris from the aerator. Shut off the faucet. Keep the fixing hole facing downwards, reinstall the aerator.

Replacing the Washer & Piston Kit

Turn counterclockwise to remove the stopper(26). Take out washer(27). Replace with a new one. Turn counterclockwise to remove the piston kit(28). Replace with a new one. Reinstall stopper and washer.

CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.