



PATIO 帕蒂欧
INSTALLATION INSTRUCTIONS
安装说明书
TOUCHLESS WALL HUNG URINAL
挂墙式自动感应小便器
K-16321T-2(2.5L)
K-16321T-2W(1L)
K-16321T-2Y(0.5L)

BEFORE YOU BEGIN

- Please read these instructions carefully to familiarize yourself with the required tools, materials, and installation sequences. Follow the sections that pertain to your particular installation. This will help you avoid costly mistakes. In addition to proper installation, read all operating and safety instructions.
- All information in these instructions is based upon the latest product information available at the time of publication. Kohler China reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.
- These instructions contain important care, cleaning, and warranty information - **please leave instructions for the consumer.**
- Fixture dimensions are nominal and conform to tolerances established by ASME Standards (A112.19.2-2018).
- The product complies with GB 6952-2015, GB 28377-2019.

安装之前

- 请通读本说明书，以便了解所需工具、材料及安装程序。请遵照相关章节进行安装，以避免由于安装不当而导致不必要的损失。除了有关正确的安装方法之外，还务请详阅所有操作及安全说明。
- 本说明书所含一切资料，均以印刷时所有的最新产品为准，科勒中国保留随时更改产品特性、包装或供应情况的权利，恕不另行通知。
- 本说明书也包含了有关护理、清洁及保养等重要资料 - 请交予用户保存。
- 部件尺寸为标定值，误差符合美国ASME标准(A112.19.2-2018)。
- 本产品符合GB 6952-2015、GB 28377-2019。

RECOMMENDED TOOLS AND MATERIALS

- Open end/adjustable wrenches
- Tape measure
- Basin wrench
- Pipe wrench
- Square
- Level
- Pliers
- Socket wrench with sockets
- Screw driver
- Seal tape
- Connection wire
- Wire cutter
- Insulation tape
- Bushing
- Drill
- Sealant

所需工具及材料

- 开口/活动扳钳
- 卷尺
- 梅花扳钳
- 管扳手
- 直角尺
- 水平尺
- 老虎钳
- 管钳子
- 十字螺丝刀
- 生料带
- 连接线
- 剥线器
- 绝缘胶布
- 电工套管
- 冲击钻
- 密封胶

No.2 KOHLER ROAD, SANSHUI CENTRAL INDUSTRIAL PARK, LEPING TOWN, SANSHUI DIST., FOSHAN, GUANGDONG, PRC POST CODE: 528137
广东省佛山市三水区乐平镇三水中心工业园区科勒大道2号 邮编: 528137

8# MENGSHAN RD, ECONOMIC DEVELOPMENT ZONE OF HUANTAI, ZIBO, SHANDONG, CHINA POST CODE: 256410
山东省淄博市桓台经济开发区蒙山路8号 邮编: 256410

NO.1 KOHLER STREET, ECONOMIC DEVELOPMENT ZONE OF FAKU COUNTY, SHENYANG LIAONING PROVINCE, PRC POST CODE: 110400
辽宁省沈阳市法库经济开发区科勒大街1号 邮编: 110400

SENSOR SPECIFICATIONS

感应器规格

Power	2 "AA" size alkaline batteries(DC)	220V AC 50/60Hz (AC)
Liter per flushing	Water pressure at 0.18-0.55MPa, Less than 2.5L(K-16321T-2(2.5L)) Less than 1L (K-16321T-2W(1L)) Less than 0.5L (K-16321T-2Y(0.5L))	
Temperature	Environmental temperature: 1 to 55°C	
Starting pressure	0.05~0.86MPa	
Sensing distance	70cm away from sensing window (Automatic adjustment range: 50~70cm)	
Testing time	About 2 seconds or 5 seconds (Automatic adjustment)	
Flushing mode	Dual flushing (2.5L)	
	Flushing after used (0.5L/1L)	

Note: the sensing distance in the table is measured with a 30 X 30cm² white board as the reflecting surface.

电源	2节5号碱性电池(AA × 2)(直流型)	220V AC 50/60Hz (交流型)
冲洗水量	水压为0.18-0.55MPa.时, K-16321T-2(2.5L)不大于2.5L K-16321T-2W(1L)不大于 1L K-16321T-2Y(0.5L) 不大于0.5L	
使用温度	环境温度:1~55°C	
启动压力	0.05~0.86MPa.	
感应范围	距感应窗口70cm以内(自动调节范围约: 50~70cm)	
检测时间	约2或5秒(自动调节)	
冲洗方式	两段冲洗 (2.5L)	
	使用后冲洗 (0.5L/1L)	


注意: 表中感应范围距离的测定是以30 X 30cm²白纸为反射平面。

ROUGHING-IN

尺寸图

Reference Value
参考值

Unit: mm
单位: 毫米

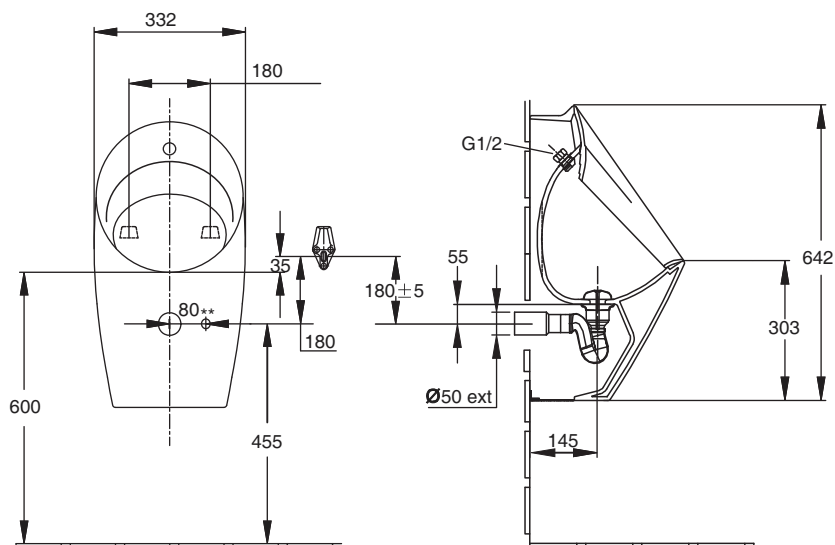

Kohler reserves the right to change marked dimensions without prior notice.
科勒公司保留随时变更图中标示尺寸的权利, 无需另行通知。

- Notice:** a. The dimensions above are just for reference.
b. The layout dimensions of water inlet and outlet see installation step B(Install the hook).
c. ** Indicates the location of inlet pipe, while inlet connector size is G 1/2.

- 注意:** a. 以上尺寸仅供参考。
b. 进水口和排污口布局尺寸见安装步骤B(安装挂钩)。
c. **为进水管位置, 进水接口尺寸为G 1/2。



Notice: To ensure an effective flush performance, strongly recommended inner diameter of water supply (including water meter, valve, etc.) is no less than 25mm, and supplied water pressure (sensor inlet dynamic pressure) is 0.18MPa ~0.55MPa.



注意: 为保证有效冲洗, 推荐供水管路(包括水表、阀等)内径不小于25mm, 推荐供水水压(冲洗器进水口流动水压): 0.18MPa ~0.55MPa。

INSTALLATION

安装步骤

1. Power connection

Use DC or AC power unit as desired (not supplied). Refer to the installation instructions below.

Use the Kohler specified AC or DC power supply. Any product damage or loss caused by the use of non-specified power supply shall be borne by the user.

A. Install DC Power Unit (DC battery box K-29183T-NA needs to be purchased separately), please refer to step 3-A directly.

Install AC Power Unit (AC power unit K-16306T-NA needs to be purchased separately), please refer to the following instructions:



CAUTION:

- Outlet of AC power unit upward prohibited.
- Do not connect 220V AC power supply to DC wiring terminal.
- Do not damage the covering of AC power unit or remove screws to avoid leakage.

1. 连接电源

客户根据需求可选配直流或交流电源(需另购)，以下有分别对直流和交流电源的安装说明。

请使用科勒指定的原装交流或直流电源，如因使用非指定电源所引起的产品故障及损失，由用户自行承担。


A. 安装直流电源(需另购直流电池盒K-29183T-NA)请直接参照3-A步骤。

安装交流电源(需另购交流电源盒K-16306T-NA)，请参照以下说明：



警告：

- 禁止将电源盒出线朝上安装。
- 禁止将交流220V接入直流DC接线端。
- 安装时严禁损伤交流电源盒外壳或拧动电源盒盖螺钉，以防止受潮漏電。

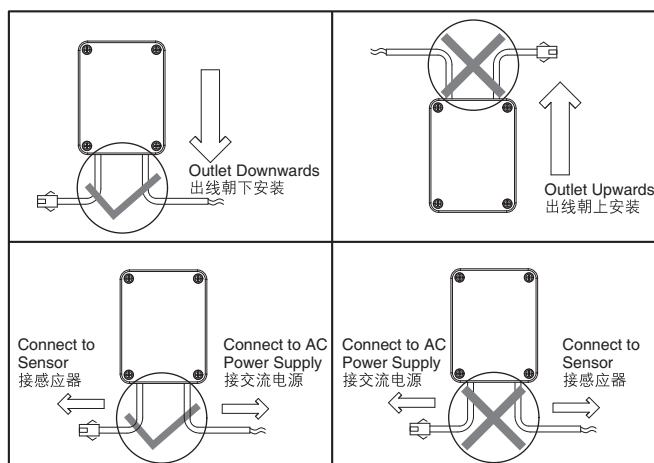

B. AC power unit connected to electric control box by connection wire.




Notice: The length of the connection wire should keep the connector out of the urinal. It's convenient connect.

B. 交流电源盒通过连接线与电控盒相连。



注意：连接线的长度应保证接插件能露在小便器外面，方便连接感应器。

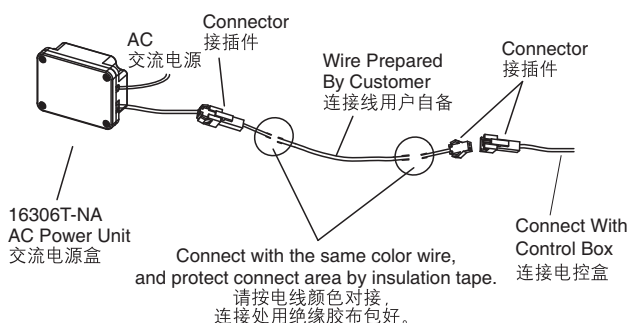

C. When installing the power unit on the ceiling, please chisel out a slot and layout bushing according to Fig., and thread wire through the bushing.




CAUTION: One AC power unit can supply two sensors at most.

C. 将电源盒放在天花板上时，如图示凿槽坑安装电工套管，管内装入电线。交流电源盒安装位置如示意图。



警告：一个交流电源盒最多可连接两个感应器。

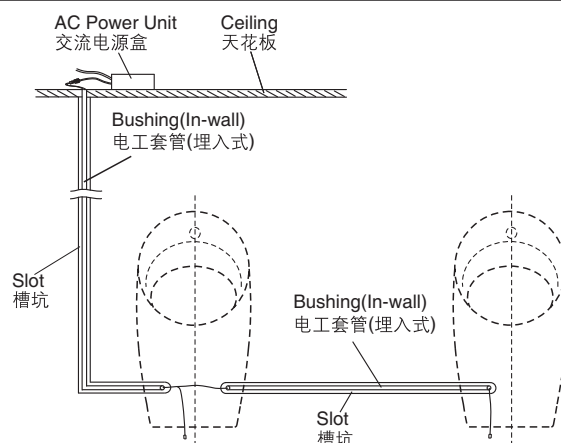



- Notice:**
- Keep the connector away from water.
 - Do not connect the DC output of AC power unit to AC power supply.
 - Do not connect to power supply while installing. Connection line is not supplied. AC connection wire with insulating sleeving is recommended. Wire of which the nominal section area of conductor is not less than 0.5mm^2 is also recommended. DC connection line use wire of which the nominal section area is not less than 0.3mm^2 . It is cut according to acted installation requirements(The length of cut wire is recommended less than 10m).
 - The head AC power supply must be protected with appropriate fuse.
 - Please confirm the AC power supply and water supply should be shut off before maintaining the products with AC power related.
 - Don't install the AC power unit in the free space behind the urinal to avoid damaging the AC power unit.



- 注意:**
- 不要让电线接插件接触水。
 - 不可将交流电源盒的直流输出端与交流电连接。
 - 安装时不要向电源盒供电。连接线请用户自备，建议交流电源线采用导体标称截面积 $\geq 0.5\text{mm}^2$ 的电线，直流连接线采用导体标称截面积 $\geq 0.3\text{mm}^2$ 的电线，电线长度根据实际安装需要自行裁剪(建议连接线长度小于10m)。
 - 交流电的总电源必须有合适的熔断丝加以保护。
 - 维修时必须断开交流电源并关闭水源。
 - 请勿将交流电源盒安装在小便器后面的空闲部位，以免造成交流电源盒的损坏。

2. Install urinal




- Notes:**
- Observe all local plumbing and building codes.
 - Shut off the water supply.
 - Carefully inspect the new fixture for any sign of damage.
 - Be very careful while hand ling vitreous china products.

2. 安装小便器



- 注意:**
- 遵守当地所有给排水及建筑规定。
 - 安装前请关闭水源。
 - 安装前请小心检查小便器是否有损坏的迹象。
 - 釉面陶瓷小便器须小心轻放，以免其破坏和崩裂。

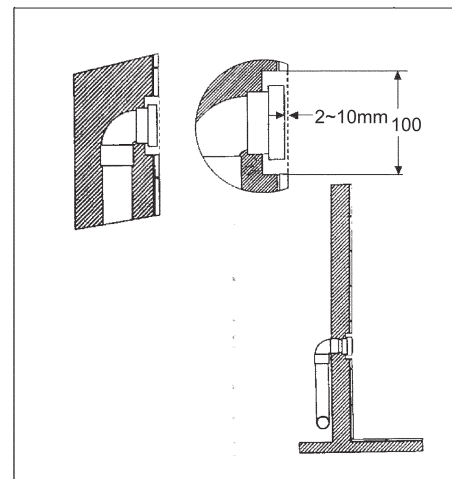

A. Install outlet connection

Ascertain the position for outlet connection according to rough-in dimension.

Connect the outlet connection with the S-trap way. Insert the gasket into the S-trap way as shown. Apply sealant on outlet pipe, connect the outlet connection with outlet pipe.


Note: Maybe different for different outlet connections.

A. 安装排水接口

根据安装尺寸示意图确定排水接口安装位置。

将排水接口和S型排水管组件连接在一起，按图示把橡胶密封圈插入到S型组件，然后在排水接口涂抹密封胶，将排水接口连接到排水管。

注意: 根据选用排水接口的不同，安装图示可能不同。

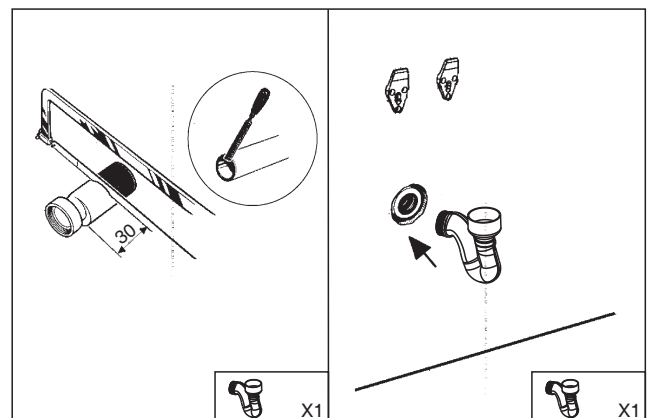


D. Install urinal

Lift up the urinal, level the installing hole on the back of the urinal with the hook. Level the outlet connection which is installed together with the strainer and the gasket on the S-trap way. Then insert the outlet connection into the gasket. (While the outlet connection is inserted, the S-trap way can be crutched by hard extended via the gap in the bottom of the urinal to install it decently.) Then fix the urinal on the hook.



- Notice:**
- a. Avoid the urinal fallen on the floor to damage the urinal or hurt somebody.
 - b. Avoid damaging the valve assy and wires.
 - c. Confirm the wires bare out of urinal base.
 - d. Set the inlet hose and the inlet hose of valve assy respectively on the both sides of the S-trap way before installing urinal.

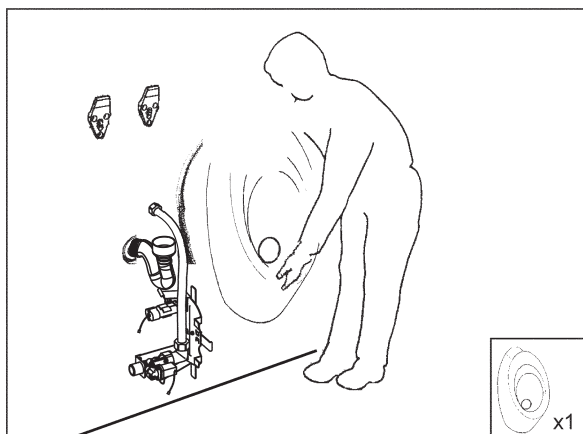


D. 安装小便器

将小便器提起扶稳，将小便器背部安装孔对准挂钩，同时，与滤网安装在一起的排水接头要与S型排水组件上的密封圈对准并插入(插入时可以用手通过小便器底部的空隙，把S型排水组件扶正，避免安装不到位)，然后将小便器固定在挂钩上。



- 注意：**
- a. 防止小便器跌落损坏或造成人身伤害。
 - b. 此安装过程中防止损坏阀体部件和导线。
 - c. 确认导线接插件端露出小便器底部。
 - d. 安装小便器前将进水管与阀体进水管分别置于S型排水组件两侧。

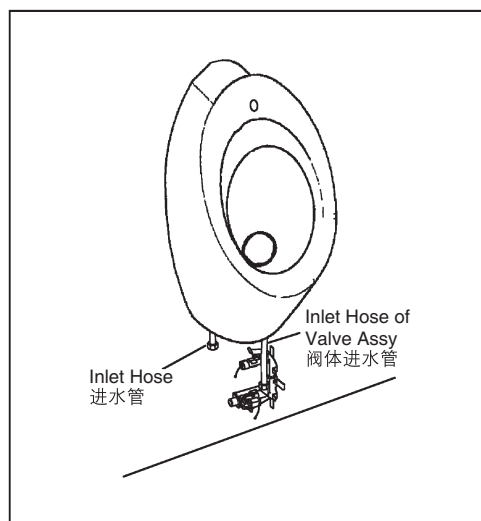

3. Install the bracket assy.

A. Connect the outlet of valve assy, with the inlet hose.

Installation instruction for urinal using DC power supply is as below:

Take out the battery box from the bracket assy. Loose the screws of the battery box assy with a screw driver. Put 2 "AAA" size alkline batteries and tighten the battery box's cover with the screws. Replace the battery box. Connect the wires with the same color wires.



- Note:** Don't mistake the polarity of the batteries and don't mix the new and used batteries together.

For urinal using AC power supply, the AC power unit must be connected with control box in accordance with the same color wires.

3. 安装阀体固定架

A. 将阀体出水口与进水管连接。


使用直流电源的小便器操作如下：

从阀体固定架上取下电池盒组件，用十字螺丝刀旋开电池盒盖螺丝，装入2节7号碱性电池，拧紧电池盖的螺丝后，将电池盒放回原处，并按电线颜色连接好接插件。



- 注意：** 电池极性不能装反，新旧电池不能混用。

使用交流电源的小便器按电线颜色连接好交流电源接插件。


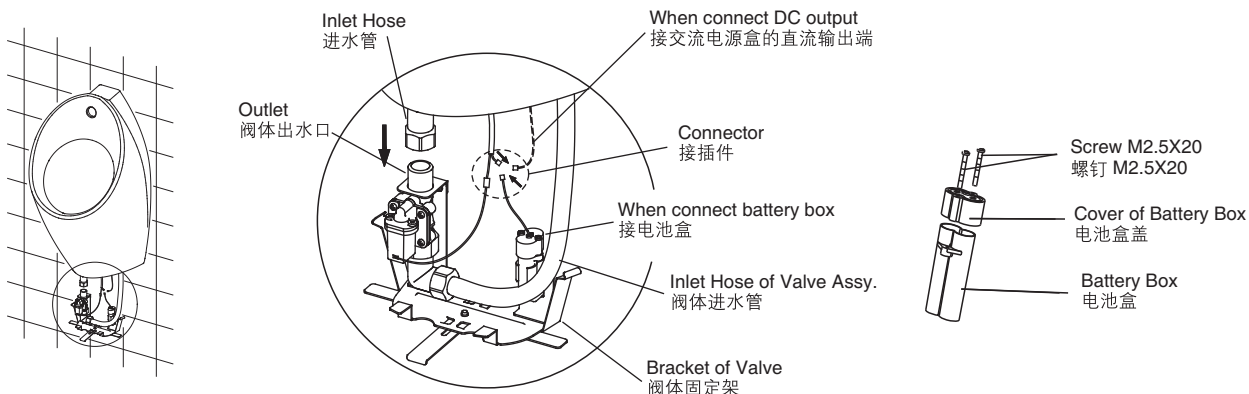


B. Press the two sides spring hooks of bracket of valve assy close to the center(1). Press the bracket up along the wall and push it into arc gap of the urinal base(2) until the spring hooks hangs on the urinal.

B. 将阀体固定架左右的弹性挂钩向中间压拢(1)，并把阀体固定架贴墙面向上推入小便器底部的弧形缺口中(2)，直到弹性挂钩挂在小便器上。

 **Note:** Please carefully handle the stainless steel plate for its sharp edge will cause possible handcut.

 **注意:** 请注意妥善处理不锈钢板，以免其锋利边缘引起割伤。

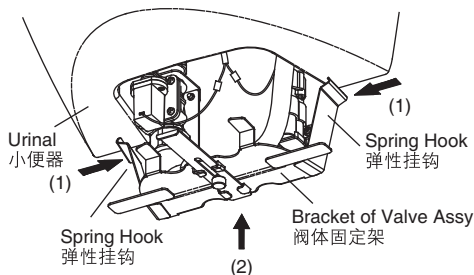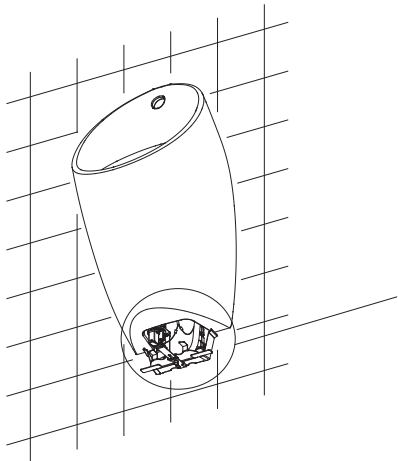

C. Push the bracket away from the wall(3), until the front hook of the bracket hanging on the urinal.

C. 将阀体固定架水平推离墙面(3)，直到让阀体固定架前端的挂钩挂在小便器上。




D. Loose the tighten screw. Push the limited board to the urinal withstanding the wall (4) and then tighten the tighten screw (5).

D. 拧松紧固螺钉(5)，将阀体固定架上的限位插板推向墙面直到顶住墙面(4)，再拧紧紧固螺钉(5)。

 **Note:** a. When using AC power supply, do not connect to power supply until finish installation.
b. Taking out the bracket just need to athwort the way of installations.

 **注意:** a. 使用交流电源时，在安装步骤全部完成后接通220V交流电。

b. 将安装阀体固定架的步骤反向操作即可取下固定架。

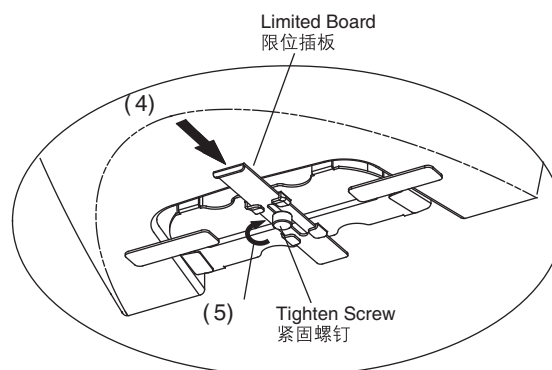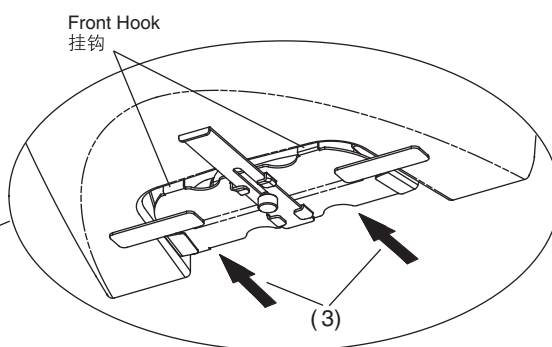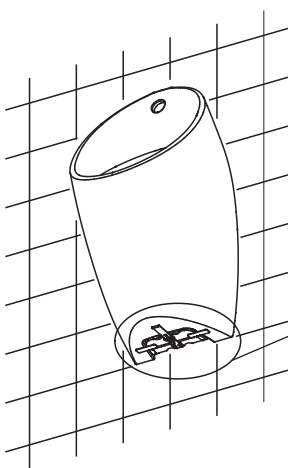

USER'S GUIDE

使用说明



Don't use this system until the power is on for 10 minutes.
The sensing distance will be adjusted and the system will not work during this time.



请在通电10分钟后开始使用该系统。

因为此段时间设定为调节感应范围的待机状态，此时系统不工作。

Working Status

Before powering the system on, clear the unwanted objects in front of the sensor window lest shortening the sensing distance.

工作状态

在电源接通前，务必清理感应窗口前的杂物，以免影响自动调距，导致感应距离的缩短。

Set Working Status

(Only for K-16321T-2)

The product comes our factory with:

1. The working status is set as dual-flush. If you want to cancel the first flushing function, place manual flush stick adjacent to right side of sensing window for more than 1 second during the 10-minute standby period (Human presence in sensing range would cause the indicator to flash fast). The sensor would generate a flushing cycle to indicate the setup of the sensor has been adjusted to afteruse flushing. If the action is not completed during this 10 minute, or you need to restore the working status to dualflush, plug off the power cord and reconnect the power supply until the indicator stops flashing and repeat the above procedures.
2. The detection time is set as 2s to avoid improper function in narrow toilets, the detection time is automatically set from 2s to 5s.

工作状态的设定

(仅适用于K-16321T-2)

本产品出厂时设定为:

1. 工作状态为二段式冲洗状态，如需取消前冲功能，只需将手动冲洗棒在接上电源的10分钟待机状态内(在该状态下如有人在感应范围内，指示灯将快速闪烁)将手动冲洗棒贴近感应窗口右侧持续1秒钟以上，感应器将有一次冲水过程，即表示感应器已改为只使用后冲洗功能状态，如在10分钟内未完成此项目工作或需恢复二段冲洗状态，拔掉电源，待电池指示灯停止闪烁后重新接上电源，重复上述步骤即可。
2. 检测时间为2秒，当卫生间狭小时，为防止误动作，本产品将自动把检测时间由2秒变成5秒。

Sensing Distance

During the first 10 minutes, when powered on, the system is in the phase of automatic regulation, and no operation is required.

感应范围


接通电源10分钟内系统处于自动调节感应阶段，无需使用者操作。

Replacement of Batteries

When out of power, the indicator will flash every 2 seconds and the sensor will not work until new batteries are supplied. When replacing batteries, open the cover of battery box and put in new batteries.

电池的更换

电池耗尽时，电池指示灯每隔2秒闪烁一次，感应器停止工作，直至更换电池。更换电池时只需打开电池盒盖装入新电池即可。

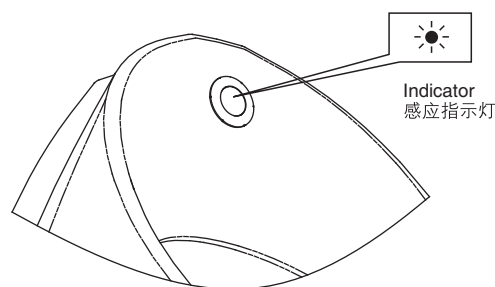

Deodorizing Flushing

The urinal will take a flush automatically when it's used 3 or 4 times in 2 minutes.

防臭冲洗


当2分钟内连续3-4人以上使用时，小便器自动冲洗一次。

Manual Flushing

Approach the supplied special magnetic stick (flushing control stick) to the sensor lens. The system is now at a manual status and the indicator will flash every 1 seconds. Approach the flushing control stick to the sensor lens once, it'll flush once. This status will last for about 8 minutes until turns to the normal working status.



Notice: If the flushing control stick keeps near to the sensing window for 30 seconds, the manual status will be terminated automatically and reassume the normal working status.

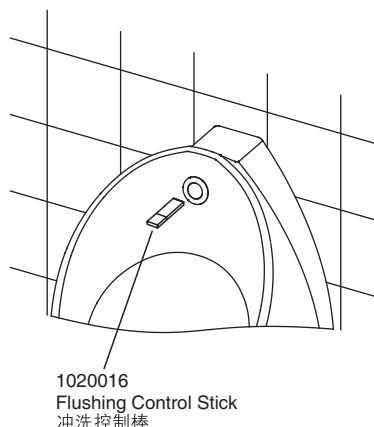

手控冲洗

用配备的专用磁棒(冲洗控制棒)靠近感应窗口, 此时系统进入手控状态, 感应指示灯每1秒闪烁一次。用冲洗控制棒每靠近感应窗口一次, 小便器即放水冲洗一次。此状态维持约8分钟, 结束后转为正常工作状态。



注意: 冲洗控制棒如持续超过30秒一直不离感应窗口, 将自动解除手控冲洗状态回复到正常工作状态。

Used in places of low water pressure (Only for K-16321T-2W/K-16321T-2Y)

If the flushing amount is limited due to low water pressure, you can set a long time washing with flushing control stick. Operate as follows: Ten minutes after power-on, you can switch between two wash times by putting the flushing control stick near the right side of sensing window. There will be a 2-second rinse after you complete the setting. If you need to reset the wash time, you must cut off the power and restart the sensor and 10 minutes later, you're able to switch wash time with flushing control stick.



Note: Under the normal water pressure, it is not recommended to use this flushing method in order to prevent excessive flushing and water spills out.

低水压使用场合(仅适用于K-16321T-2W/K-16321T-2Y)

当水压较低而导致冲洗水量很少时, 可用冲洗控制棒设置长时间冲洗方式。具体操作方法如下: 在上电10分钟内, 用配备的专用磁棒(冲洗控制棒)靠近感应窗口右侧位置, 可以切换冲洗时间。设置成功后, 会有一次约2秒的冲洗。若需再次切换冲洗时间, 必须彻底断电后重新上电, 在重新上电的10分钟内, 通过磁棒切换冲洗时间。



注意: 正常水压情况下, 不推荐使用此冲洗方式, 以防止冲洗水量过大而溅出。

MAINTENANCE

维护保养

Urinal Repair

When repairing, you don't have to dismount the sensor. Cover the sensing window with tape and work with ease.



Notice: Don't use very adhesive tape in case the scar will be hard to remove.

修理小便器

修理小便器时, 不必拆下感应器, 只需用电工胶布粘住感应窗口, 您便可放心修理设备。



注意: 不要用强力胶布, 因为粘痕会难以清除, 而产生误动作。


Clean the Filter Screen

If the flushing volume declines sharply after installation or used for a long time with no cause from water pressure, the filter may need a wash. Please operate as following steps:

Remove the bracket of valve assy. Loose the inlet hose firstly. Loose the inlet hose of valve assy. and then take out the filter. Clean it with a brush and reinstall.



Caution: a. Turn off the water supply before cleaning the filter, also power off when used the AC power supply.
b. Avoid damaging or losing the filter during cleaning.

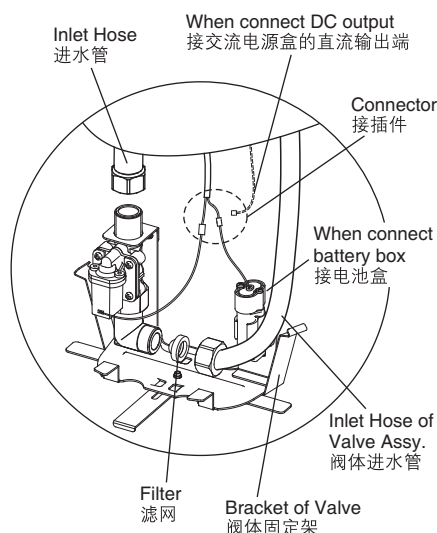

清洗过滤装置

初装或使用较长时间后, 如发现出水量明显变小, 而非水压原因, 可进行以下操作:

将阀体固定架拆下, 先拧下进水管, 再拧下阀体进水管, 取出滤网, 刷洗干净后重新装入即可。



警告: a. 清洗前, 请先关闭水源, 使用交流电源时必须先切断电源。
b. 清洗滤网过程中防止滤网变形损坏或丢失。

Care & Clean

Keep the sensing window clean. Wipe with soft cloth and mild cleaner.



Notice:

- Do not use dust-removing powder, abrasive powder or cleaner containing oil, acid or alkaline ingredient.
- Do not spray air-refresher, disinfectant, or other deodorizing, cleaning solvent directly into the sensing window.
- Keep wire away from water.
- Don't attack the sensor window.

清洁保养

保持感应窗口清洁，可用蘸有中性清洁剂的软布擦洗。



注意：

- 禁止使用去污粉、研磨粉及油类、酸性类、碱性类清洁剂。
- 禁止直接对感应窗口喷洒空气清新剂、消毒液或其他除臭、清洁类有机溶剂。
- 避免水直接接触电线接插件。
- 勿撞击感应窗口。

TROUBLESHOOTING

Please make following checks before repair:

Symptoms	Probable causes	Corrective actions
No flushing (Indicator not flashing).	1. No power or mistake connected. 2. There is an object within the sensing distance. 3. The sensing window needs cleaning.	1. Check the power connect. 2. Remove the object . 3. Clean the window.
No flushing or poor flushing while the indicator can flash.	1. Still in the waiting status. 2. Adjusting bolt not fully open 3. Low water pressure. 4. Filter is obstructed. 5. The connector is not connected well.	1. Wait for 10 minutes. 2. Open the adjusting bolt. 3. Improve water supply. 4. Clean the filter. 5. Check the connector.
Keep flushing indicator not flashing.	1. The small hole of valve core is blocked. 2. The filter of valve core is blocked.	1. Clean the small hole of valve core with thin steel wire. 2. Wash the filter of valve core with a brush.
Battery indicating light keeps flashing and no flushing.	Out of electricity.	Replace batteries.

If the trouble remains after above-mentioned actions are taken, please contact with us via distributor.

简单故障排除

请在委托修理前做以下检查：

现象	可能原因	处理方法
不出水 (感应指示灯不亮)	1. 无电源或接线有误 2. 感应范围内有其它物体一直被感应 3. 感应窗口较脏	1. 检查电源连接 2. 清理物体 3. 清洁窗口
感应指示灯闪烁 而无水流出或出水较差	1. 通电待机状态 2. 调节栓未完全打开 3. 水压太低 4. 过滤装置脏堵 5. 接线端未接好	1. 等待10分钟 2. 打开调节栓 3. 改善供水情况 4. 清洗过滤装置 5. 检查接线端
不停水 感应灯也不在闪烁	1. 阀芯小孔堵塞 2. 阀芯滤网脏堵	1. 用细钢丝清理阀芯小孔 2. 清洗阀芯滤网
电池指示灯连续 闪烁而不出水	电池耗尽	更换新电池

如按以上操作仍未解除故障，请通过销售商与本公司联系。

IMPORTANT CONSUMER INFORMATION

用户须知

Consumer Responsibilities

1. Do not attack the sensor.
2. Do not directly flush the sensor with water. The sensor is an electronic instrument.
3. Do not let sunlight or other light source enter or be reflected into Sensor Window.
4. Do not hang on the opposite wall any reflective items or install light/electronic sensor such as toilet flushing sensor.
5. Do not make Sensor Window near strong ultraviolet or electromagnetic field.
6. Keep the sensor window clean.
The sensor cover can be cleaned by soft rag with neutral liquid detergent.
Do not use eradicator, abrasive powder or oil, acid or alkali liquid detergent.
Do not spray air freshener, disinfectant or other kinds of odious removing, cleaning organic liquid to the sensor directly.
7. Urinal is designed for use with potable water. Avoid water that includes a lot of contaminants or acid/alkali water and impure water.
8. When AC power unit is connected to 220V AC power supply, corresponding protective measures should be taken.
9. Please confirm no water penetration at the connection area of AC wire, and the connection area is not easy to be affected by damp.
10. Don't connect power unit to AC power supply until the sensor installation is finished.
11. The head AC power supply must be protected with appropriate fuse.
12. Please confirm the AC power supply and water supply should be shut off before maintaining the products with AC power related.
13. All electrical connection must be compliance with related regulation and codes.
14. All installation staff should be well familiar with installation instruction.

用户责任

1. 请勿敲击感应窗口。
2. 感应器为电子器具，请勿直接用水冲洗。
3. 避免阳光或其他光源直接或反射进入感应窗口。
4. 请勿在感应器正面墙壁上挂贴易反射的物体或安装光电感应器(如大便自动感应冲洗器)。
5. 请勿靠近强烈紫外线或电磁场。
6. 保持感应窗口清洁。
窗口外壳可用蘸有中性清洁剂的软布擦洗。
禁止使用去污粉、研磨粉及油类、酸性类、碱性类清洁剂。
禁止直接对感应窗口喷洒空气清新剂、消毒液或其他除臭、清洁类有机溶剂。
7. 使用水源为自来水或可供饮用井水。
避免使用含有杂质较多或带有酸、碱性的处理水或未加工处理的水。
8. 将交流电源盒接入220V电源时，应采取相应的防卫措施。
9. 应确保交流导线连接处无水渗入以及不易受潮。
10. 务必在感应器安装完毕后，才向交流电源盒供电。
11. 交流电的总电源必须有合适的熔断丝加以保护。
12. 维修交流供电型的产品时，必须首先断开交流电源并关闭水源。
13. 所有电路连接必须符合相关规范和条例要求。
14. 所有参与安装人员都必须熟知安装说明。

Description of Content of Hazardous Substances in Product

NOTE: The information provided is based on the supplier data and Kohler Co. inspection results. The product is designed not to hurt the environment. Under current technology, all hazardous materials have been used in the smallest amounts possible. Kohler Co. will strive to reduce the use of these hazardous materials used in this product.

Reclaim Indication

When the product exceeds service life or is unable to use after repair, do not throw the product away in the normal trash. Dispose the waste electronic parts through a qualified reclamation enterprise. Verify that the product is handled properly. Disposing of product must be done in accordance with the local or national government law.

Contents of Hazardous Substances or Elements

Part name	Toxic or Hazardous Substance or Elements									
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Biphenyls (PBBs)	Polybrominated Diphenyl Ethers (PBDEs)	Dibutyl Phthalate (DBP)	Diisobutyl Phthalate (DIBP)	Benzyl Butyl Phthalate (BBP)	Bis (2-ethylhexyl) Phthalate (DEHP)
Valve Assembly	×	○	○	○	○	○	○	○	○	○
Sensor Assembly	×	○	○	○	○	○	○	○	○	○
* Battery Box Assembly	○	○	○	○	○	○	○	○	○	○
* Battery	○	○	○	○	○	○	○	○	○	○
* AC Power Box	○	○	○	○	○	○	○	○	○	○
Accessories	○	○	○	○	○	○	○	○	○	○

This form is prepared in accordance with SJ/T 11364.

○: Indicates that the substance in the material composition is below the high limits of the current requirements in GB 26572.

×: Indicates that at least one of the homogeneous substance in the material composition exceeds the high limits of the current requirements in GB 26572.

*: Indicate that only partial product series contains this substance.



The product "service life for environment protection" is 10 years; Kohler Co. will specify product service life based on product characteristics. The product "service life for environment protection" is only effective when the product is used as described in the product specification.

产品中有害物质含量的说明

注: 本表格提供的信息是基于供应商提供的数据及科勒公司的检测结果。本产品应用环保设计理念。在当前技术水平下, 所有有害物质的使用已经控制到了最低程度。科勒公司会继续努力通过改善现有技术来减少这些物质的使用。

回收提示

本产品超过使用期限或经过维修无法正常使用后, 不应随意丢弃。交由有废弃电器电子产品处理资质的企业处理。确保妥善操作本产品。必须按照当地或国家政府法律处理产品。

有害物质或元素含量

部件名称	有毒有害物质或者元素									
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬 (Cr(VI))	多溴联苯 (PBBs)	多溴二苯醚 (PBDEs)	邻苯二甲酸二正丁酯 (DBP)	邻苯二甲酸二异丁酯 (DIBP)	邻苯二甲酸丁苄酯 (BBP)	邻苯二甲酸二(2-乙基)己酯 (DEHP)
阀体组件	×	○	○	○	○	○	○	○	○	○
感应器组件	×	○	○	○	○	○	○	○	○	○
*电池盒组件	○	○	○	○	○	○	○	○	○	○
*电池	○	○	○	○	○	○	○	○	○	○
*交流电源盒	○	○	○	○	○	○	○	○	○	○
附件类	○	○	○	○	○	○	○	○	○	○

本表格按照SJ/T 11364的要求制作。

○: 表示该有害物质在该部件所有均质材料中的含量均在GB 26572现行有效版本规定的限量要求以下。

×: 表示材料组成中至少有某一均质材料的含量在GB 26572现行有效版本规定的限量要求以上。

*: 表示部分机型含有该部件。



本产品的“环保使用期限”为10年, 科勒公司根据产品设计特性指定该期限。只有在本产品使用说明书所述的正常情况下使用本产品时, “环保使用期限”才有效。