

37318IN-4-**-	CUFF® INLINE STOP VALVE TRIM
16087IN-4-**-	JULY® INLINE STOP VALVE TRIM
11727IN-4-**-	SINGULIER® INLINE STOP VALVE TRIM
11792IN-4-**-	SYMBOL® INLINE STOP VALVE TRIM
37340IN-9-**-	STRAYT® INLINE STOP VALVE TRIM
25433IN-4-**-	BEAM® INLINE STOP VALVE TRIM

BEFORE YOU BEGIN


All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please leave these instructions for the consumer. They contain important information.


NOTE:

1. Flush the water supply pipes thoroughly to remove any debris.
2. Observe all local plumbing and building codes.


ROUGH-IN DIMENSIONS (in mm)

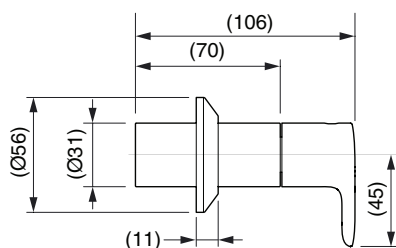


16087IN-4--**

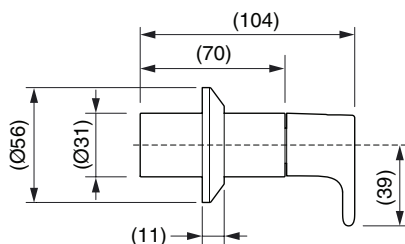


11727IN-4--**

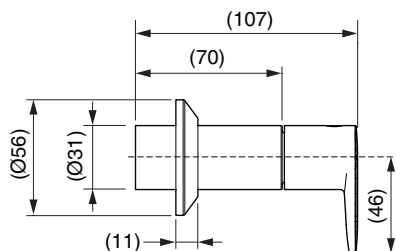


25433IN-4--**

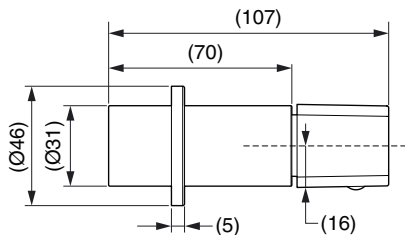

37340IN-9--**

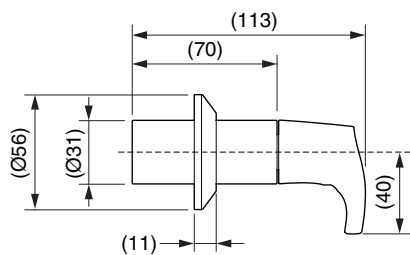


11792IN-4**

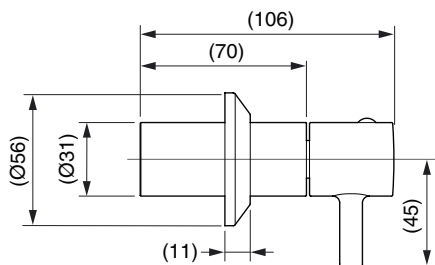


37318IN-4**


INSTALLATION INSTRUCTIONS

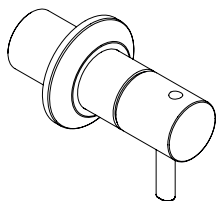


37318IN-4**

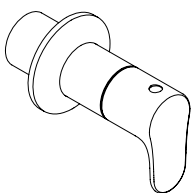

16087IN-4**

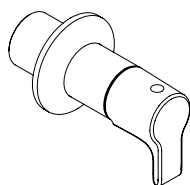


11727IN-4**

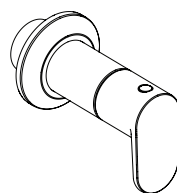


25433IN-4**


1

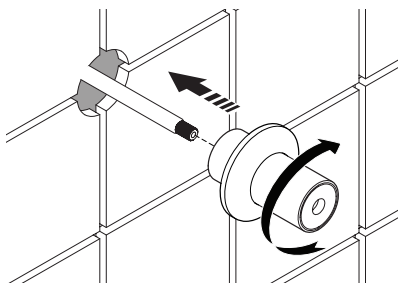


2

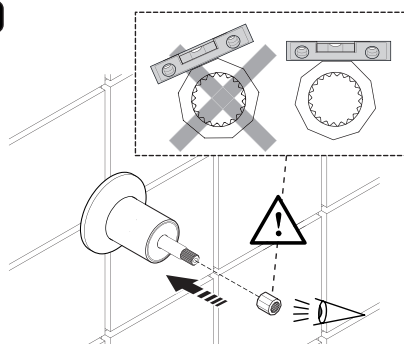


3

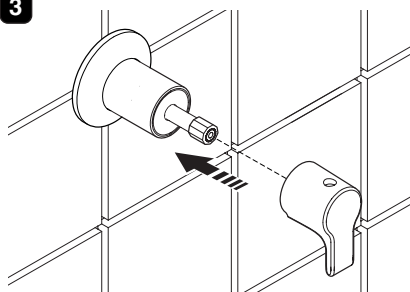


4

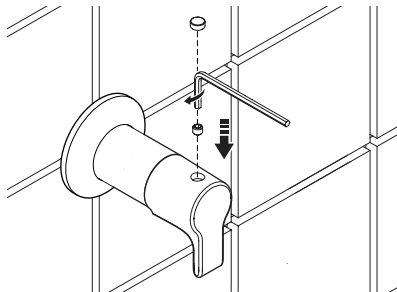

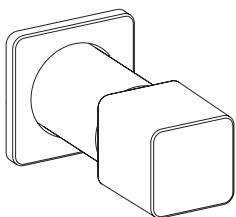


37340IN-9-**

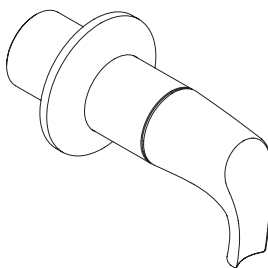


11792IN-4-**


1

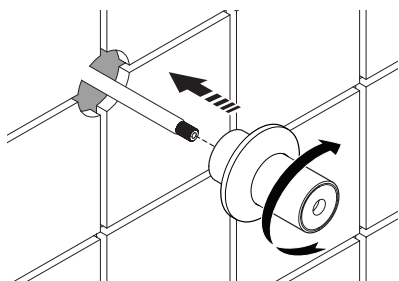


2

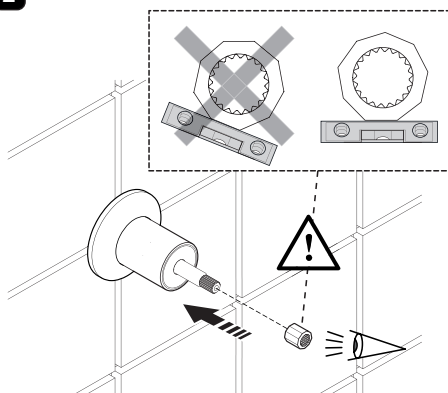

3

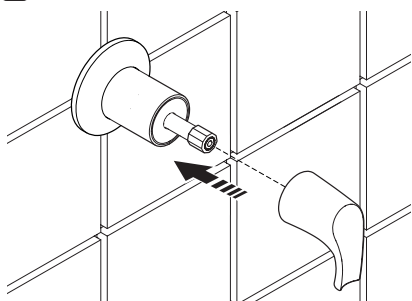


4

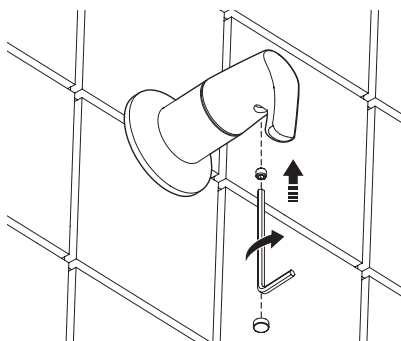

CLEANING INSTRUCTIONS



SERVICE PARTS

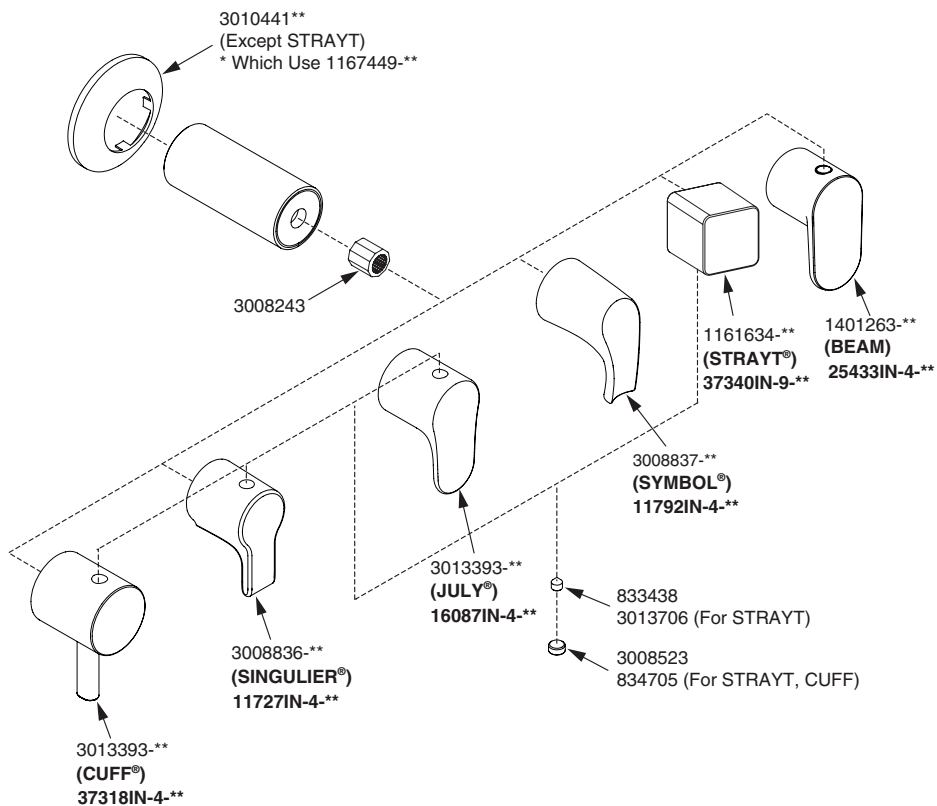

** -Finish code must be specified when ordering.