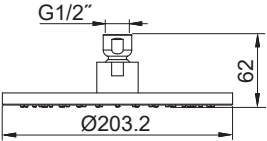
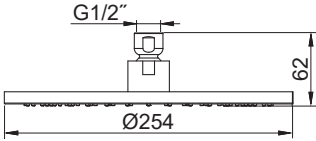
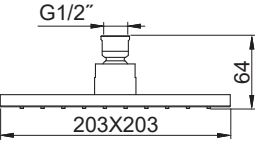
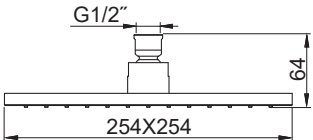
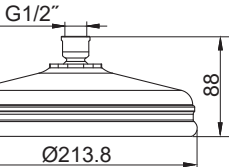
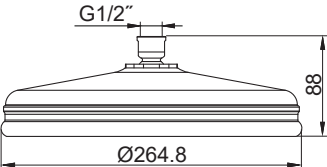
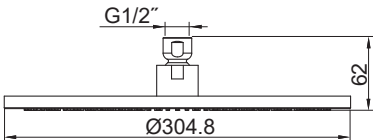
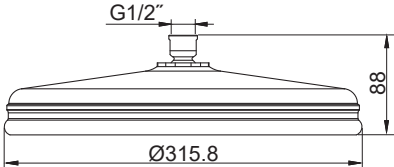
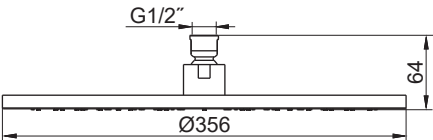


KOHLER®

INSTALLATION INSTRUCTIONS

安装说明书

Katalyst Air Showerhead

18358T-CL 18359T-CL 18360T-CL 18361T-CL 15990T-CL 15991T-CL 随心雨花洒 15992T-CL 15993T-CL 15994T-CL		
安装之前		BEFORE YOU BEGIN
所有的资料是按最新出版的产品资料编写而成。科勒公司保留任何时候不经通知即可改变产品特性、包装或产品可供类型的权利。 说明书包括重要的安装、保养及清洁方面的内容，请把这些资料交给用户阅读。 注意事项： 1. 一定要先彻底冲洗供水管以清除管道中的杂质。 2. 推荐工作压力：2~5bar。 3.花洒最高工作压力：0.5MPa(5bar)。水压超过0.5MPa(5bar)须安装减压阀。花洒最高工作温度及环境温度：60℃。请特别注意花洒同花洒连接的臂管须远离加热器，否则可能损坏花洒及其密封件，甚至对使用者造成伤害。		All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice. Please leave these instructions for the consumer. They contain important information. NOTES: 1. Flush the water supply pipes thoroughly to remove debris. 2. Recommended working pressure: 2 to 5 bar. 3. The highest working pressure for showerhead is 0.5MPa(5bar). If it exceeds 0.5MPa(5bar), a pressure reducer is needed. The highest water and environment temperature is 60°C. Please keep the showerhead and shower arm away from heater, or it may become damaged and cause injury to the user.
安装尺寸		ROUGH-IN DIMENSIONS
18358T-CL  18359T-CL  18360T-CL  18361T-CL  15990T-CL  15991T-CL  15992T-CL  15993T-CL  15994T-CL 		


淋浴器加施的水效标识表明本产品的水效等级等性能符合GB 28378-2019《淋浴器水效限定值及水效等级》的要求，是产品符合性的一种标识。

安装步骤

如何安装花洒

安装头顶花洒(1)之前，先打开水源冲洗掉杂质。在花洒臂(2，客户自备)螺纹上缠绕足以密封的密封胶带或涂合适的密封胶，将头顶花洒旋到花洒臂上。

在装头顶花洒之前可根据需要安装限流器(3)。先取出垫片(4)，按图示方向放入限流器，再装回垫片。

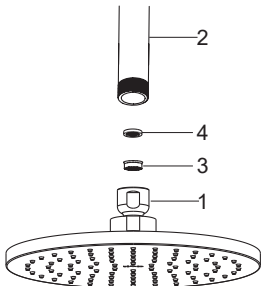

INSTALLATION


How to Install the Showerhead

Flush both water supplies through the shower arm(2, not provided) for about one minute before the showerhead(1) is installed. Apply tape or sealant to the exposed end of the shower arm. Tighten the showerhead with a strap wrench.

Before installation of the showerhead, install regulator(3) if needed. Take out washer(4) and install regulator as the figure shown, reinstall washer.

如何维护保养花洒

喷头有杂质或结垢会导致水流变形，流量变小，甚至造成花洒漏水。如果出现这些情况，请打开水源，用力按压或摩擦橡胶喷头，去除杂质或水垢。

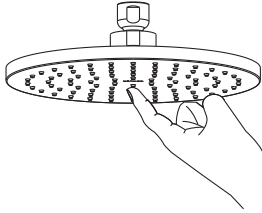

How to Maintain the Showerhead

Any debris or water scale may cause distorted flow stream or reduce the flow rate, and even water leakage. If these happen, run water through the showerhead, and use fingers to press or rub firmly across the rubber nozzles to remove the debris or water scale.

清洗说明

适用于所有加工处理过的表面：以中性肥皂水清洗镀层表面，再以干净的软布彻底擦干整个表面，许多清洁剂，比如氨水、去污粉及洁厕灵等，会对电镀表面造成伤害，切忌使用。

有磨损性的清洁用具或清洁剂也不可使用于科勒牌的水龙头及其配件上。

CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.

KOHLER®

SERVICE PARTS

零件图


Katalyst Air Showerhead

18358T-CL18359T-CL18360T-CL

18361T-CL15990T-CL15991T-CL

15992T-CL15993T-CL15994T-CL

随心雨花洒

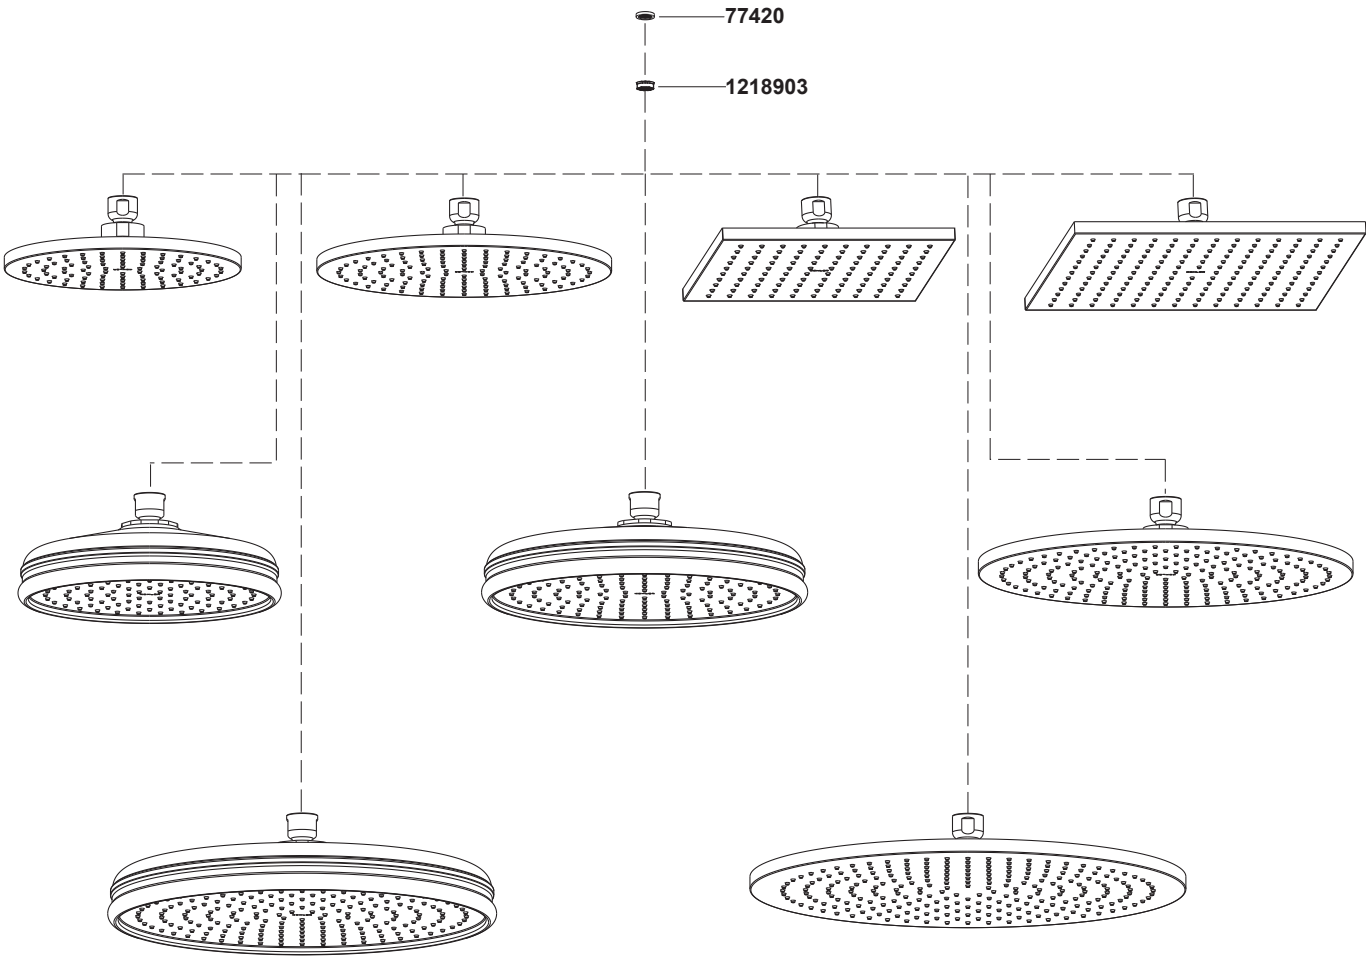

**订购时请说明颜色编号

**Color code must be specified when ordering