



SERVICEABLE PARTS

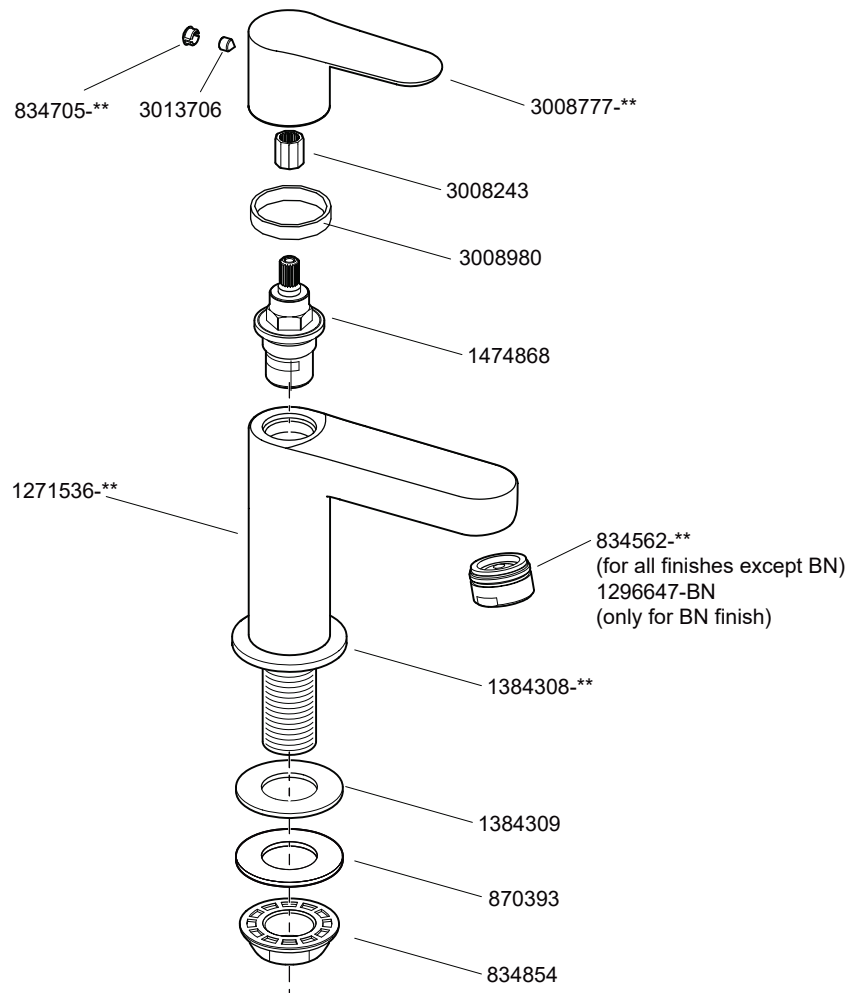

**Finish code must be specified when ordering.


THE BOLD LOOK
OF **KOHLER®**

JULY®
INSTALLATION INSTRUCTIONS

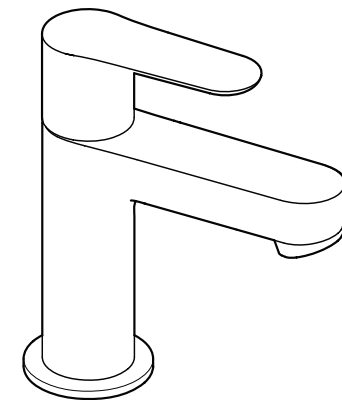

75377IN-4--**
BASIN PILLAR TAP

ROUGHING-IN (in mm)

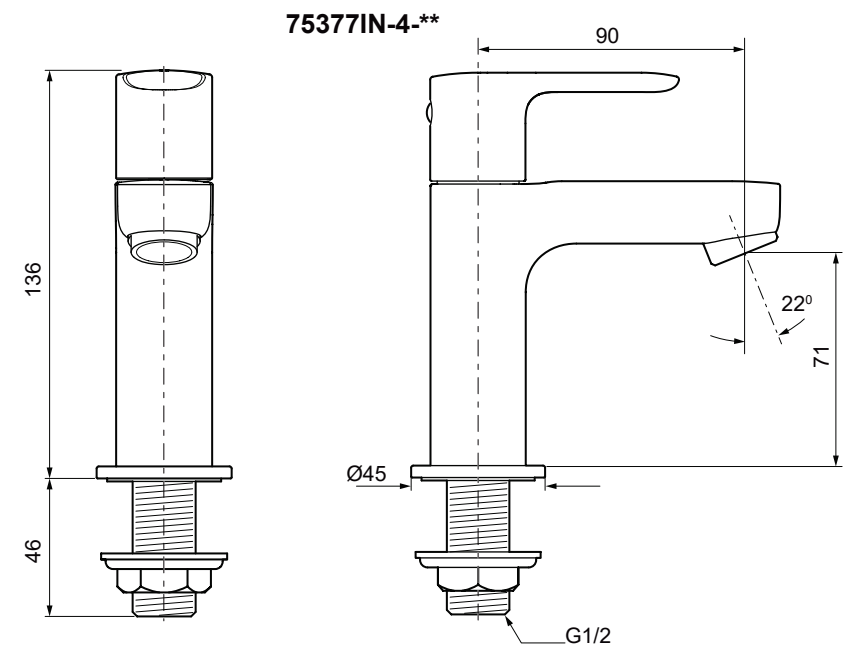

PRESSURE AND HOT INLET TEMPERATURE

 


P (Bar) 0.5 < 3 < 5.5




T (°C) < 65

TOOLS REQUIRED




27

23

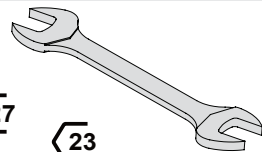


INSTALLATION INSTRUCTIONS


1

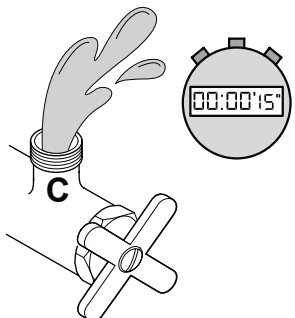


2

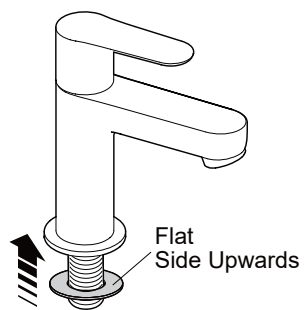


3

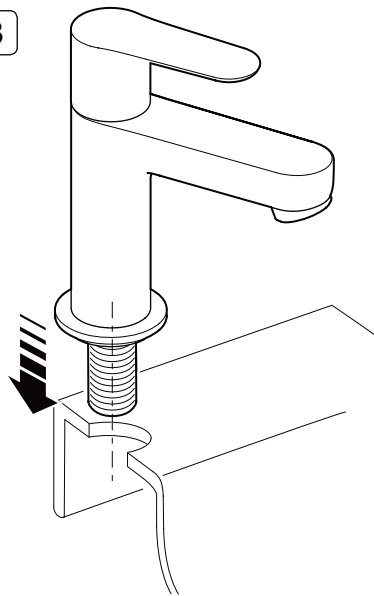


4

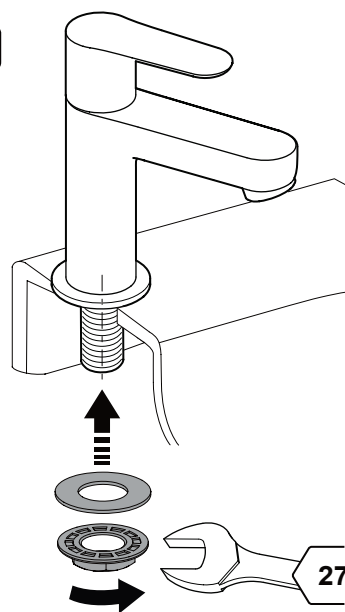

5

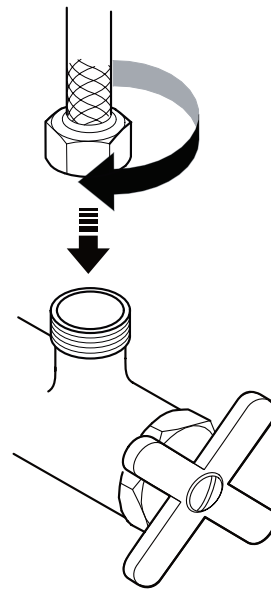


6

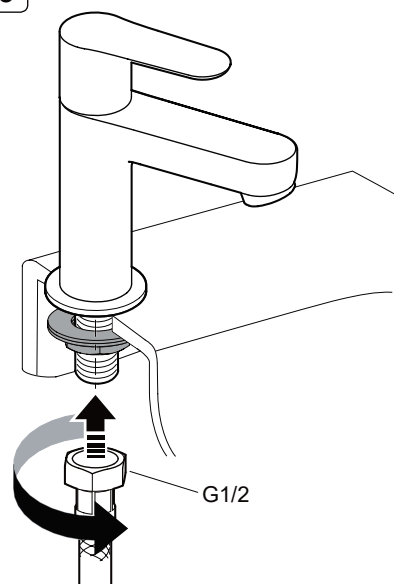


AERATOR CLEANING AND SERVICING


a.

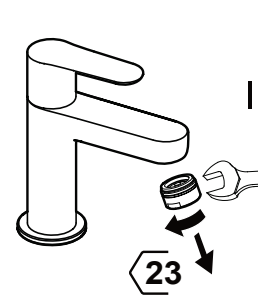

b.

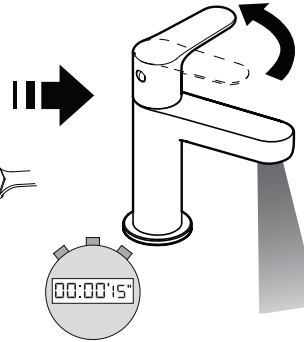

c.

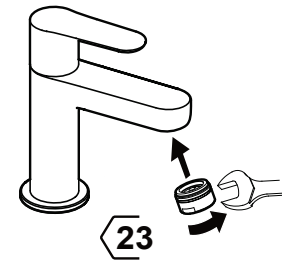

CLEANING INSTRUCTIONS



KOHLER Cleaning Solution



Microfibre Cloth

