

Installation and Homeowners Guide

安裝說明及用戶手冊

Underscore Bathroom Heater S450

科勒浴室寶 S450*

K-77315H-MZ(Air-care)

KOHLER CHINA INVESTMENT CO., LTD NO.158, JIANG CHANG SAN ROAD,
JING'AN DISTRICT, SHANGHAI, PRC POST CODE: 200436
科勒(中國)投資有限公司 上海市靜安區江場三路158號 郵編: 200436

*又名: 浴室淨•暖機

1345823-T01-A

KOHLER®

BEFORE YOU BEGIN

安裝之前

- Please read these instructions carefully to familiarize yourself with the required tools, materials, and installation sequences. Follow the sections that pertain to your particular installation. This will help you avoid costly mistakes. In addition to proper installation, read all operation and safety instructions.
- All information in these instructions is based upon the latest product information available at the time of publication. Kohler China reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.
- These instructions contain important care, cleaning, and warranty information - **please leave instructions for the consumer.**
- This product complies with GB4706.1-2005, GB4706.23-2007, GB4706.27-2008, GB7000.1, GB7000.202 and GB/T17743.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The supply mains having a contact separation in all poles that provide full disconnection under overvoltage category III conditions, the instructions shall state that means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.
- If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- 請通讀本說明書，以便了解所需工具、材料及安裝程序。請遵照相關章節進行安裝，以避免由于安裝不當而導致不必要的損失。除了有關正確的安裝方法之外，還務請閱讀所有操作及安全說明。
- 本說明書所含一切材料，均以印刷時所有的最新產品為準，科勒中國保留隨時更改產品特性、包裝或供應情況的權利，恕不另行通知。
- 本說明書也包含了有關護理、清潔及保養等重要資料 - 請交予用戶保存。
- 執行標準：GB4706.1-2005, GB4706.23-2007, GB4706.27-2008, GB7000.1, GB7000.202及GB/T17743。
- 兒童以及缺少專業技能的人士請勿直接操作此機器。
- 兒童請勿和機器玩耍、嬉戲。
- 產品需配備全集斷開開關。
- 如果電源線有損壞，請及時找制造商或者代理商進行更換。



WARNING: Risk of electrical shock. A licensed electrician should make all electrical connections.



WARNING: Risk of electrical shock. Connect only to a circuit protected by a typical two-pole circuit breaker.



WARNING: Risk of electrical shock. Disconnect power before servicing.



WARNING:

1. The heater must not be used if the glass panels are damaged.
2. This heater is not equipped with a device to control the room temperature.
3. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
4. The heater must be installed at least 1.8 m above the floor.
5. Prior to cleaning or other maintenance, the appliance must be disconnected from the supply mains.
6. Products not suitable for covering with thermally insulating material.
7. The heater must not be located immediately below a socket outlet.
8. The light source of this luminaire is not replaceable. When the light source reaches its end of life, the whole luminaire shall be replaced.



警告：有觸電的危險。 請找合格的電工來進行所有的線路連接。



警告：有觸電的危險。 僅能和雙極型斷路器保護的電路連接。



警告：有觸電的危險。 工作之前先切斷電源。



警告：

1. 如果玻璃面板損壞，請勿使用此機器。
2. 機器不能控制室內溫度。
3. 不要在缺少監控或者無人的情況下開啓此機器。
4. 安裝至少需離地1.8米。
5. 在維修或者清潔機器之前，請關閉開關電源。
6. 請勿將絕熱材料覆蓋在產品上。
7. 加熱器不能直接置于插座正下方。
8. 燈具的光源不可更換，當燈具壽命將盡，須更換整塊燈具。


RECOMMENDED TOOLS AND MATERIALS 所需工具及材料

- Tape measure
- Level
- Screw driver
- Connection wire
- Wire cutter
- Insulation tape
- Bushing
- Percussion Drill
- Pen Knife
- Wrench
- 卷尺
- 水平尺
- 十字螺絲刀
- 連接線
- 剝線器
- 絕緣膠布
- 電工套管
- 扳手
- 衝擊鑽
- 美工刀

ROUGHING-IN 尺寸圖

Reference Value
參考值

Unit: mm
單位: 毫米

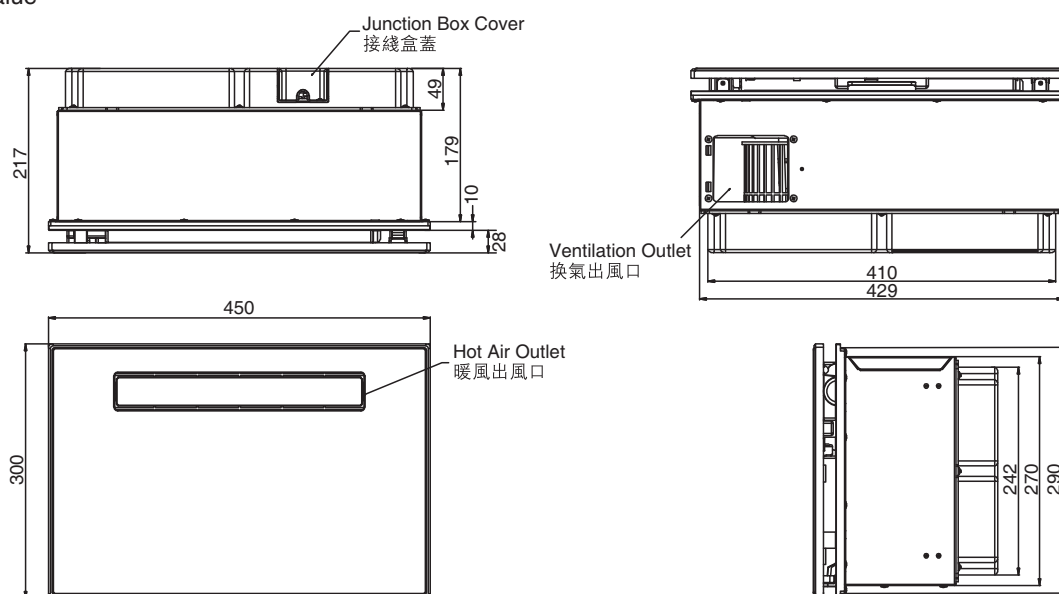

Kohler reserves the right to change marked dimensions without prior notice.
科勒公司保留隨時變更圖中標示尺寸的權利，無需另行通知。


SPECIFICATIONS 規格

Model	K-77315H-MZ
Voltage/Frequency	220V~/50Hz
Rated Input Power	2650W
Heater Power	2630W
Fan Power	30W
Dry Clothing Power	2650W(Hot)/50W(Cool)
Ventilation Power	20W
Air-care Power	30W
Lighting Power	12W
Lighting Input Current	300mA
Ventilation Volume	2.7m³/min
Ventilation Noise	39dB
Ingress Protection	IPX2 (Bathroom Heater) IPX4 (Remote Control)

型號	K-77315H-MZ
電壓/頻率	220V~/50Hz
額定輸入功率	2650W
熱風功率	2630W
涼風功率	30W
干燥功率	2650W(熱干燥)/50W(涼干燥)
換氣功率	20W
空氣淨化功率	30W
照明功率	12W
照明輸入電流	300mA
換氣風量	2.7m³/min
換氣噪音	39dB
防護等級	IPX2 (浴室寶) IPX4 (遙控器)

SIMPLIFIED DIAGRAM OF THE UNIT



整體簡圖

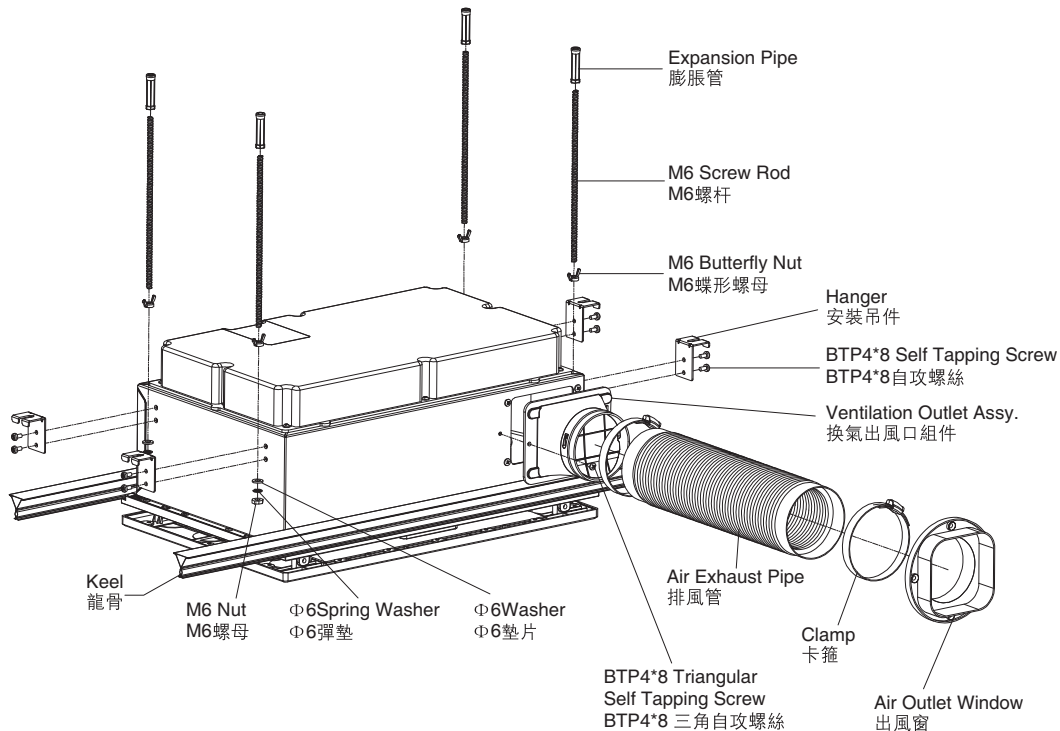

WIRING DIAGRAM

電氣原理圖

K-77315H-MZ

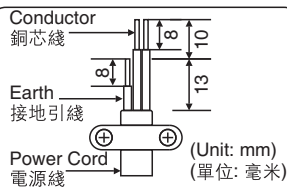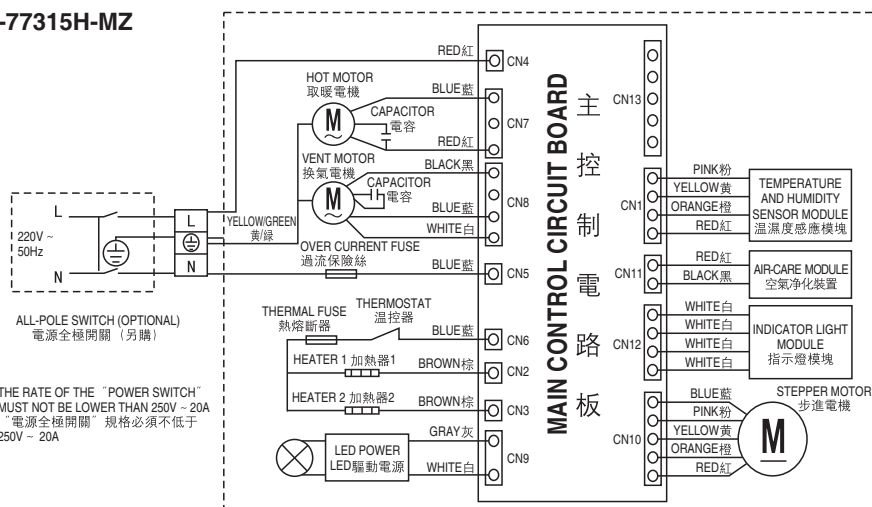

Make sure the power cord installed firmly, otherwise it may catch fire.
確保電源線安裝到位，否則可能會引起火災。

- Insulation of power cord cannot be damaged.
- Copper cord must be inserted into the pillar terminal hole, and make sure all the cords under the terminal are inserted into the pillar terminal completely.
- Suggest using a power cord which with specification 60227 IEC 53 Model's powercord Specified in GB/T 5023.5 and with cross section of 3X1.5mm².
- 電源線的絕緣膠不能破損。
- 銅芯線必須到達端子臺的深處, 並確保其在壓線端子的下方位置被全部插入接線孔。
- 電源線請選用GB/T 5023.5中所規定的60227 IEC 53型絞合軟線, 導線的截面積為3X1.5mm²。


PREPARATIONS BEFORE INSTALLATION 安裝前準備

A. Preparation before the installation

1. Open the hole of outlet window
Make sure that the outlet window's position (it should be lower than the outlet of the bathroom heater to prevent the water come back to the bathroom heater from the outlet window), and open a round hole on the wall.
2. Outlet window installation
Fix the air exhaust pipe to the outlet window on the wall with the clamp as the preparation of bathroom heater installation. Seal the pipe and the outlet window with foaming agent.


A. 安裝前的準備工作

1. 開通風孔
確定牆壁上通風口的位置(應在吊頂上方略低於換氣的出風口，以防止通風管內結露水倒流入主機)，在該位置開一個圓孔。
2. 安裝通風窗接頭
將排風管一端連接到外牆的出風窗上，用卡箍鎖緊，并用發泡劑填封。另一端延伸到店室寶將要安裝的位置。

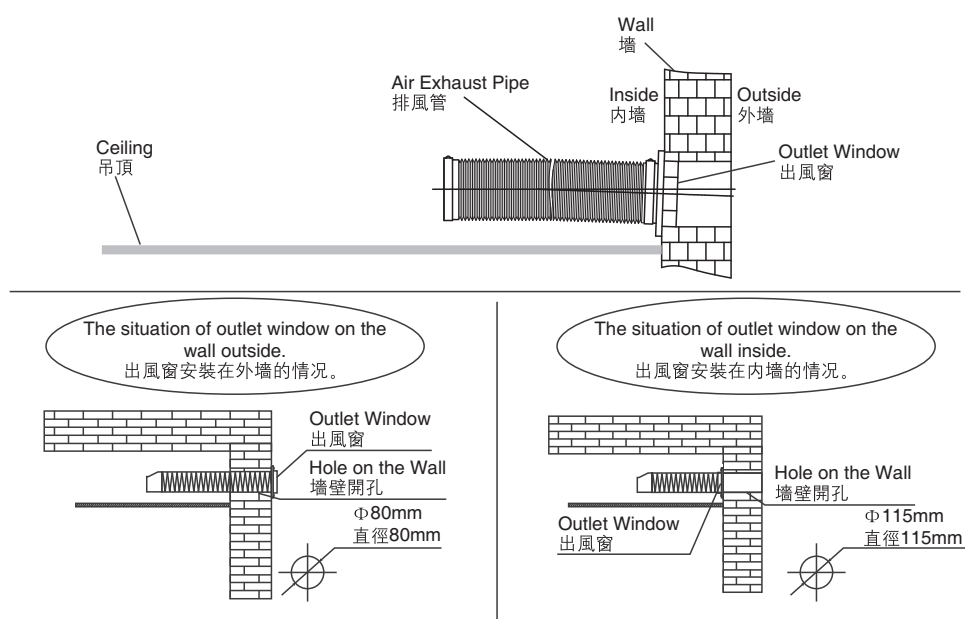


B. Take out the bathroom from package.

B. 從包裝箱中取出產品。

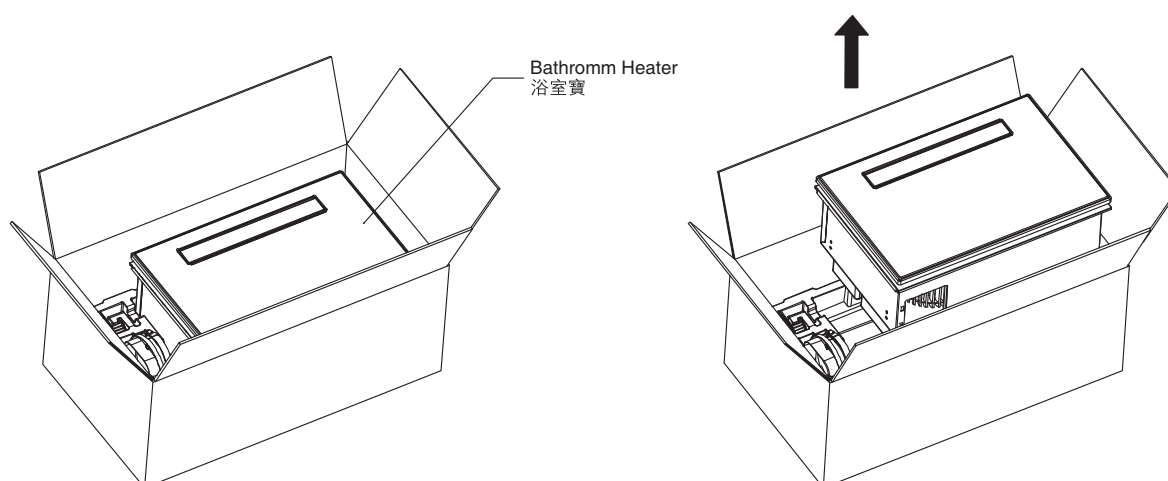


C. Packing List

1285547
Φ80 Air Outlet Window
Φ80出風窗

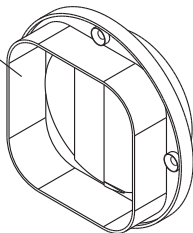


1285548
Φ80 Air Exhaust Pipe
Φ80排風管

 


Note: Initial Length: 275mm
Stretch Length: 1300mm

注: 原始長度: 275mm
拉伸長度: 1300mm

1285549
Clamp
卡箍*2

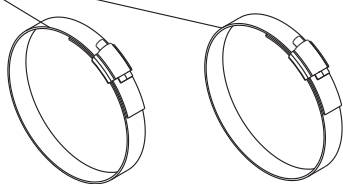


1285550
Ventilation Outlet Assy.
換氣出風口組件

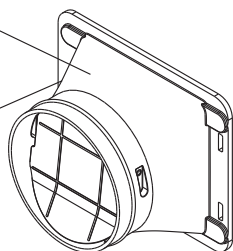


BTP4*8 Triangular
Self Tapping Screw
BTP4*8 三角自攻螺絲

1285551
Heater Accessories Package
取暖器配件包

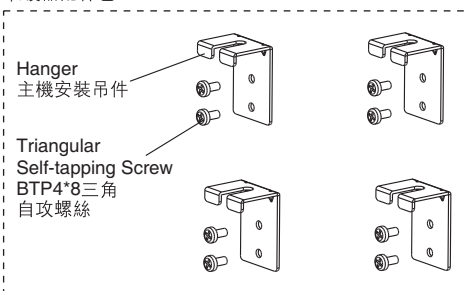


C. 包裝明細表


1322379
Fixed Column Assy. (2pcs)
固定柱組件(2套)

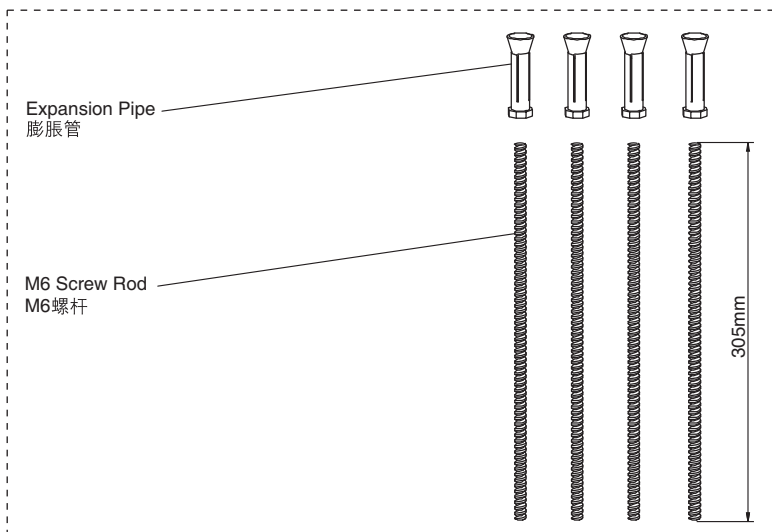


1285553
Lock Assy. / 鎖緊組件

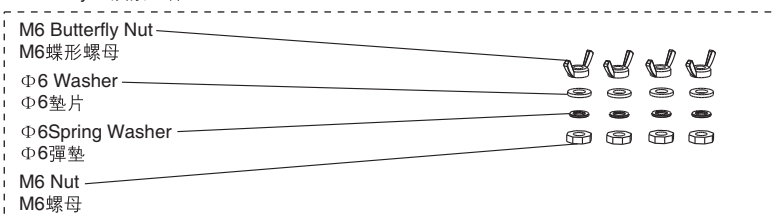


1285556
Remote Control Base Assy.
遙控器底座組件

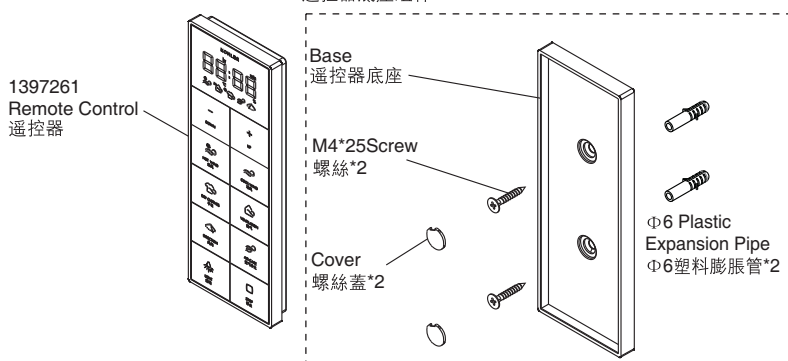

1285554
Decorated Plate X2
裝飾扣板X2

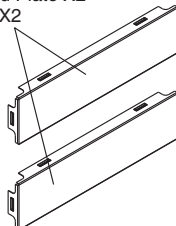

1285542
Install Template
安裝模板

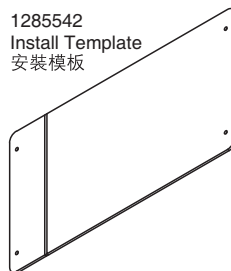

INSTALLATION


安裝

Caution before installation:

- The installed product must be 200mm or above away from curtains or other combustible materials.
- The distance between the ceiling where the product is mounted and the roof shall be 200mm or above.
- Ensure that the gap between the product edge and the wall is 300mm or above.
- The power cord to the product shall have enough length for the installation.
- The distance between the product and the air outlet window shall be 1000mm or lower.
- Cut the screw rod(M6) to suit the distance between the ceiling and the roof.

安裝前確認事項:

- 離窗簾和其它易燃材料距離200mm以上。
- 用于安裝本品的吊頂離房屋頂部的距離在200mm以上。
- 產品安裝邊緣至牆壁的距離在300mm以上。
- 電源綫請預留足夠長度，以便于安裝。
- 排風管距離內牆面小於1000mm。
- 依據吊頂高度，裁剪合適長度的安裝螺桿(M6)。

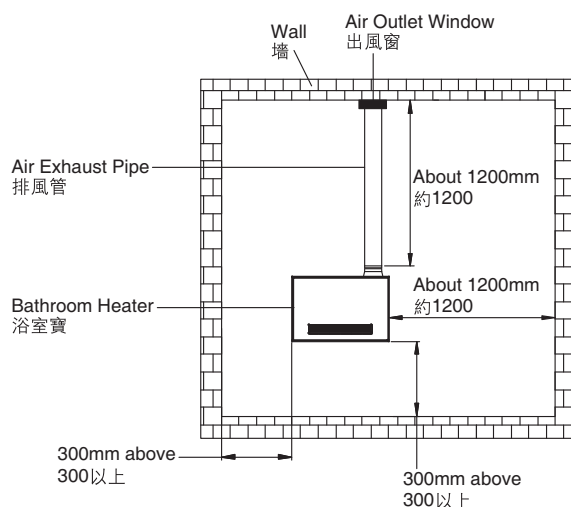


1. Connecting the power cord

- (1) Pass the power cord through the ceiling.


1. 電源綫的連接

- (1) 將電源綫穿過天花板。

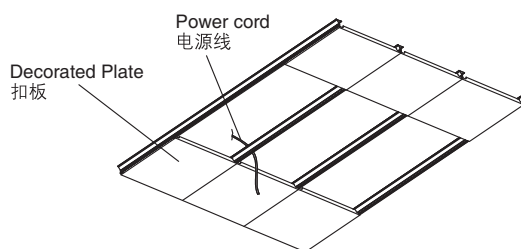

2. Fix the power cord to the bathroom heater
 - (1) Remove the screw on the wiring cover plate.
 - (2) Open the wiring cover plate.
 - (3) Lift the terminal protection cover.
 - (4) Loosen the screw fixing the power cord clip.
 - (5) Loosen the screw on the wiring terminal, insert the power cord (not supplied) connected to the indoor fixed line into the wiring terminal, tighten the wiring terminal screw.
 - (6) Fix the power cord with power cord clips. (The power cord clip must pin the insulation sheath of power cord.)
 - (7) Use the screw removed in step (3) to fix the wiring cover plate again.

2. 將電源線固定到主機上
 - (1) 取下接線蓋板上的螺絲。
 - (2) 打開接線蓋板。
 - (3) 掀起端子保護蓋。
 - (4) 將固定電源線線夾的螺絲松脫。
 - (5) 松開接線柱上的螺絲，將接入室內固定線路的電源線(用戶自購)插入接線柱，擰緊接線柱螺絲。
 - (6) 用電源線線夾將電源固定。(電源線線夾必須壓住電源絕緣護套)
 - (7) 用步驟(3)拆下的螺絲，將接線蓋板重新固定。

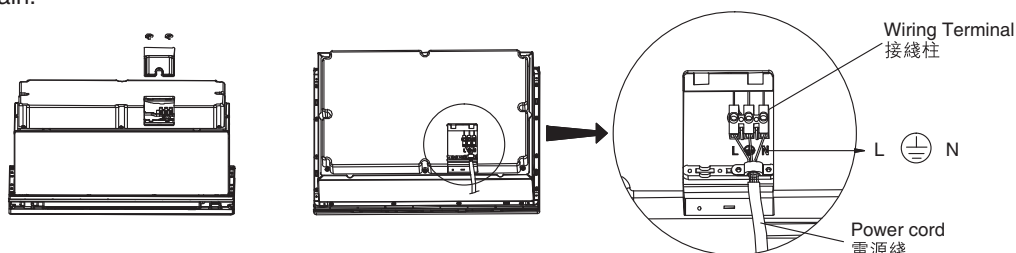


3. Installing the Main Body Method 1 integrated ceiling.
integrated ceiling should be 300*300, 300*450, 300*600


3. 機體的安裝 方法一 浴室吊頂為集成吊頂
集成吊頂規格300*300、300*450、300*600:

- (1) Disassembly the decorated plate around the position of the product installation.


- (1) 在預裝位置，拆下鄰近的幾塊扣板，大小應滿足產品安裝操作的空間要求。(拆卸數量可參照下圖)

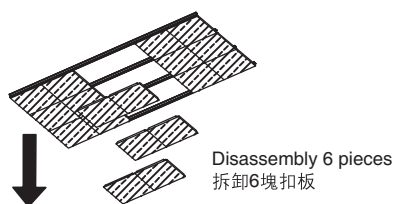

300mm*300mm integrated ceiling
300mm*300mm集成吊頂

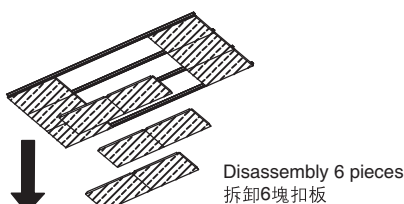


300mm*450mm integrated ceiling
300mm*450mm集成吊頂

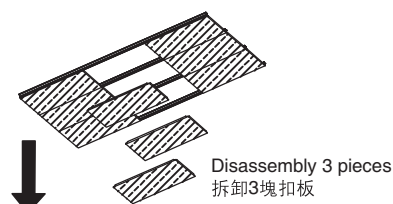


300mm*600mm integrated ceiling
300mm*600mm集成吊頂

- (2) Use the install template as the diagram to insert it into the ceiling to mark the position of the drill.


- (2) 拿出安裝模板在安裝模板折線痕處，將紙板折至90度。緊靠兩邊的扣板，將安裝模板上推至緊貼水泥板標注吊杆固定的位置。

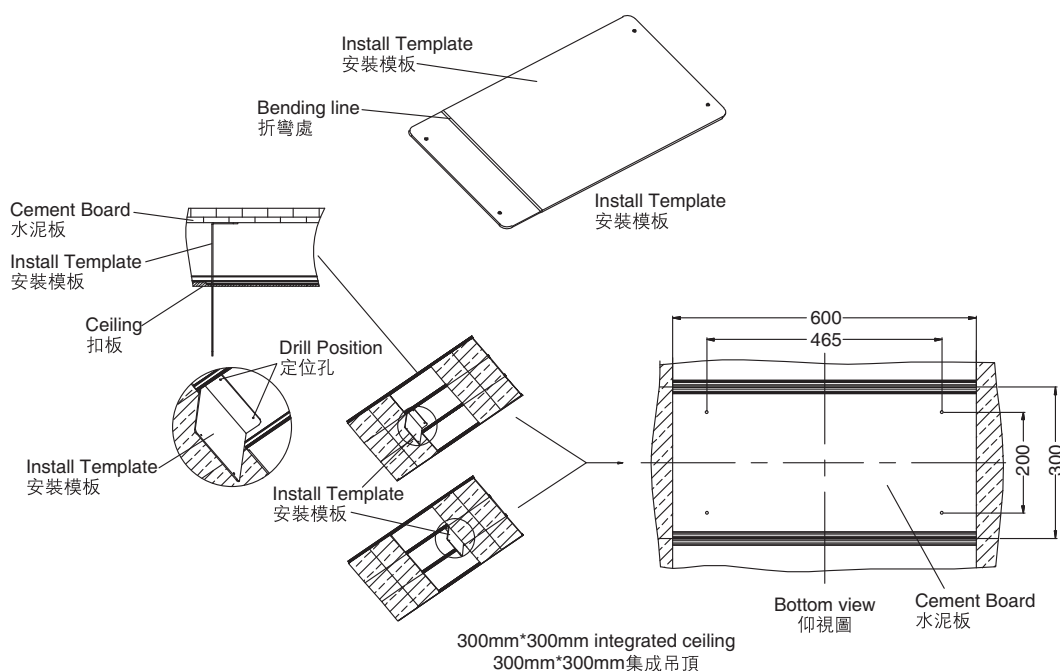

- (3) Fix the suspender on the right position of the cement board, use the install template to adjust the M6 nut on the suspender.

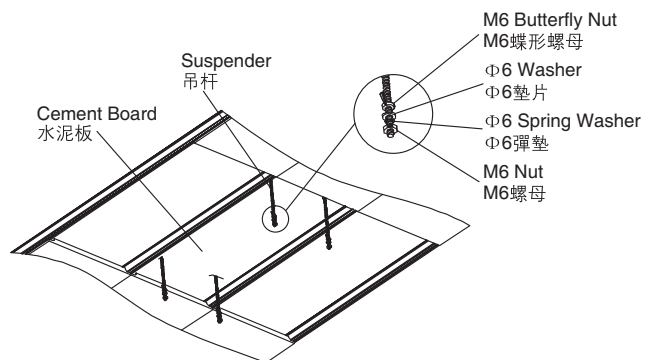


- (3) 按照標注的吊杆固定的位置，將吊杆固定于水泥板上。將安裝模板上的基準綫與吊頂面對齊，調整吊杆上M6螺母的位置。

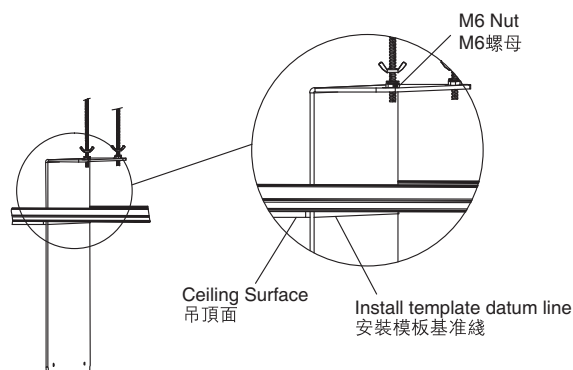


- (4) Fix the suspension bracket on the suspender by 8 BTP4*8 screw.

- (4) 用8顆BTP4*8自攻螺絲，將主機安裝吊件固定于機體。

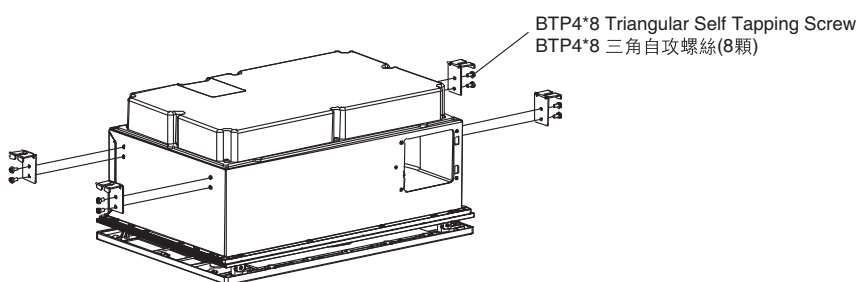

- (5) Fix the product on the M6 suspender by the suspension bracket.

- (5) 將主機安裝吊件挂入固定柱組件的M6螺杆中。

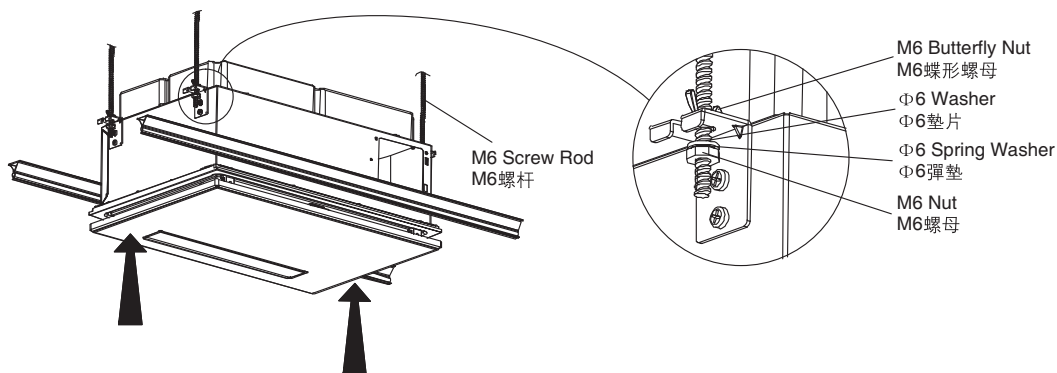


(6) Install the air exhaust pipe

- 1) Fix the air exhaust pipe on the ventilation outlet assy. by the clamp. The pipeline connected to outside of the room must be slanted to prevent rain or condensed water from flowing backwards.


(6) 管道連接

- 1) 將排風管裝在換氣出風口組件上，然后用卡箍扎緊，通往屋外的排風管必須保持傾斜，防止雨水或露水倒流。

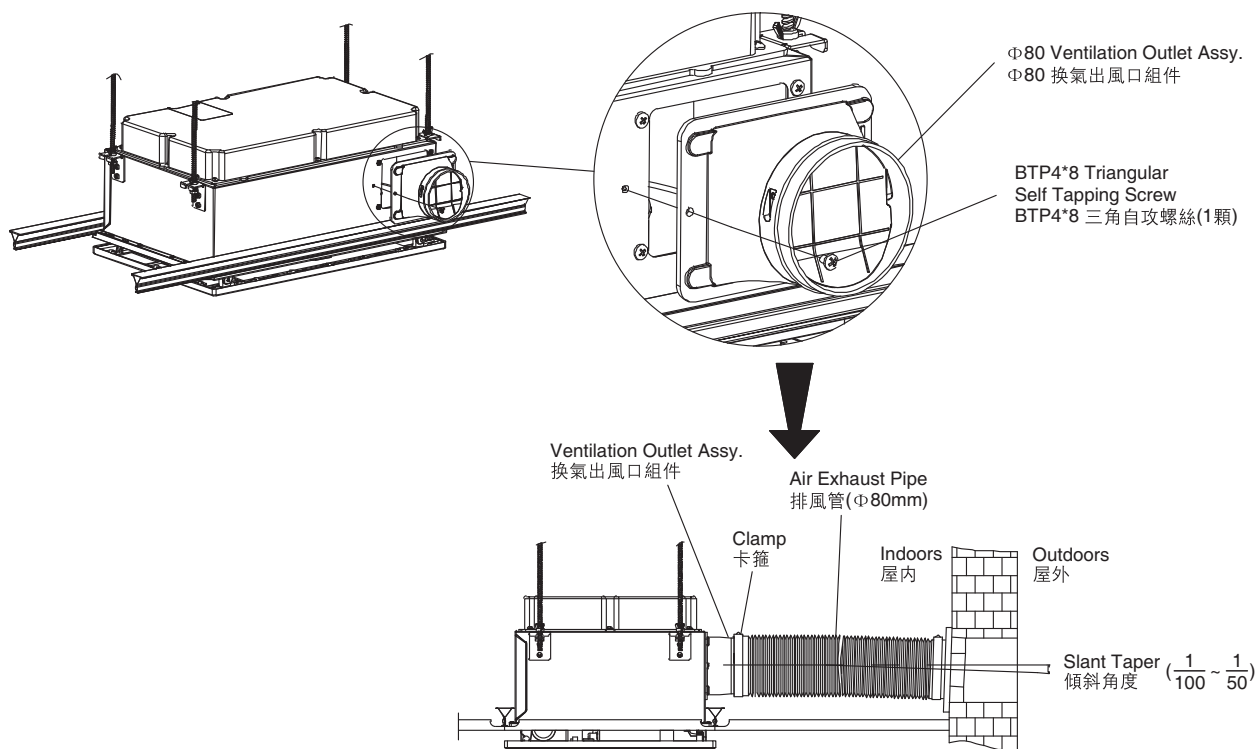


- (7) Install the decorated plate and adjust the nut on the suspender to keep them on the same horizontal surface. Lock the nut after the adjustment.

- (7) 裝回鄰邊拆下的扣板，并調整吊杆上的M6螺母及M6碟形螺母位置，使機體底座與扣板平齊，然后鎖緊蝶形螺母。

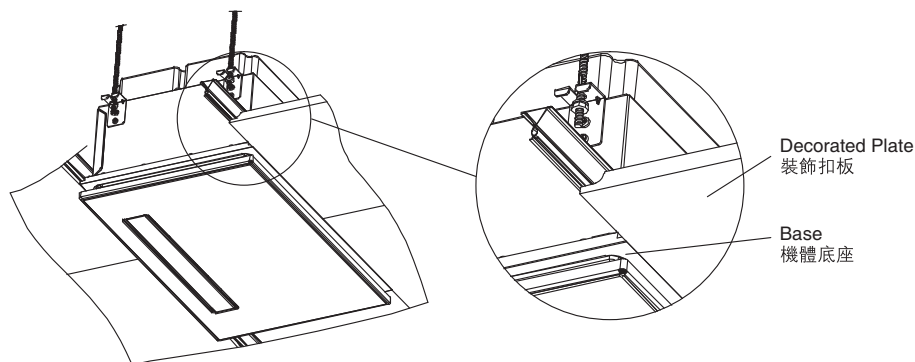

- (8) Install the remaining decorated plate (finish the product installation)

- (8) 裝回扣板(安裝完畢)

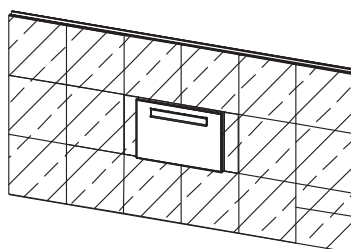


300mm*300mm integrated ceiling
300mm*300mm集成吊頂


4. Installing the Main Body Method 2 Ceiling mounting has not been installed.

(1) Positioning and installation of the suspenders


- 1) Paste the install template attached along with the product on the position where the main body is intended to install.

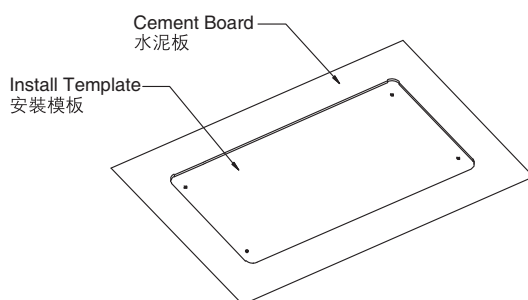


- 2) Fix the suspender to the cement board according to the fixing position of the suspender as shown by the install template.

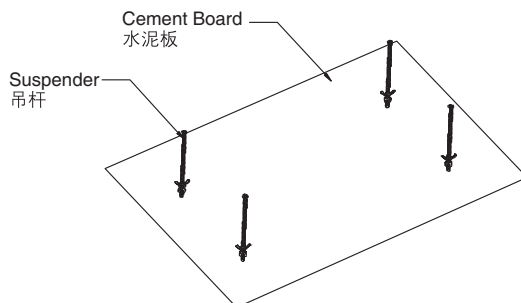


- (2) Fix the ventilation outlet assy. to the main body using the BTP4*8 self-tapping screw.

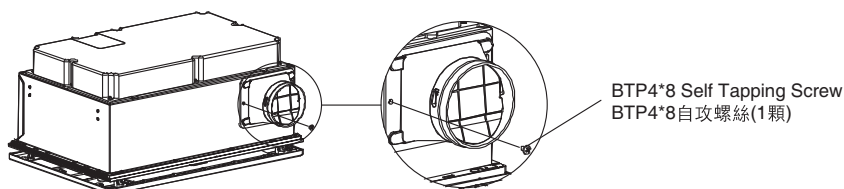

- (3) Fix the suspension bracket to the main body using the 8 BTP4*8 self-tapping screws.

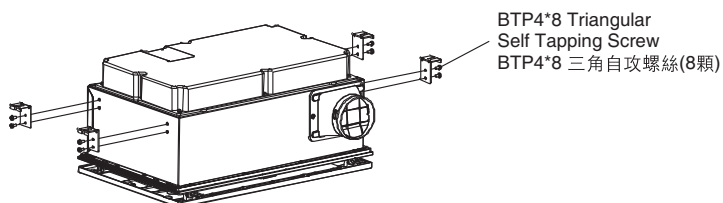

- (4) Fix the product on the M6 suspender by the suspension bracket. Lock the nut after the installation.

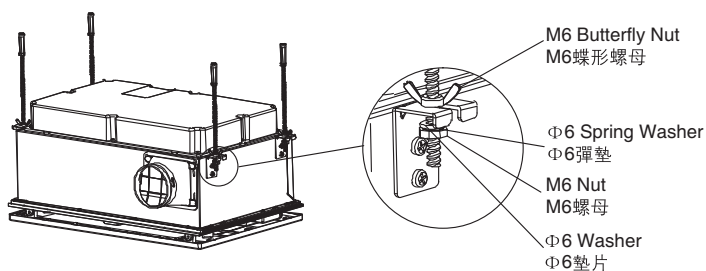

4. 機體的安裝 方法二 未裝天花板吊頂

(1) 吊杆的定位和安裝。

- 1) 將產品附帶的安裝模板，在機體預定安裝的位置標注吊杆固定的位置。

- 2) 按照標注的吊杆固定的位置，將吊杆固定于水泥板上。


- (2) 用1顆BTP4*8自攻螺絲將換氣出風口固定于機體。

- (3) 用8顆BTP4*8自攻螺絲，將主機安裝吊件固定于機體。

- (4) 將機體固定于吊杆，將螺絲擰緊鎖死。

(5) Install the air exhaust pipe

- 1) Fix the air exhaust pipe on the ventilation outlet assy. by the clamp. The pipeline connected to outside of the room must be slanted to prevent rain or condensed water from flowing backwards.

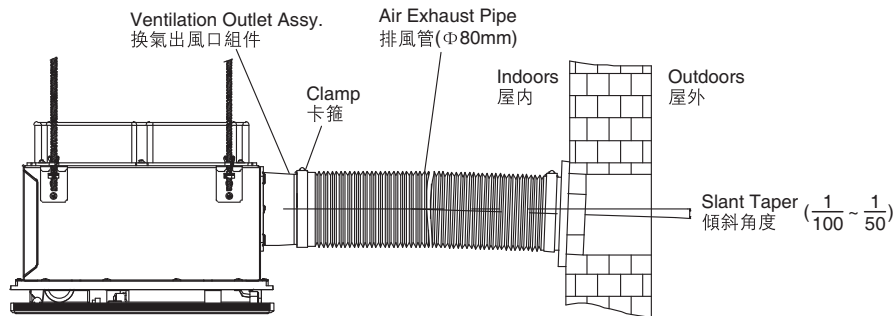

NOTE: When the ceiling is unable to dismantle, please set a square inspection hole of at least 450mm.

(5) 管道連接

- 1) 將排風管裝在換氣出風口組件上，然后用卡箍扎緊，通往屋外的排風管必須保持傾斜，防止雨水或露水倒流；

注意：吊裝且天花板無法拆下時，請設置一個邊長450mm以上的方形檢修口。

INSTALLATION OF REMOTE CONTROLLER HOLDER

安裝遙控器支架

NOTE: If the wall for installation is made of special material (such as wood board, density board and etc.), suitable fixing methods shall be adopted.

注意：如果安裝牆面是特定材料（比如木板、密制板等）時，使用合適的固定方法。

NOTE: The place to install the remote controller shall not be easily splashed by water.

注意：遙控器的安裝位置應該是不易被水淋到的地方。

Choose a mounting location for the remote holder.

選擇一個合適地方安裝遙控器支架。

Drilling two holes with depth larger than 45mm on the wall by drill with a diameter of 6mm in accordance with the position of screw holes on the remote control holder. Installing the expansion tube into the holes.

根據遙控器支架螺釘孔的位置，用直徑6mm的鑽頭在牆上鑽兩個深度 大于45mm的孔。在孔中裝入膨脹管。

Placing the installation holder on the fixing hole.

將安裝支架在放置固定孔上。

Fixing the holder with screws and install it.


用螺釘固定安裝支架。

Installing the screw covers on the screws.

把螺釘蓋裝在螺釘上。

Placing the remote controller on the holder.

把遙控器放在支架上。

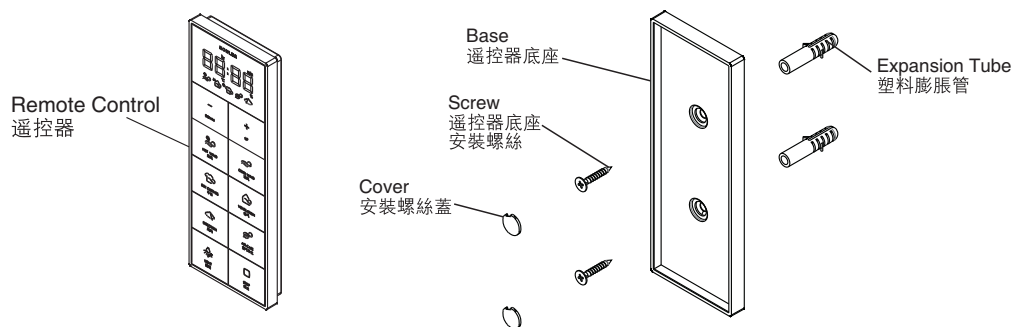


INSTALLATION OF COIN BATTERY

遙控器鈕扣電池的安裝

Please follow the installation diagram.

按圖示指導進行安裝。

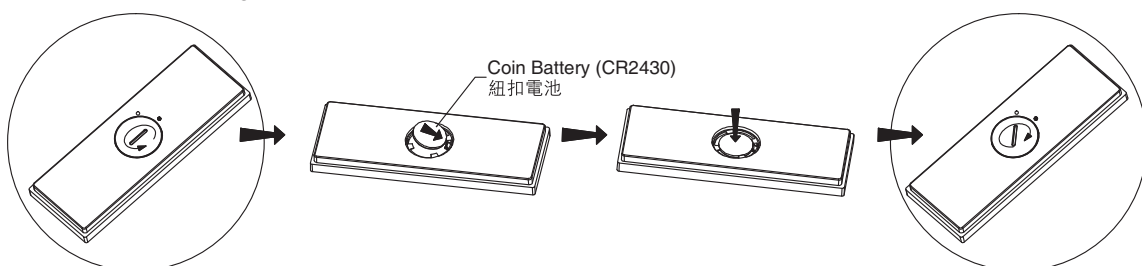

USER'S GUIDE


使用說明

A. Pairing

- Connect to the power source, press the "HEATER" and "FAN" together within 3 minutes to make the pairing. "Beep, Beep, Beep" will be heard and the LED lamp will be turned on if the pairing successfully.


A. 遙控器配對

通電3分鐘內，請同時按壓“熱風”和“涼風”，浴室寶發出“嗶嗶嗶”三聲，并且照明LED燈亮起，遙控器完成配對。

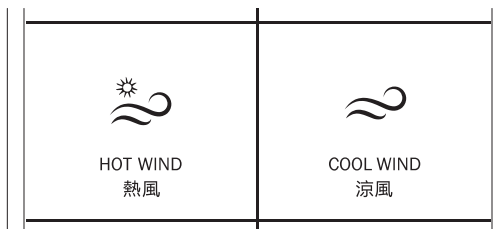

B. Button Function

B. 按鍵功能

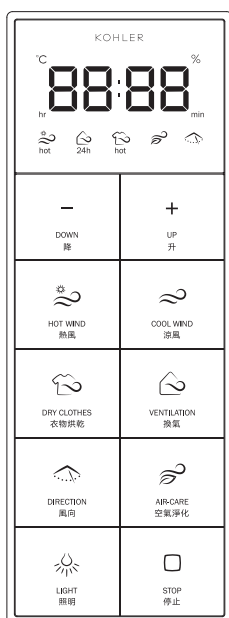


- DOWN** : Timer down
減號：減少設定時間。
- UP** : Timer up
加號：增加設定時間。
- HEATER** : Turn on the heater mode
熱風：開啓“熱風”模式。
- FAN** : Turn on the fan mode
涼風：開啓“涼風”模式。
- DRY** : Turn on the hot /cool dry clothes mode
干燥：開啓“干燥”模式，切换“熱干燥”或者“涼干燥”，默認爲上一次的動作。
- VENTILATION** : Turn on the ventilation/long time vent mode
換氣：開啓“換氣”模式，切换“換氣”或者“24小時換氣”，默認爲上一次的動作。
- AIR FLOW** : Set the air flow swing or fixed
風向：設定擺風或者固定風向，默認爲自動擺風。
- AIR-CARE** : Turn on the air-care mode
空氣淨化：開啓空氣淨化模式。
- LIGHT** : Lighting on and off/changed the light color
照明：開啓燈光/切换燈光顏色。
- STOP** : Stop certain function
停止：停止任意功能(除照明)。

C. Display information

C. 顯示說明

	Hour	小時
	Minute	分鐘
	Celsius	攝氏度
	Humidity	濕度
	HEATER	熱風
	FAN	涼風
	HOT DRY	熱干燥
	COOL DRY	涼干燥
	24H VENTILATION	24小時換氣
	VENTILATION	換氣
	AIR-CARE	空氣淨化
	AIR FLOW FIXED	固定風向
	SWING MODE	自動擺風

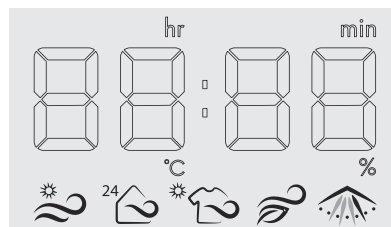

D. Activated mode

- During the standby mode, press any button to the **activated mode**, display the room temperature and humidity. Display will be turned off if no any further action within 10 seconds.
- During the working mode, display the room temperature and humidity. Display will be turned off after the countdown finish.
- Press the function button, the "beep" will be heard.

E. Time setting

- Setting time could be changed during the "HEATER", "FAN", "DRY", "VENTILATION" and "AIR-CARE" mode.
- Setting time will be changed back to the default after each use.
- "HEATER": the default time is 6 hours, minimum time is 10 minutes, and maximum time is 6 hours.
- "FAN": the default time is 6 hours, minimum time is 10 minutes, and maximum time is 6 hours.
- "DRY": the default time is 6 hours, minimum time is 10 minutes, and maximum time is 6 hours.
- "VENTILATION": the default time is 6 hours, minimum time is 10 minutes, and maximum time is 6 hours.
- "AIR-CARE": the default time is 2 hours, minimum time is 10 minutes, and maximum time is 2 hours.
- "24H VENTILATION": the default time is 24 hours, the setting time cannot be changed.

D. 激活模式

- 待機狀態下，用戶按壓任意鍵會進入激活模式，屏幕被激活，顯示當前室內溫度和濕度，10秒內沒有進一步操作，則屏幕熄滅。
- 工作狀態下，屏幕保持常亮，顯示室內溫度和濕度，直至倒計時結束，機器關閉，遙控器屏幕熄滅。
- 按壓遙控器任意鍵，機器會發出“嗶”的提示音。

E. 時間設置

- 在“熱風”，“涼風”，“干燥”，“換氣”，“空氣淨化”狀態下，可以按壓“+”和“-”來調節設定時間。
- 每次使用都會恢復到默認時間。
- “熱風”：默認時間是6小時，最小時間是10分鐘，最大時間是6小時。
- “涼風”：默認時間是6小時，最小時間是10分鐘，最大時間是6小時。
- “熱/涼干燥”：默認時間是6小時，最小時間是10分鐘，最大時間是6小時。
- “換氣”：默認時間是6小時，最小時間是10分鐘，最大時間是6小時。
- “空氣淨化”：默認時間是2小時，最小時間是10分鐘，最大時間是2小時。
- “24小時換氣”：默認時間是24小時，時間不可調。

TROUBLESHOOTING


Problem	Diagnosis	Solution
Bathroom Heater does not work.	A. A power failure occurred.	A. Wait until the power is restored.
	B. The power cord is disconnected.	B. Connect the power cord into the junction box of bathroom heater.
	C. Circuit breaker is in the "Off" position.	C. Turn on the power at the breaker.
The remote controller does not display.	A. The battery has been used up.	A. Please replace the battery.
	B. The polarity of battery was installed inversely.	B. Please install the battery correctly.
	C. No wake-up.	C. Press any key to wake-up.
The remote controller does not work.	A. No pairing with the bathroom heater.	A. Make the pairing.
	B. The remote controller is used in an inappropriate position or angle.	B. Change the using position or angle to make the controller towards the bathroom heater.
	C. Low battery.	C. Change the battery.
Red LED is on.	A. Temperature sensor error.	Call the Customer Service Centre using the information provided on the Compliance Certification.
	B. Humidity sensor error.	
	C. Heating system error.	
Red LED is flash.	A. Dust filter need be clean.	A. Clean the filter or press the "+" for 2 seconds in the Activated mode(Page 13).

簡單故障排除

問題	判斷分析	解決方法
浴室寶不工作。	A. 停電。	A. 等到電力恢復。
	B. 未接上電源綫。	B. 將電源綫正確連接到浴室寶。
	C. 電源斷路器是關閉狀態。	C. 打開電源斷路器。
遙控器無顯示。	A. 電池電量耗盡。	A. 更換新電池。
	B. 電池極性裝反。	B. 重新安裝。
	C. 沒有喚醒。	C. 按任意鍵喚醒。
遙控器無法遙控浴室寶。	A. 遙控器沒有配對。	A. 請配對遙控器。
	B. 使用遙控器的位置和角度不當。	B. 改變使用位置和角度使遙控器對着浴室寶。
	C. 電池電量不足。	C. 更換新電池。
紅色燈亮起。	A. 溫度傳感器故障。	請使用合格證上的信息聯系客服中心。
	B. 濕度傳感器故障。	
	C. 加熱系統故障。	
紅燈閃爍。	A. 濾網需要清潔。	A. 清潔濾網，或者在激活模式下（P13頁）長按“+”號鍵2秒。


CARE & CLEAN (PROFESSIONAL ONLY) 清潔保養(請由專業人士操作)

1. Turn off power supply before maintenance or cleaning. If Casing or Air Louver are covered with dust, do not splash water onto it. Use only damp sponge or cloth to wipe dirt off.
 2. Do not use eradicant, abrasive powder or oil, acid or alkali liquid detergent to clean casing or air louver.
 3. Never try to put a small screw-driver or any other object into the holes of air Louver from outside. This might cause damage to the interior parts, and electric shock may occur.
 4. Shut off the all-pole switch.
 5. Wipe the front panel and the panel base with a soft cloth.
 6. Remove the filter from the louver.
1. 請先關閉電源或拔下插頭，然後再用柔軟的濕布擦拭清潔表面和出風口柵片，切記絕對不可用水直接衝洗。
 2. 禁止使用去污粉、研磨粉及油類、酸性類、鹼性類清潔劑清潔表面和出風口柵片。
 3. 請勿將螺絲刀或任何細長尖銳物品伸出入風口柵片內，因為這樣可能導致內部零件損壞及觸電等意外事件。
 4. 斷開“電源全極開關”。
 5. 用軟布擦拭前面板及面板底座。
 6. 將過濾網從面板組合中拆除。

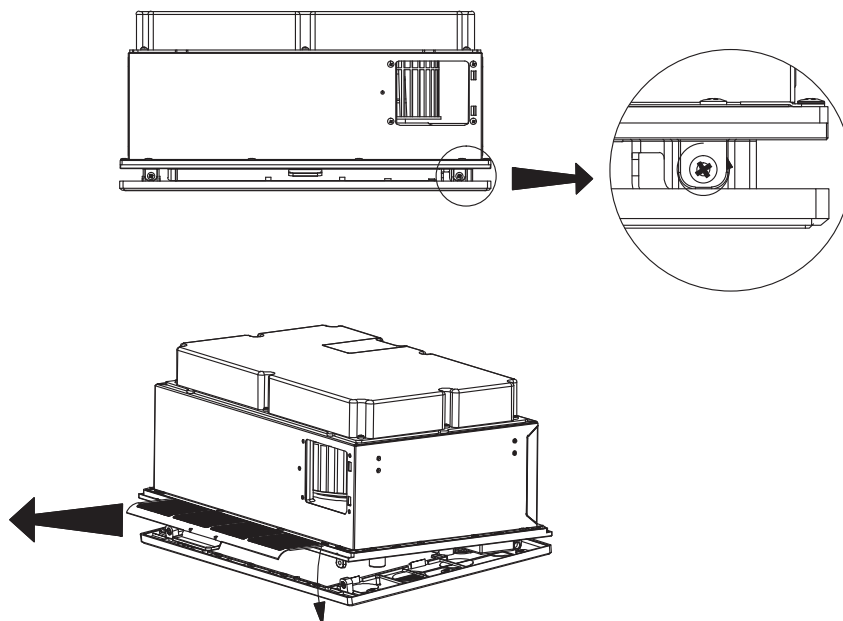


7. Use a vacuum cleaner to remove dust and dirt from the filter.

7. 用吸塵器清除過濾網上的灰塵和污垢。

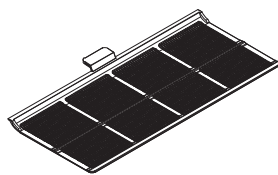

8. Reinstall the filter assembly.

8. 重新安裝過濾網組合。

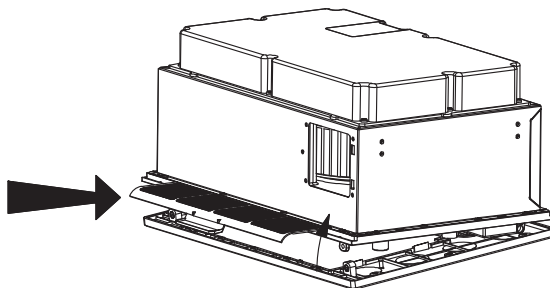

9. Turn on the all-pole switch.

9. 開啓“電源全極開關”。

10. Press the "+" for 2 seconds in the Activated mode(Page 13) to reset the filter cleaning indication.

10. 取消機體接受過濾網清潔提示。在激活模式下 (P13頁) 長按“+”號鍵2秒。機體發出“嗶嗶”聲，紅燈閃爍停止。

IMPORTANT CONSUMER INFORMATION

用戶須知

1. When AC power unit is connected to 220V AC power supply, corresponding protective measures should be taken.
2. Please confirm no water penetration at the connection area of AC wire, and the connection area is not easy to be affected by damp.
3. The head AC power supply must be protected with appropriate fuse.
4. Please confirm the AC power supply should be shut off before maintaining the products with AC power related.
5. All electrical connection must be compliance with related regulation and codes.
6. All installation staff should be well familiar with installation instruction.
7. Non-professionals must not take apart panel assembly or base assembly at any time.
8. Precautions must be taken to avoid the back-flow of gases into the room from the open flue of gas or other fuel-burning appliances.



Products are not suitable for covering with thermally insulating material.

Notice: Troubleshooting needs to be done by professional of KOHLER CHINA. Users are not suggested to do this without help. Please remember that the checking and repairs done by users themselves could easily cause damage to the machine or cause physical harm to the person.

1. 將產品接入220V電源時，應採取相應的防衛措施。
2. 應確保交流導線連接處無水滲入以及不易受潮。
3. 交流電的總電源必須有合適的熔斷絲加以保護。
4. 維修交流供電型的產品時，必須首先斷開交流電源。
5. 所有電路連接必須符合相關規範和條例要求。
6. 所有參與安裝人員都必須熟知安裝說明。
7. 非專業人士請勿打開面板或底座組件。
8. 請注意避免源于任何開放烟道或者明燃設備的回流氣體。



產品不可被絕熱材料覆蓋。

注意：本產品需由本公司專業人員維修，用戶在沒有任何技術協助下修理機器，易導致零件損壞或人身傷害。