


Single Handle Tall Lavatory Faucet_Lever

29398T-4 单把碗盆龙头_平杆型把手 6P

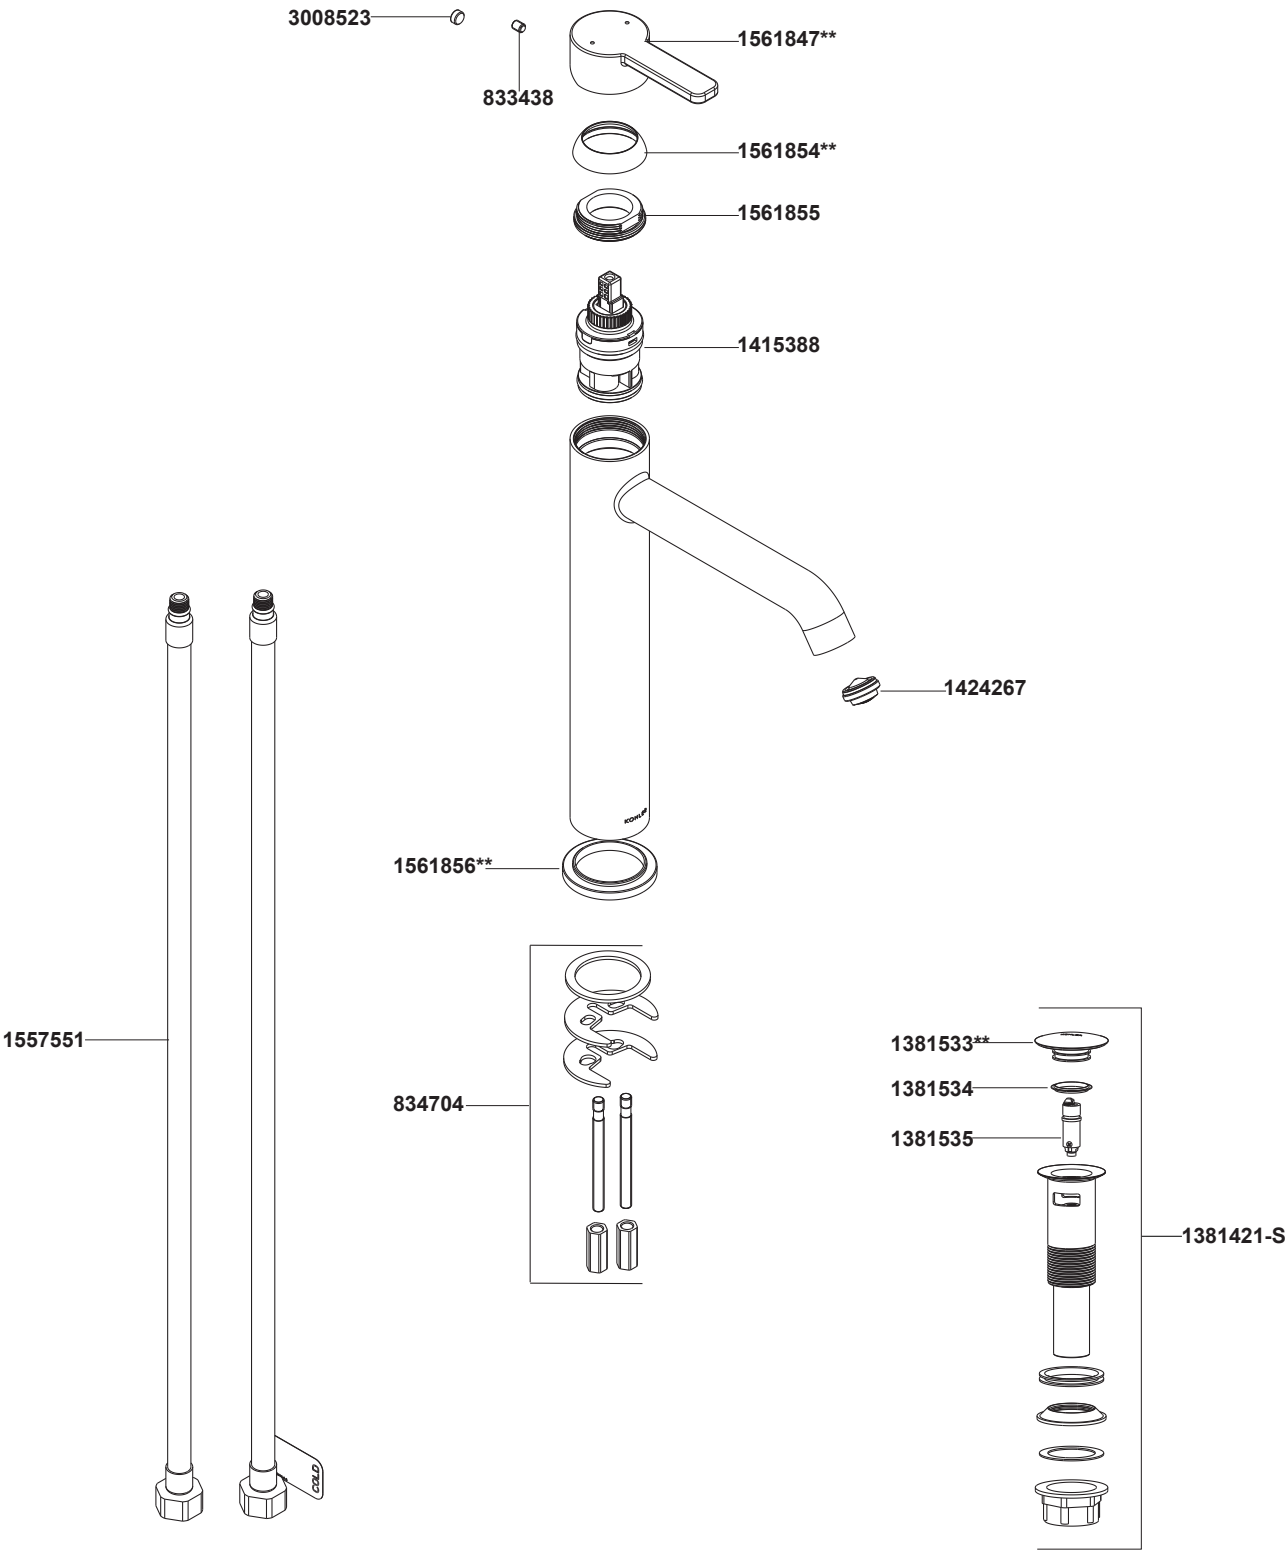

**订购时请说明颜色编号
**Color code must be specified when ordering

Single Handle Lavatory Faucet_Lever

28825T-4 单把脸盆龙头_平杆型把手(高出水口, 提拉落水) 6P
28839T-4 单把脸盆龙头_平杆型把手(高出水口, 弹跳落水) 6P
29398T-4 单把碗盆龙头_平杆型把手 6P

安装之前

所有的资料是按最新出版的产品资料编写而成。科勒公司保留任何时候不经通知即可改变产品特性、包装或产品可供类型的权利。

说明书包括重要的安装、保养及清洁方面的内容, 请把这些资料交给用户阅读。

- 注意事项:**
1. 一定要先彻底冲洗供水管以清除管道中的杂质。
 2. 尽可能在安装脸盆之前安装水龙头。
 3. 检查供水管有无损坏和漏水。如需要, 进行替换和维修。
 4. 遵守当地管路安装条例。
 5. 切断供水管路。
 6. 水嘴加施的水效标识表明本产品的水效等级等性能符合GB 25501-2019《水嘴水效限定值及水效等级》的要求, 是产品符合性的一种标识。

BEFORE YOU BEGIN



All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please leave these instructions for the consumer. They contain important information.



- NOTES:**
1. Flush the water supply pipes thoroughly to remove debris.
 2. If possible, install this faucet before installing the lavatory.
 3. Inspect the supply tubing for damage and leakage. Replace and maintain as necessary.
 4. Observe local plumbing codes.
 5. Shut off the water supplies to the fitting.
 6. The water efficiency label applied to the faucet indicates that the water efficiency grade and other performance of the product meet the requirements of GB 25501-2019 "Minimum Allowable Values of Water Efficiency and Water Efficiency Grades for Faucets" which is a marking of product conformity.

安装尺寸

ROUGH-IN DIMENSIONS

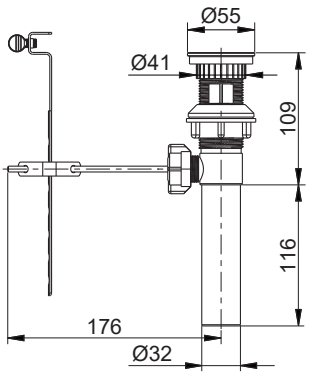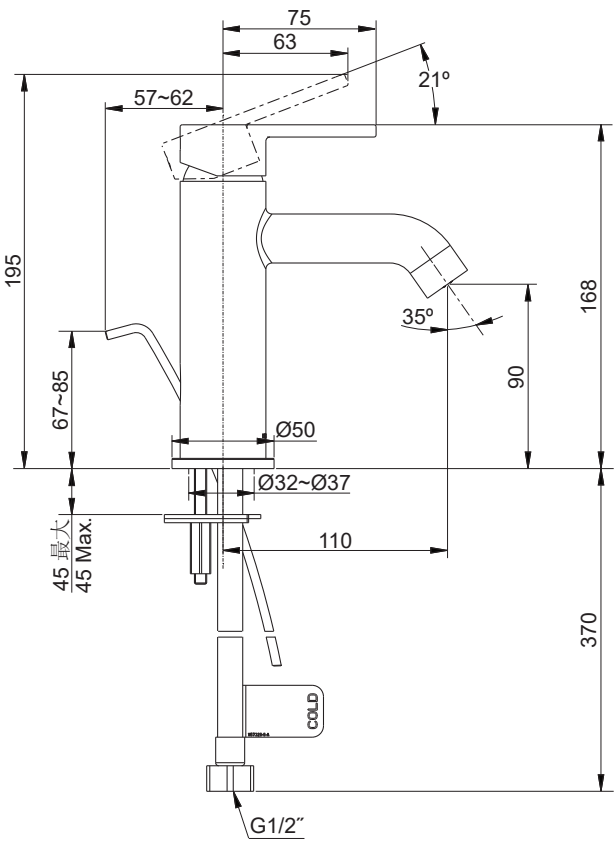

28825T-4

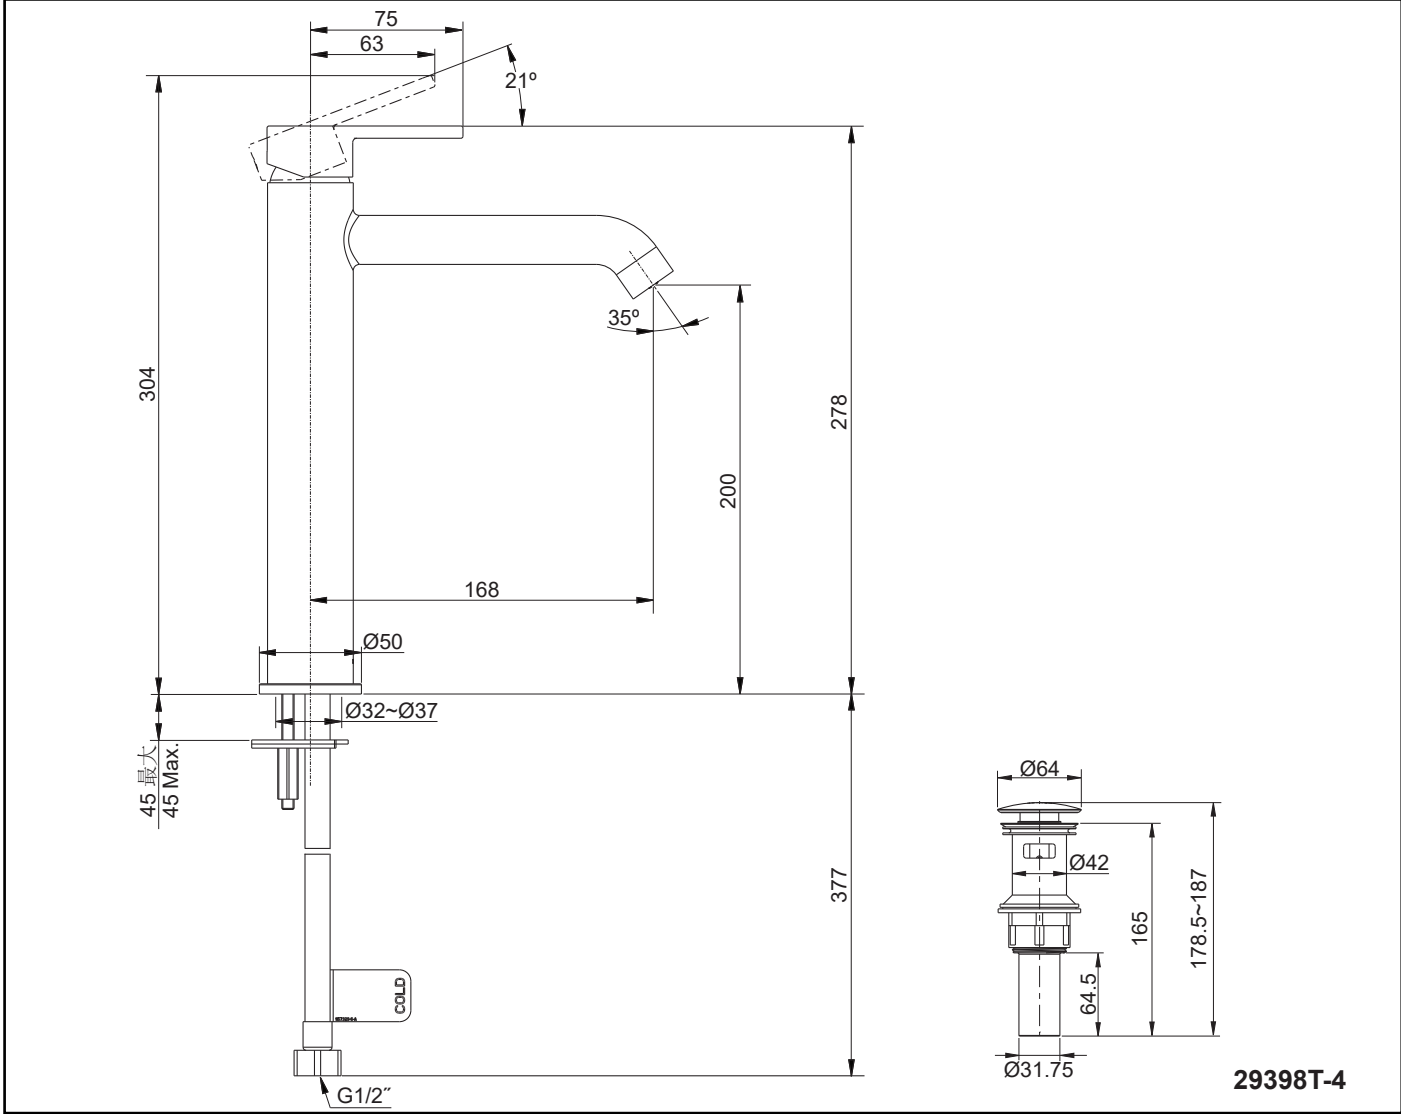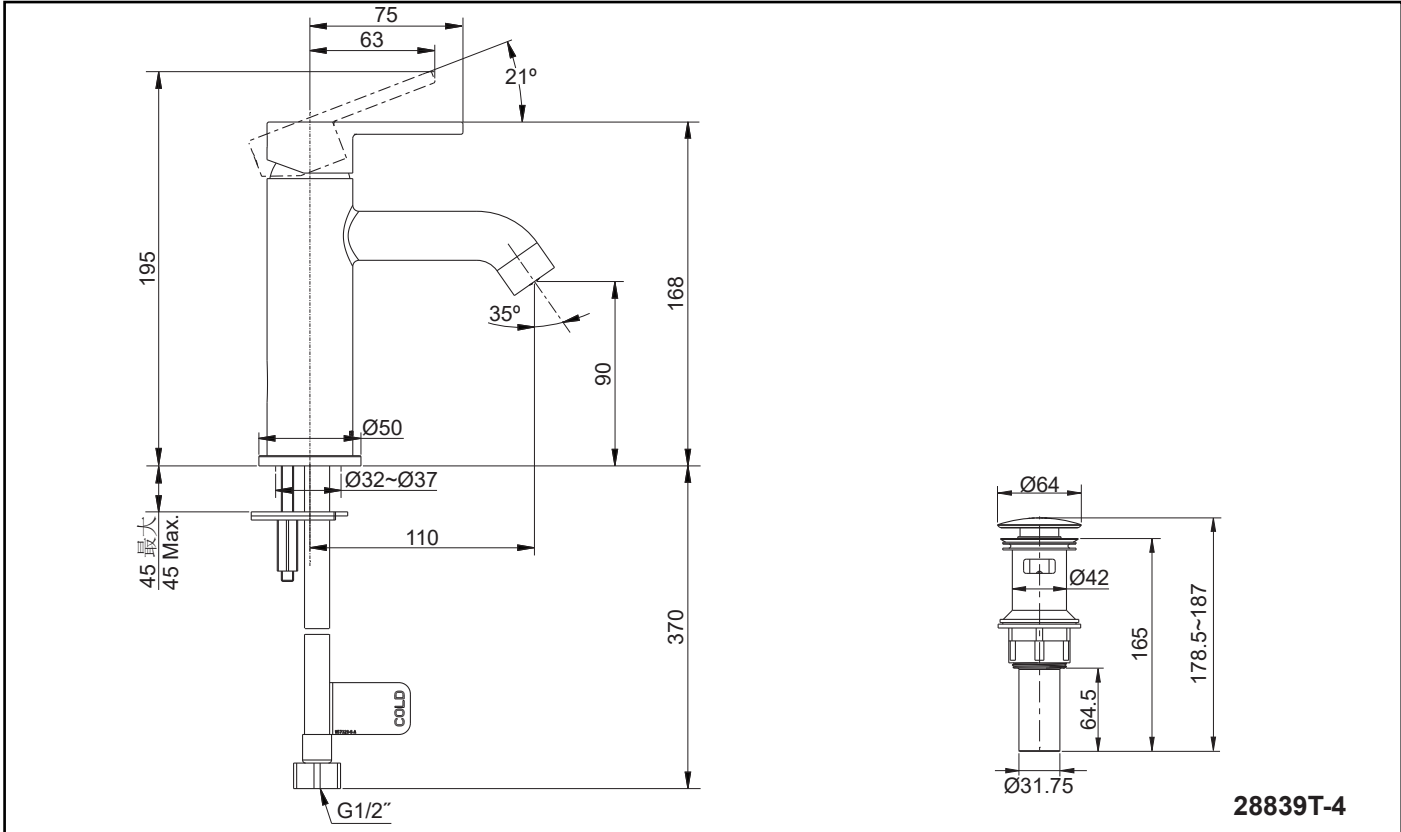


KOHLER®
SERVICE PARTS
零件图

格灵
ATOM


Single Handle Lavatory Faucet_Lever (L, Click)

28839T-4 单把脸盆龙头_平杆型把手(高出水口, 弹跳落水) 6P

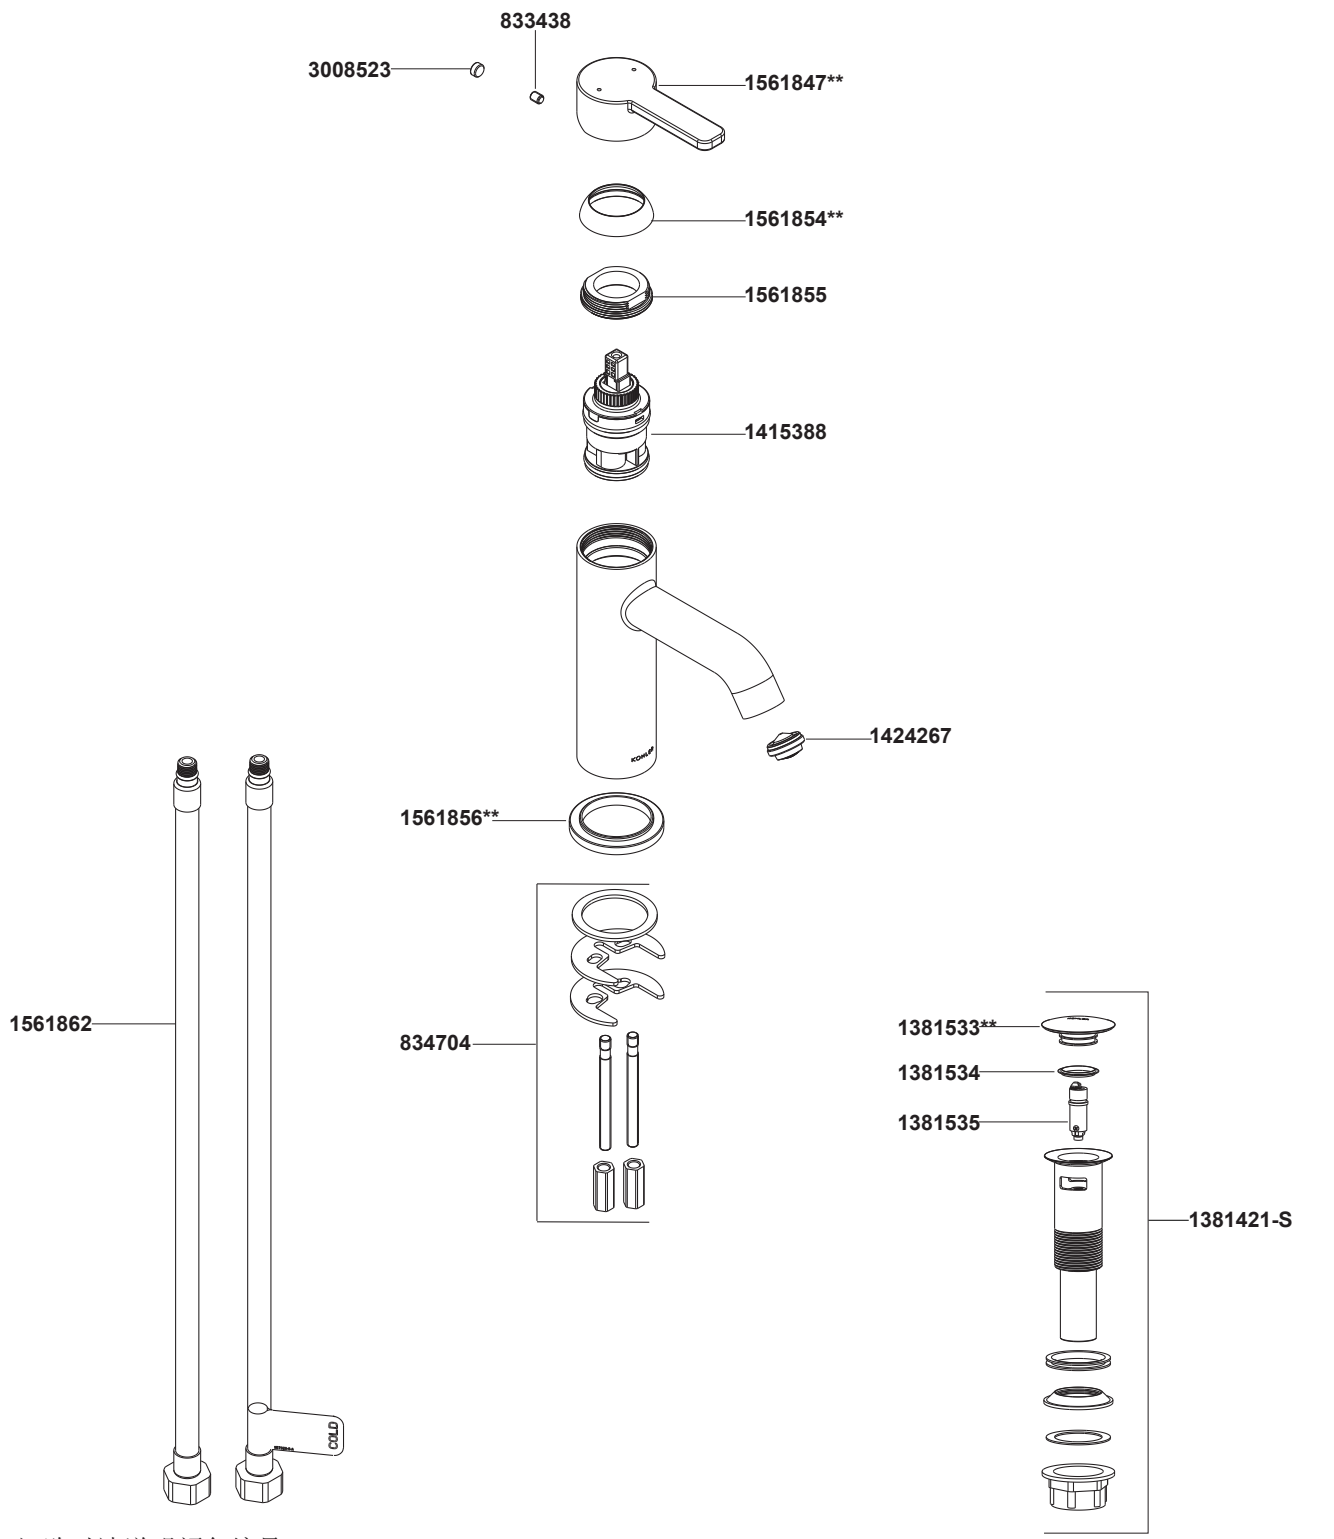

**订购时请说明颜色编号
**Color code must be specified when ordering

28825T-4 单把脸盆龙头_平杆型把手(高出水口，提拉落水) 6P

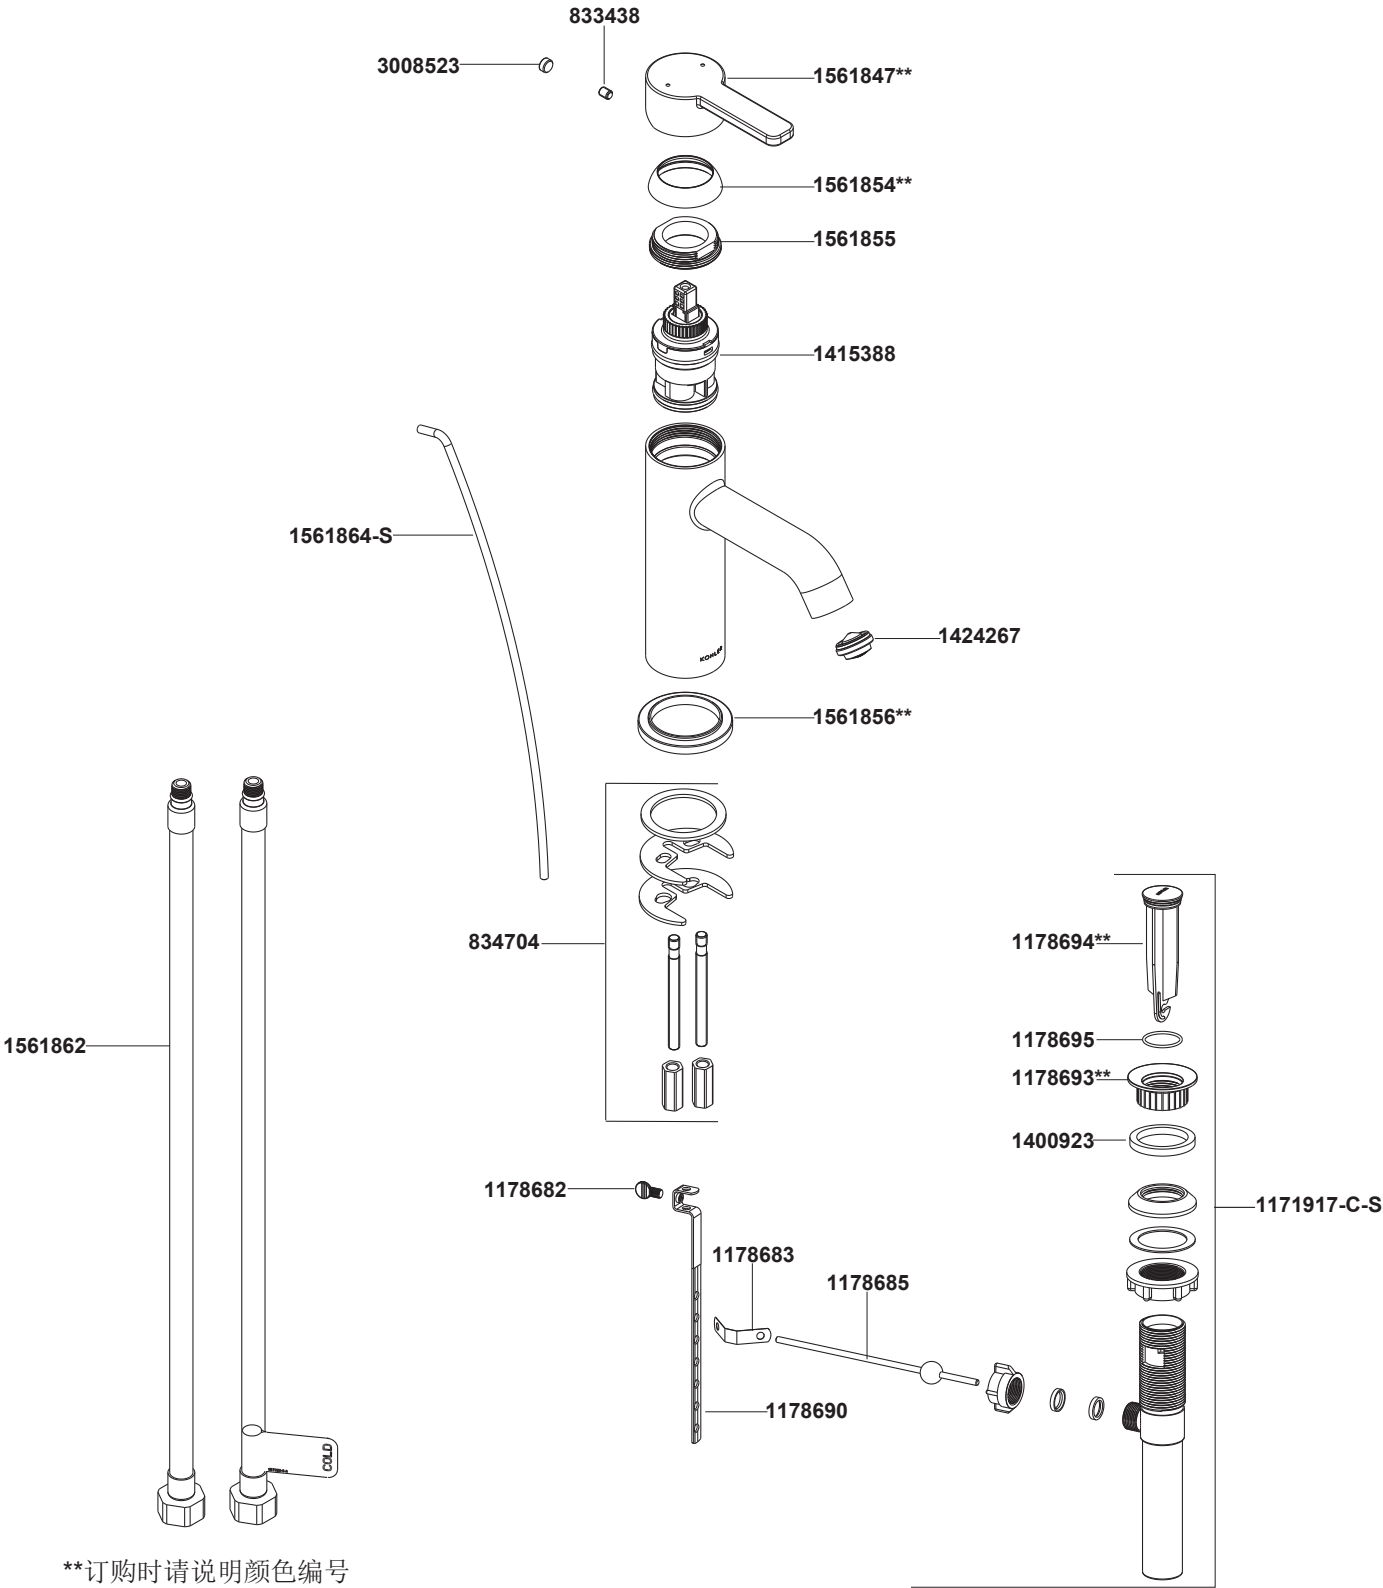

**订购时请说明颜色编号
**Color code must be specified when ordering


安装步骤

如何安装出水口

首先将固定螺栓(1)安装到水龙头(2)底部处，将提拉杆(3，仅对于28825T-4)插入到水龙头后侧孔中。将装饰盖(4)穿过供水软管(5)、固定螺栓和提拉杆嵌入水龙头底部，接着将垫圈(6)放入到装饰盖底部槽中。

将水龙头组件插入脸盆安装孔中，使装饰盖底部接触台面。调整水龙头，从脸盆下方把垫片(7，橡胶垫片放在上面)套入固定螺栓，并用扳手(8，用户自备)旋上螺母(9)以固定水龙头。

把软管接到水源，当您面对水龙头时左边为热水，右边为冷水，冷水管有“COLD”签。

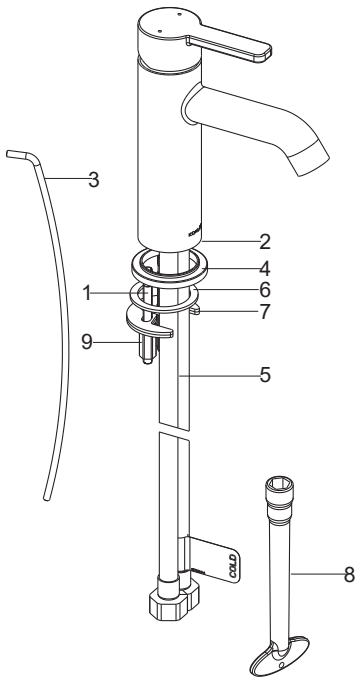

如何安装排水器
(用于28825T-4)

将止水塞(10)、法兰盘(12)及垫片(16)从排水本体(13)上取下。把排水本体组件从脸盆下方插到脸盆中，排水杆口(14)朝后方。把法兰盘带垫片旋入到排水本体中，从下方用手拧紧锁紧螺母(15)。


把止水塞(10)放入排水本体中，调整止水塞末端的洞口(11)使其靠近并对正排水杆的洞口。

将固定螺母(20)取下，把塑料垫圈(18)及固定螺母装在球杆(19)上，再把球杆组件插入排水杆的洞口中并穿过止水塞，拧紧固定螺母。

确保球杆(19)指向脸盆后方，用扳手拧紧排水本体上的锁紧螺母(15)。

注意：如果需要，可直接在排水器法兰(12)底面沿周围涂一圈密封油灰或其他密封剂，而不使用泡沫垫片(16)。

在锁紧螺母拧紧后，不可调整排水本体的位置，否则会破坏油灰密封或密封剂密封。

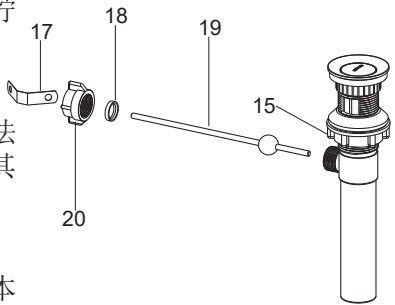

INSTALLATION

How to Install the Spout

Install the mounting studs(1) onto the faucet body(2). Insert the lift rod(3, only for 28825T-4) into the hole at the rear of the body. Slide the escutcheon(4) over the hoses(5), mounting studs and lift rod into the faucet bottom. Insert the washer(6) into the bottom groove of the escutcheon.

Insert faucet assembly into the lavatory hole until the escutcheon is against the deck. Position the faucet. From underside of the lavatory, place the washers(7, Rubber washer is on the top) onto the mounting studs, and tighten the nuts(9) with a wrench(8, not provided) to secure the faucet.

Attach the hoses to water supplies. When facing front of the faucet, the left hose should be connected to hot water, the right hose with “COLD” label should be connected to cold water.

How to Install the Drain
(Only for 28825T-4)

Remove the stopper(10), flange(12) and washer(16) from the drain body(13). Insert the drain body kit into the lavatory from underside, and make sure the drain lever hole(14) facing to the back of the lavatory. Screw the flange with washer into the drain body. Tighten the locknut(15) by hand from the underside of the lavatory.





Place the stopper(10) into the drain body aligning the flat side of the stopper hole(11) with the drain lever hole.

Remove the retaining nut(20). Fit the plastic washer(18) and retaining nut onto the ball lever(19). Insert the ball lever assembly into the drain lever hole and through the stopper hole. Tighten the retaining nut.

Be sure that the ball lever(19) points to the back of the lavatory, tighten the locknut(15) on the drain body by wrench.

NOTE: If needed, apply a ring of plumbers putty or other sealants around the underside of the drain flange(12), instead of using foam washer(16).

Do not reposition the drain after the locknut is tightened, or you may break the putty or sealant seal.

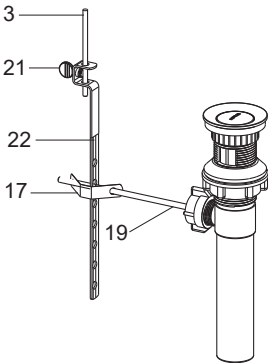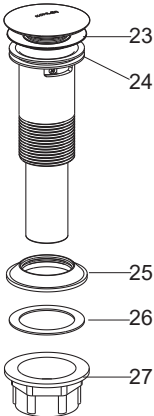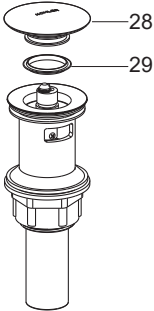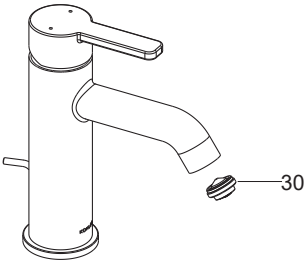把手捻螺丝(21)装到联杆(22)上。用V形夹(17)将联杆连接到球杆(19)上，将提拉杆(3)插入联杆的孔中，将球杆下推至排水组件全开位置，调整提拉杆的位置。拧紧手捻螺丝(21)。  Assemble the thumb screw(21) to the link (22), and link onto the ball lever(19) with “V”-clip(17). Slide the lift rod(3) into the hole in the link. Push the ball lever down into the open position, and adjust the lift rod. Tighten the thumb screw(21).	
如何安装排水器 (用于28839T/29398T-4) 把锁紧螺母(27)、塑料垫片(26)和橡胶垫圈(25)从排水本体上依次取下，把排水本体带橡胶垫片(24)从脸盆上部孔插入，再依次将橡胶垫圈(小面朝上)、塑料垫片和锁紧螺母从排水本体底部装入。将锁紧螺母锁紧。  注意：如果需要，可直接在排水器法兰(23)底面沿周围涂一圈密封油灰或其他密封剂，而不使用橡胶垫片(24)。 在锁紧螺母拧紧后，不可调整排水本体的位置，否则会破坏油灰密封或密封剂密封。 How to Install the Drain (Only for 28839T/29398T-4) Remove the locknut(27), plastic washer (26) and rubber gasket(25) from the drain body. Insert the drain body with rubber washer(24) into the lavatory. Put the rubber gasket (Tapered side up), plastic washer and locknut back to the drain body in turn. Tighten the locknut. NOTE: If needed, apply a ring of plumbers putty or other sealants around the underside of the drain flange(23), instead of using rubber washer(24). Do not reposition the drain after the locknut is tightened, or you may break the putty or sealant seal.	
如何清理排水器 (用于28839T/29398T-4) 逆时针旋下排水器止水塞(28)，取出并清理止水垫(29)。重新装回止水塞、止水垫。  How to Clean the Drain (Only for 28839T/29398T-4) Turn counter-clockwise to unscrew the drain stopper(28). Remove and clean the washer(29). Reinstall the washer and drain stopper.	
安装结果检查 检查并确保所有衔接螺母都已拧紧，确保把手在关闭位置。打开排水器和主要供水源，检查并修理有漏水的接口。 拆下起泡器组件(30)。打开水龙头冷热水，让水流出约一分钟以清除杂质，检查渗漏。冲洗起泡器组件，关闭水龙头，重新装回起泡器组件。  Ensure all connections are tight. Ensure the handle is in the off position. Turn on the drain and main water supplies, and check for leaks. Repair as needed. Remove the aerator kit(30). Turn on the faucet. Run hot and cold water through the faucet for about one minute to remove any debris. Check for leaks. Repair as needed. Remove any debris from the aerator kit. Shut off the faucet. Reinstall the aerator kit.	INSTALLATION CHECKOUT

使用说明 轻轻提起把手，顺时针旋转把手为热水，逆时针旋转把手为冷水。	HANDLE OPERATION Lift the handle gently. Turn clockwise for hot water, turn counter-clockwise for cold water.
清洗说明 适用于所有加工处理过的表面：以中性肥皂水清洗镀层表面，再以干净的软布彻底擦干整个表面，许多清洁剂，比如氨水、去污粉及洁厕灵等，会对电镀表面造成伤害，切忌使用。 有磨损性的清洁用具或清洁剂也不可使用于科勒牌的水龙头及其配件上。	CLEANING INSTRUCTIONS All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning. Do not use abrasive cleaners or solvents on Kohler faucets and fittings.