

Homeowners Guide

Smart Toilet

Record your model number: _____

KOHLER®

Thank You for Choosing KOHLER

Need help? Contact our Customer Care Center.

- Mainland China: +(86) 800-820-2628, +(86) 400-820-2628
- Hong Kong (China), Macau (China), Taiwan (China): +(852) 3125-7728
- Thailand: callcenterthailand@kohler.com, +66-(0)-2-204-6000
- Brunei, Guam, Japan, Malaysia, Mongolia, Philippines, Singapore, South Korea, Vietnam: +(852) 3125 7728
- Indonesia: kohlerindonesia@kohler.com, +62 215088 9524
- **Care and cleaning:** kohlerasiapacific.com/careandclean

Warranty

This product is covered under the **Three-Year Limited Warranty for KOHLER® Plumbing Products**, found in the packed Compliance Certification.

IMPORTANT SAFEGUARDS AND PRECAUTIONS

READ ALL INSTRUCTIONS BEFORE USING

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

-  **DANGER: Risk of electric shock.** Connect only to a circuit protected by a Residual Current Device (RCD).
-  **WARNING: Risk of electric shock.** Disconnect the power before servicing.
-  **WARNING: Risk of personal injury.** UV radiation emitted from this device. Unintended use of the device, or damage to the housing, may result in exposure to ultraviolet radiation. Skin or eye injury could result. Avoid exposure of eyes and skin to unshielded lamp. Always be certain the lamp is off before opening the protective cover.
-  **CAUTION: Risk of personal injury.** Replacement of the UV lamp must only be performed by qualified service personnel.
-  **CAUTION: Risk of product damage.** Do not install this product in a location exposed to excessive moisture where condensation might form on the product surface. Provide adequate ventilation when bathing to avoid damage to the electronic components due to high humidity levels.
-  **CAUTION: Risk of product damage.** To reduce the risk of product malfunction, do not supply electrical power to the unit until the plumbing installation work has been completed.
-  **CAUTION: Risk of product damage.** Do not apply excessive force to the spray wand.

NOTE: This product contains thermal protectors that may trip during storage or transportation in warm conditions, causing the unit to not operate. Allow the unit to cool to room temperature before installation or operation.



WARNING: To reduce the risk of burns, electrocution, fire, or injury to persons:

Close supervision is necessary when this product is used by or near children, the elderly, or invalids. Do not allow the product to be used as a toy. Adjust the temperature of the seat for the elderly, those who are incapacitated, or persons with sensitive skin.

Use this product only for its intended use as described in this manual. Only use attachments recommended by Kohler Co.

Never operate this product if the cord or plug is damaged, if the product is not working properly, if the product has been dropped, damaged, or dropped into water. Return the product for examination and repair.

Keep the cord away from heated surfaces.

Never block the air openings of the product. Keep the air openings free of lint, hair, and the like.

Never use while sleeping or drowsy.

Never drop or insert any object into any opening or hose.

Do not use outdoors or operate where aerosol spray products are being used or where oxygen is being administered.

Connect this product to a properly grounded outlet only. See the “Grounding Instructions” section.

The use of this product is a supplement to and not a substitute for standard infection control practices; users must continue to follow all current infection control practices, including those related to the cleaning and disinfection of environmental surfaces.

Do not charge non rechargeable batteries.

Grounding Instructions

This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an electrical outlet that is properly installed and grounded.



DANGER: Risk of electric shock. Improper use of the grounding plug can result in a risk of electric shock.


If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.

Check with a qualified electrician or service personnel if the grounding instructions are not completely understood, or if in doubt whether the product is properly grounded.

This product is factory equipped with a specific electric cord and plug to permit connection to a proper electric circuit. Verify that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product. Do not modify the plug provided. If the plug does not fit the outlet, have the proper outlet installed by a qualified electrician. If the product must be reconnected for use on a different type of electric circuit, the connection should be made by qualified service personnel.

Do not use an extension cord with the product.

Features

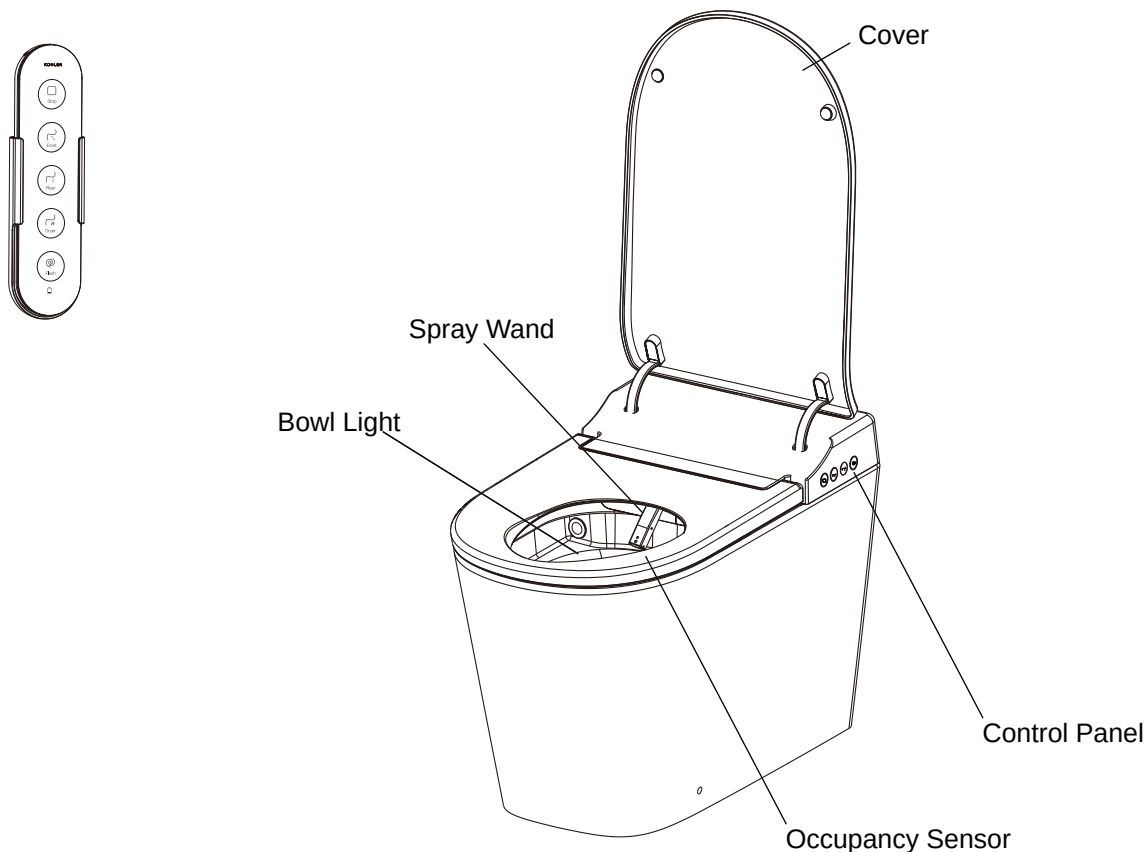

Operation Options

- ☐ **Remote Control** - When paired with the toilet, the remote control operates the toilet features. Refer to the “Remote Control Setup” section for more information.
- ☐ **Control Panel** - Located on the side of the toilet, the control panel allows easy access to primary toilet features.

Flushing Options

- ☐ **Remote Control Flush** - Short press the flush button to perform a full flush, long press the flush button to perform a eco flush.
- ☐ **Automatic Flush** - When enabled, this feature automatically flushes the toilet after the user stands up, lowers the cover, or approximately 60 seconds after the front of the toilet last senses motion.
- ☐ **Control panel flushing** - short press the flushing button to perform a full flush; Long press the flushing button in the power-off state for emergency flushing.

Seat and Cover

- ☐ **Cover Sensor** - When the cover auto-open/close feature is enabled, a motion sensor automatically opens the cover. The motion sensor range can be set to near, medium, or far. Sensor range may vary depending on your bathroom layout.
- ☐ **Occupancy Sensor** - The sensor area is located on the front right side of the seat, and detects a seated user. The cleansing features will function only when a user is seated.
- ☐ **Heated Seat** - When activated, the seat features an adjustable heating option that will keep the seat warm.
- ☐ **Energy Save** - When enabled, the toilet conserves energy by reducing the heated seat temperature when the toilet is not in use.

Wash Features

- ☐ **Front/Rear Wash** - Front and rear wash feature adjustable positioning, adjustable water temperature, adjustable water pressure, and pulsate and oscillate water action.
- ☐ **Dryer** - The dryer features adjustable air temperature.

Cleaning

- ☐ **Deodorizer** - Contains a replaceable cartridge. Refer to the “Replacing the Deodorizer” section.
- ☐ **Automatic Wand Rinse** - The spray wand is rinsed with water before and after each use.
- ☐ **Automatic Wand Cleaning** - The spray wand is cleaned daily with UV light.

Lighting

- ☐ **Nightlight** - The bowl light automatically illuminates when the light sensor detects low lighting conditions.

Remote Control Setup


NOTE: A remote control must be paired with the toilet seat before use. The included remote control should already be paired with your seat. If a replacement remote control is required, follow the instructions below to pair with your seat.

NOTE: Only one remote control can be paired with the toilet seat at a time.

NOTE: The remote control cannot be paired while the toilet seat is occupied.

- ☐ Verify that two AAA alkaline batteries are installed correctly in the remote control. Refer to the “Replacing the Batteries” section.
- ☐ Move the new remote control near the toilet seat.
- ☐ Verify that all other remote controls have been removed from the seat area.
- ☐ Press and hold the **“Dryer Temp”** icon on the remote control until the icons blink.
- ☐ Simultaneously press and hold the **“Front”** and **“Rear”** icons on the toilet control panel until a beep is heard.
- ☐ If all of the indicators on the remote light ON, the pairing is successful.
- ☐ If the pairing is not successful within 30 seconds, all of the level indicators will light OFF and re-pairing will be needed.

Directions For Use

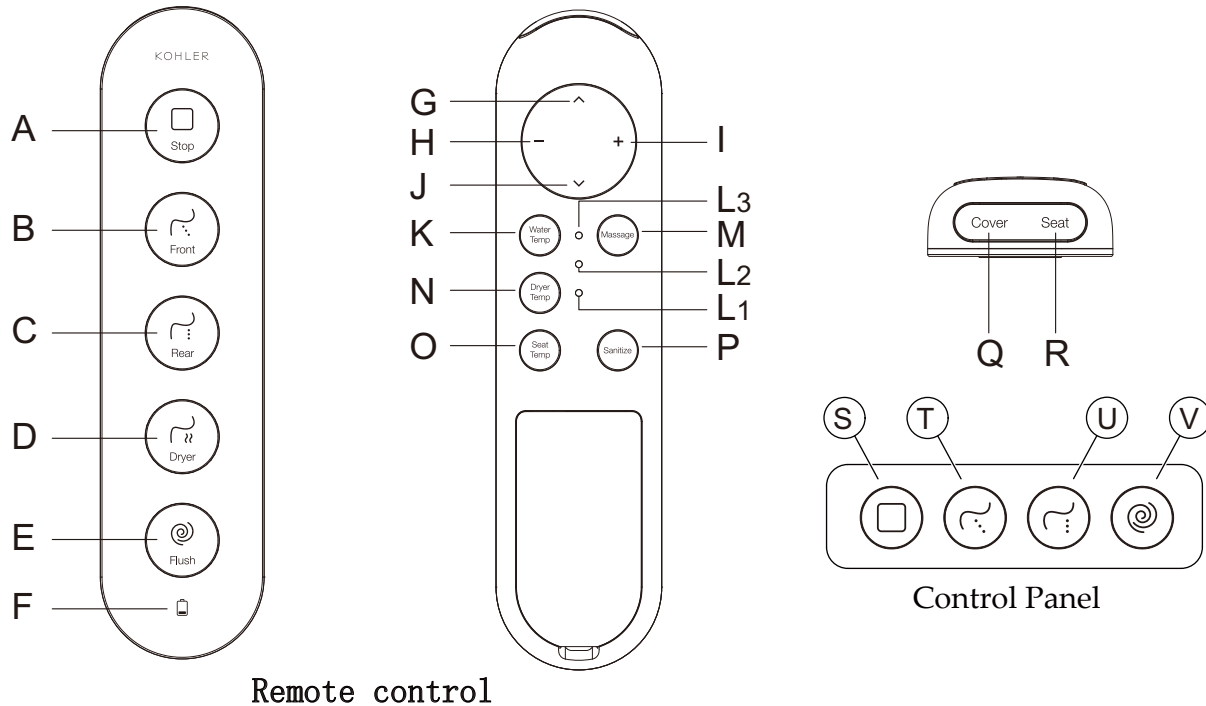

Remote control

NOTE: For features with multiple settings, press the icon to move the setting one level higher. If the feature is set at the highest level, pressing the icon will deactivate the feature or adjust the feature to a lower setting. The last setting used will be saved for the next use.

NOTE: Verify that two AAA alkaline batteries are installed correctly in the remote control.

(A and S) - Stop: Press this button to stop the Front Wash, Rear Wash, Dryer, Deodorization, and Manual Nozzle Clean or UV Sanitation function. Long press the Control Panel "S" to enter standby mode. When any key on the side keyboard is pressed or seated, it automatically exits standby mode and all functions are restored.

(B and T) - Front Wash: After sitting down, press this button to start front wash, which will automatically stop after about 5 minutes or immediately turn off by pressing the stop button.

(C and U) - Rear Wash: After sitting down, press this button to start the rear wash, which will automatically stop in about 5 minutes or stop immediately after pressing the STOP button.

(D) - Dryer: After sitting down, press this button to start the dryer, which will automatically stop in about 4 minutes or stop immediately after pressing the STOP button.

(E) - Flush: Short press to start full flush, long press to start eco flush.

(G) - Forward: Press to adjust the spray position forward. There are three spray positions. When unseated, press and hold this button to extend the spray and initiate the manual nozzle clean function. This feature allows manual cleaning of the spray nozzle and can be stopped by pressing the STOP button.

(J) - Backward: Press this button to adjust the spray position backwards. There are three spray positions. When unseated, long press this button to make the spray wand draw back and exit the Manual spray nozzle Clean.

(H)- Weak: Press this button to reduce the cleaning intensity

(I)- Strong: Press this button to increase the cleaning intensity

(K) - Water Temperature: Press this button to adjust the water temperature. (In normal mode, there are four levels of water temperature. When all indicators light OFF, the water temperature is 25 °C. In auto adjustment mode, the L3 light will be on)

(M) - Massage: Press this button to start oscillating wash, press it again to start pulsating wash, On the third press to activate both oscillating and pulsating wash, The fourth press will exit the massage mode. When the corresponding function is started, L1 will light ON during oscillating wash, L1,L2 will light ON during pulsating wash, L1,L2, L3 will light ON during oscillating and pulsating wash, and all of them will light OFF after the mode is exited.

(N) - Dryer Temperature: Press this button to adjust dryer temperature. There are four levels of dryer temperature. When all indicators light OFF, the dryer temperature is room temperature.

(O) - Seat Temperature: Press this button to adjust the seat temperature level and adjust the seat heating temperature. (In normal mode, there are four levels of seat temperature. When all indicators light OFF, the seat temperature is room temperature. In the auto adjustment mode, the L3 light will be on.)

(P) - UV Sanitation: When the seat cover is closed, Press this button for UV Sanitation.

(Q) - Cover: When unseated, press this button to perform Cover OPEN/CLOSE action

(R) - Seat: When unseated, press this button to perform Seat OPEN/CLOSE action

(V) - Flush: Short press to start full flush. Long press the side button "V" to turn on the enable switch.

Enable/Disable Automatic Features

NOTE: The cover open/close, deodorizer, automatic flush, and automatic UV cleaning features come enabled from the factory. Long press the side button "V" to turn on the enable switch.

Cover Open/Close

- ☐ When cover is CLOSE, user enters sensor area, cover auto opens.
- ☐ When cover is OPEN, user leaves sensor area, cover auto closes after a period of time.
- ☐ When unseated, press Cover button on the remote, perform corresponding OPEN/CLOSE function. When seated, press Cover button on remote will be invalid.
- ☐ User could manually OPEN/CLOSE cover. When users intend to open or close the cover under normal condition, the cover can open or close automatically against the trend of motion. Users will not have to use force. Once being stopped by any obstacle during motion, the cover will automatically stop moving.
- ☐ When the enable switch is turned on, Long press this button to enter the microwave level setting mode. Press Cover button to switch the status.
- ☐ When all level indicators light OFF, the microwave function is disabled. When the level indicator L1 lights ON, the low-level microwave function is enabled. When the level indicators L1 and L2 light ON, the medium-level microwave function is enabled. When all level indicators light ON, the high-level microwave function is enabled.
- ☐ Do not press any other icons for 10 seconds to exit the setup mode.

Seat OPEN/CLOSE

- ☐ When unseated, press Seat button on remote, perform corresponding OPEN/CLOSE function.
- ☐ User could manual OPEN/CLOSE seat. When users intend to open or close the seat under normal condition, the seat can open or close automatically against the trend of motion. Users will not have to use force. Once being stopped by any obstacle during motion, the seat will automatically stop moving.
- ☐ When the enable switch is turned on, Long press this button to enter the automatic flushing setting mode. Press Seat button to switch the status.
- ☐ When level indicator L1 lights ON, the short-level automatic closing time function is enabled. When level indicators L1 and L2 light ON, the medium-level automatic closing time function is enabled. When all level indicators light ON, the long-level automatic closing time function is enabled.
- ☐ Do not press any other icons for 10 seconds to exit the setup mode.

Deodorizer

- ☐ When enabled, the deodorizer automatically activates while the toilet is in use.
- ☐ Press "Stop" button on control panel or remote to stop deodorization function.
- ☐ When the enable switch is turned on, Long press "Weak" button to enter the automatic deodorization setting mode. Short press "Weak" button to switch the status.
- ☐ When all level indicators light ON, the automatic deodorization function is enabled.
- ☐ When all level indicators light OFF, the automatic deodorization function is disabled.
- ☐ Do not press any other icons for 10 seconds to exit the setup mode.

Automatic Flush


- ☐ When enabled, the toilet will automatically flush after the user stands up, lowers the cover, or approximately 60 seconds after the front of the toilet last senses motion.
- ☐ When the enable switch is turned on, Long press **“Strong”** button to enter the automatic flushing setting mode. Short press Strong button to switch the status.
- ☐ When all level indicators light ON, the function of automatic flushing without cover closed is enabled. When level indicator L2 lights ON, the function of automatic flushing with closing the cover is enabled. When all level indicators light OFF, the automatic flushing function is disabled.
- ☐ Do not press any other icons for 10 seconds to exit the setup mode.

Water temperature/seat temperature auto adjustment feature

- ☐ Long press **“Water Temp”** button to enter the water temperature/seat temperature auto adjustment function. When water temperature/seat temperature auto adjustment function is activated and water temperature/seat temperature set to auto adjustment mode (with the indicator light L3 on), the toilet will auto adjust water temperature/seat temperature to corresponding setting.

Emergency flushing

- ☐ During a power outage, you can connect the spare battery pack(machine parts), and press and hold the Flush key on the control panel to perform flushing.
- ☐ Remove the ceramic cover and pull out the cable from the buckle behind the ceramic cover.
- ☐ Connect the waterproof DC power plug and tighten the waterproof cap.
- ☐ Put the battery pack in the appropriate position, as shown in the figure.
- ☐ Cover with ceramic cover.
- ☐ Distinguish the positive and negative ends of the battery and cable. Be sure of no forcible insertion. Otherwise, the product will be broken as a result.

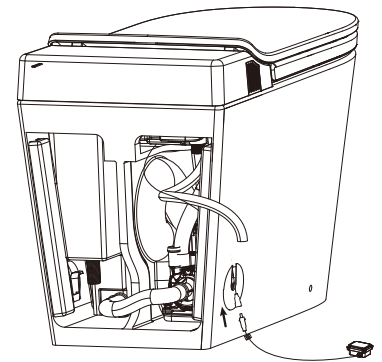

Automatic UV Cleaning

- ☐ When enabled, an automatic UV cleaning cycle activates every 24 hours.
- ☐ During UV sterilization process, if customer open cover and start use toilet, or presses STOP button on remote, UV sterilization function will be stopped.
- ☐ When the enable switch is turned on, Long press Sanitation button to enter the automatic sanitation setting mode. Press Sanitation button to switch the status.
- ☐ When all level indicators light ON, the automatic sanitation function is enabled. When all level indicators light OFF, the automatic sanitation function is disabled.
- ☐ The above functions can only be achieved when there is no seat and the lid is closed.

Energy Save

- ☐ When energy saving is enabled, the general energy saving will reduce the toilet heating temperature and the comprehensive energy saving will directly turn off seat ring heating to achieve the purpose of energy saving.
- ☐ When the enable switch is turned on, Long press **"Seat Temp"** button to enter the energy saving setting mode. Short press Seat Temperature button to switch the status.
- ☐ When the level indicator L1 lights ON, the energy saving function is disabled. When the level indicator L2 lights ON, the general energy saving function is enabled. When the level indicator L3 lights ON, the comprehensive energy saving function is enabled.

Prolonged Seating Indicator


- ☐ When prolonged seating indication feature is activated, the system will alert customer by buzz when customer sits on the toilet over a long period of time.
- ☐ When the enable switch is turned on, Long press **"Massage"** button to enter the long sitting reminder function setting mode. Short press Massage button to switch the status.
- ☐ When all LEDs are ON, the feature is enabled. When all LEDs are OFF, the feature is disabled.

Lighting

- ☐ When the enable switch is turned on, long press the "Front" button on the remote control to activate the night light switch function.
- ☐ The bowl light automatically illuminates when the light sensor detects low lighting conditions.
- ☐ The night light is only used for internal lighting of the toilet.

Note: When long pressing any function button to set any function, if you make no action or press other buttons within 10 seconds, the function setting will be exited. A short beep indicates that the function is enabled. A long beep indicates that the function is disabled.

Cleaning the Spray Wand

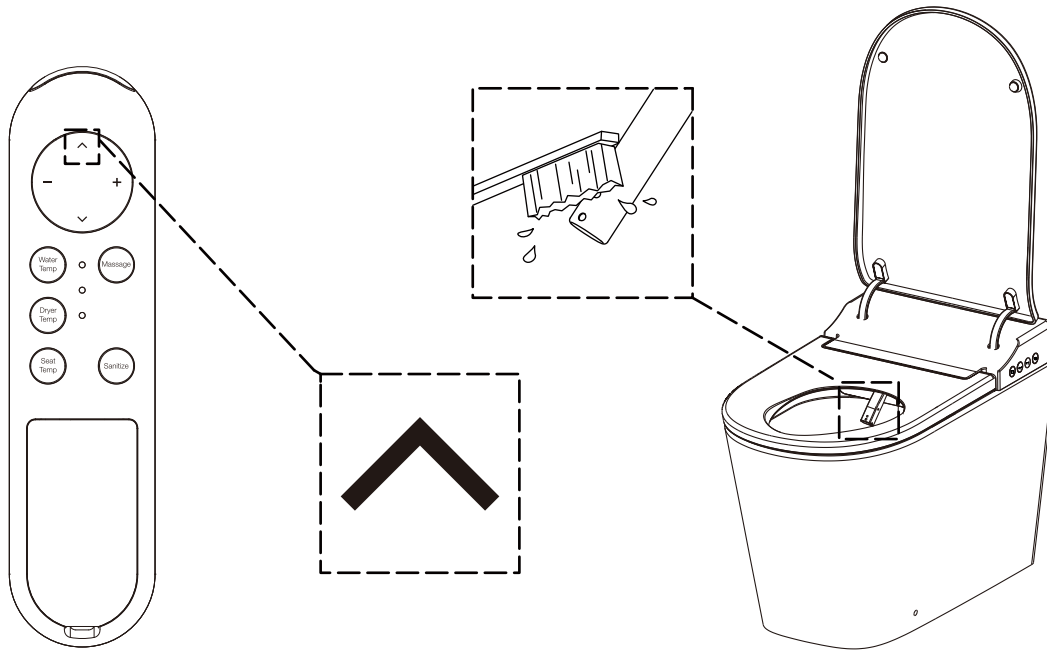


NOTE: The spray tip on the wand can become clogged over time with mineral deposits from the water. The spray wand should be cleaned when there is a reduction in spray performance.

NOTE: The spray wand can only be extended for cleaning when the seat is not activated or occupied.

- ☐ Raise the lid and seat.
- ☐ Press and hold the “**^**” icon on the remote control or long press the “**Front**”/“**Rear**” button on the Control panel to extend the wand for cleaning.
- ☐ Clean the spray wand with a soft-bristled brush and hot water.
- ☐ Press the “**Stop**” icon again or long press the “**▼**” or long press the “**Front**”/“**Rear**” button icon on control panel to retract the wand.

Replacing the Deodorizer

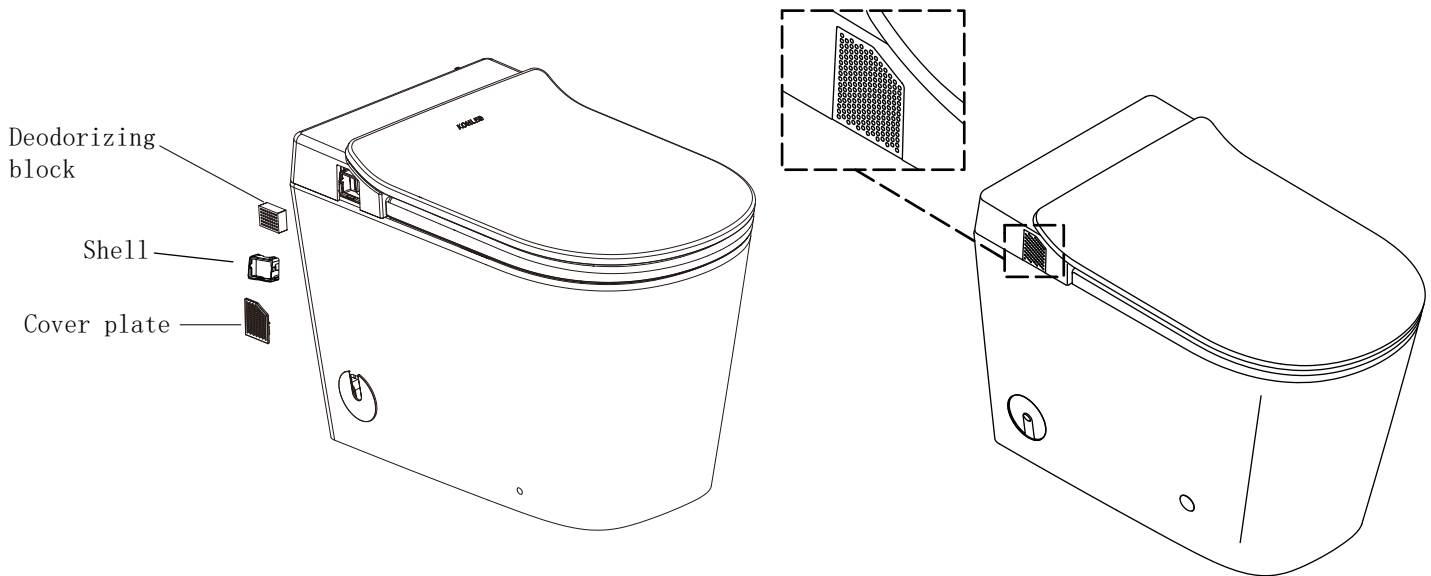

CAUTION: Risk of product damage. To prevent damage to internal components during deodorizer block replacement, do not insert fingers or other objects into the deodorizer cavity.


NOTE: Replace the deodorizer every 2 years or when the deodorizing performance decreases.

- ☐ Remove the cover.
- ☐ Carefully remove the deodorizer housing from the seat.
- ☐ Remove the deodorizer block from the housing.
- ☐ Insert the new deodorizer block into the housing.
- ☐ Reinstall the housing into the seat.
- ☐ Reinstall the cover.


Maintenance in case of long-term idle status

If the intelligent toilet will be idle for a long term, make sure the water in pipeline of cover is drained completely.

- Unplug power supply, close angle valve.

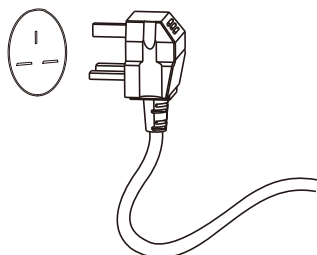

pull the plug

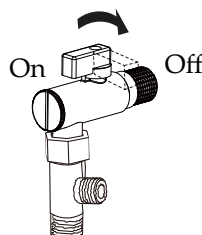


Close the angle valve

Note:

- 1.If the water in the water tank is not drained and the product is not used for a long time, the residual water is likely to freeze in winter and deteriorate in summer.
- 2.If you find the water supply pipe has been frozen, do not use the intelligent cover. You will need to raise the room temperature and use it after the water is thawed.
- 3.In winter, when there is a risk of water pipe freezing, close the angle valve and make the toilet flush once or drain the water in the toilet.
- 4.In case of long term idle status, remove the batteries in the charging block of remote control.
- 5.Open cover or add water inside the toilet might avoid the plastic parts yellowing problem caused by backflair from discharge pipe after residual toilet water evaporated during long-term idle status.

Replacing the Batteries

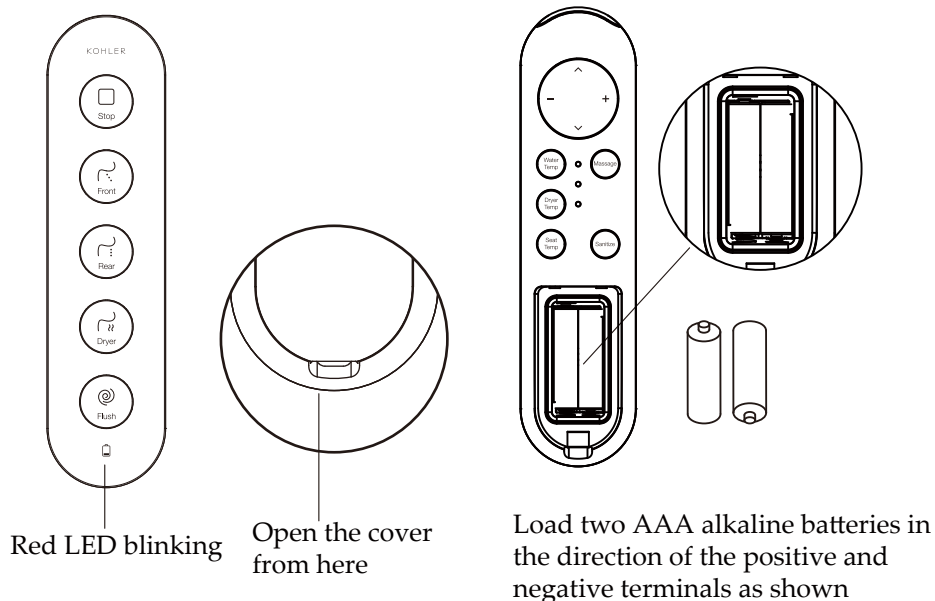

- Remove the remote control from the docking station.
- Remove and retain the cap to the battery compartment.
- Remove the batteries.
- Install two AAA alkaline batteries in the positive and negative directions.
- Reinstall the cap to the battery compartment.
- Place the remote control on the docking station.
- Do not charge non rechargeable batteries.

Care and Cleaning

General Cleaning

For the best effect, follow all the instructions carefully during the cleaning and maintenance of your product.

IMPORTANT! Do not flush the seat cover and remote control directly with water.

NOTE: The effectiveness of the cleaning process depends on factors such as water hardness, temperature, precise composition of the cleaning solution, variations in cleaning regulations, and the status of the cleaning product. Kohler Co. cannot guarantee the validity of these rules, as these factors may change.

NOTE: Failure to follow the cleaning instructions will void the Kohler Co. warranty.

- Always test your cleaning solution on an inconspicuous area before applying to the entire surface.
- Do not immerse the product in a cleaning solution.
- Use a soft, dampened sponge or cloth. Never use an abrasive material such as a brush or scouring pad to clean surfaces.
- Wipe surfaces clean and rinse completely with water immediately after applying cleaner. Rinse and dry any overspray that lands on nearby surfaces.

Cleaning the Seat

 **WARNING: Risk of property or product damage.** When cleaning the open seat, avoid applying excessive force to prevent product damage.

- Do not use abrasive cleanser or sanitizer inside the spray tank for cleaning.
- Avoid exposing the seat surface to corrosive chemicals or cosmetics, such as nail polish or after-shave, as this may cause damage.

Cleaning the Stainless Steel Parts

- Clean surface with neutral soap-water, then wipe entire surface with clean soft sponge or cloth.
- Do not use full-strength bleach or ammonia cleaning solutions. Chemically active cleaning solutions can damage the surface.

Troubleshooting

This troubleshooting guide is for general aid only. A Kohler Co. Authorized Service Representative (ASR) or qualified electrician should correct any electrical problems. For warranty service, contact your dealer or wholesale distributor, or contact the Customer Care Center using the information located in the front of this manual.

Start Up

When electrical power is connected to the toilet, the toilet will automatically go through a start-up sequence. The sequence includes wand movement, water line purge, and nightlight blinks. The toilet will go silent when the start-up sequence is complete.

If the toilet does not function correctly upon completing the start-up sequence, or fails to start, contact the Customer Care Center using the information located in the front of this manual.

Small Children

The automatic flush and cleansing features are activated by a sensor located inside the seat. Small children may not be tall enough to be detected by the sensor.

Power Troubleshooting

Symptoms	Probable Cause	Recommended Action
1. The toilet has no power.	A. The power cord is unplugged from the electrical outlet. B. The Ground-Fault Circuit-Interrupter (GFCI) or Residual Current Device (RCD) is tripped.	A. Plug the power cord into a GFCI or RCD electrical outlet. B. Reset the GFCI or RCD.
2. The toilet beeps when electrical power is connected or disconnected.	A. The toilet beeps during the start-up sequence and when powering down.	A. Normal operation. No action needed.
3. The toilet does not respond.	A. Electrical power to the toilet was briefly interrupted.	A. Turn OFF the electrical power to the toilet and wait until the power-down beeps stop. Then restore the power to the toilet.
4. The nightlight does not turn ON in low lighting conditions.	A. The nightlight is not enabled. B. The low light sensor lens is dirty.	A. Enable the nightlight. Refer to the “Enable/Disable Automatic Features” section. B. Clean the light sensor lens on the side of the toilet near the control panel.

Flush Troubleshooting

Symptoms	Probable Cause	Recommended Action
1. The toilet does not flush.	A. The water supply to the toilet is not turned ON. B. The toilet is blocked. C. The remote control is not working.	A. Turn ON the water supply. B. Use a plunger to remove the blockage. For extreme blockage, a snake may be used. C. Refer to the “Remote Control Troubleshooting” section.

Symptoms	Probable Cause	Recommended Action
2. The toilet does not flush automatically.	A. The automatic flush feature is not enabled. B. The user is not detected by the sensor.	A. Activate automatic flush. Refer to the “Enable/Disable Automatic Features” section. B. Children may be too small to be detected by the sensor. Flush the toilet using the remote control.
3. The toilet flushes unexpectedly.	A. The automatic flush feature is enabled.	A. When automatic flush is enabled, the toilet will flush shortly after use. To disable automatic flush, refer to the “Enable/Disable Automatic Features” section.
4. The toilet bowl contains little or no water.	A. The water has evaporated during an extended period between uses.	A. Flush the toilet to refill the bowl.

Seat and Cover Troubleshooting

Symptoms	Probable Cause	Recommended Action
1. The seat cover does not open automatically.	A. The cover open/close feature is not enabled. B. The motion sensor is set at far distance.	A. Activate the cover open/close feature. Refer to the “Enable/Disable Automatic Features” section. B. Adjust the cover open/close sensor distance using the remote control.
2. The seat cover opens unexpectedly.	A. The motion sensor is set at short distance.	A. Adjust the cover open/close sensor distance using the remote control.
3. The seat is not heated.	A. The toilet is in Energy Save mode. B. The heated seat feature is not enabled. C. The temperature setting is too low.	A. The seat will heat when used. Refer to the “Enable/Disable Automatic Features” section. B. Activate the heated seat. Refer to the “Enable/Disable Automatic Features” section. C. Adjust the heated seat temperature using the remote control.

Wash Troubleshooting

Symptoms	Probable Cause	Recommended Action
1. Low or no water flow from the spray wand.	A. The water supply to the toilet is not turned ON. B. The water supply hose to the toilet is kinked or looped too tight. C. The sensor does not detect the user.	A. Turn ON the water supply to the seat. B. Remove the kink in the hose or make a wider loop. C. Small children may not be detected. Adjust the sitting position. The sensor may have difficulty with fabric or other objects. The sensor is designed to sense skin.
2. Water stops flowing from the spray wand unexpectedly.	A. Front or rear wash automatically stops after several minutes.	A. Press the “ Front ” or “ Rear ” icon to restart washing.

Symptoms	Probable Cause	Recommended Action
3. The spray wand moves erratically or fails to extend.	A. The wash cycle was interrupted. B. The spray wand is not responding to the remote control. C. The user is not detected by the sensor. D. The seal protecting against waterflow into the seat is dry. E. The spray wand pauses briefly to get rinsed, then fully retracts.	A. Turn OFF the electrical power to the toilet and wait until the power-down beeps stop. Then restore the power to the toilet. B. Turn OFF the electrical power to the toilet and wait until the power-down beeps stop. Then restore the power to the toilet. C. Children may be too small to be detected by the sensor. D. Use the remote control to extend the spray wand. Clean the wand with liquid soap. Rinse the wand, then apply more liquid soap for lubrication. Retract the wand. E. Normal operation. No action required.
4. The dryer air is too hot.	A. The air temperature is set too high.	A. Use the remote control to decrease the air temperature.
5. The dryer does not start immediately.	A. The spray wand has not finished retracting after the wash cycle completion.	A. There is a brief delay while the wand fully retracts.
6. The deodorizer is not working.	A. The automatic deodorizer feature is not enabled.	A. Activate the automatic deodorizer feature. Refer to the “Enable/Disable Automatic Features” section.
7. The toilet beeps while occupied.	A. The seat has been occupied for an extended time.	A. Normal operation. No action required.

Remote Control Troubleshooting

Symptoms	Probable Cause	Recommended Action
1. The remote control does not turn on.	A. The batteries are not properly installed. B. The batteries need to be replaced.	A. Reinstall the batteries. Refer to the “Replacing the Batteries” section. B. Replace the batteries. Refer to the “Replacing the Batteries” section.
2. The remote control does not connect to the toilet.	A. The remote control is too far from the toilet to receive a signal. B. The remote control is not paired with the toilet.	A. Move the remote control closer to the toilet to regain a connection. B. Pair the remote control to the toilet. Refer to the “Remote Control Setup” section.

Contents of Hazardous Substances or Elements

Recovery Indication

If the product has exceeded its useful life or cannot be used after repair, do not throw the product in the regular trash. Dispose of waste electronic parts through a qualified recycling company. Verify that the product has been properly handled. Disposal of the product must be in accordance with local or national governmental laws.

Statistics on the content of toxic or hazardous substances or ingredients

Part Name	Toxic or Hazardous Substances or Ingredients									
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr(VI))	Polybrominated biphenyls (PBBs)	Polybrominated diphenyl ethers (PBDEs)	Bis (2-ethylhexyl) phthalate (DEHP)	Benzyl butyl phthalate (BBP)	Dibutyl phthalate (DBP)	Diisobutyl phthalate (DIBP)
Plastic Assembly	○	○	○	○	○	○	○	○	○	○
Control Assembly	Above 0.1 wt%	○	○	○	○	○	○	○	○	○
PCBA	Above 0.1 wt%	○	○	○	○	○	○	○	○	○
Motor Assembly	Above 0.1 wt%	○	○	○	○	○	○	○	○	○
Wire Harness Assembly	○	○	○	○	○	○	○	○	○	○
Water Inlet Assembly	○	○	○	○	○	○	○	○	○	○
Nozzle Assembly	○	○	○	○	○	○	○	○	○	○
Heater Assembly	○	○	○	○	○	○	○	○	○	○
Remote Control Assembly	Above 0.1 wt%	○	○	○	○	○	○	○	○	○

“Above 0.1 wt%” Indicates that the percentage content of a restricted substance exceeds the reference percentage value for the conditions of existence.

○: Indicates that the percentage content of a restricted substance does not exceed the percentage of the value of the presence criterion.

NOTE: The information provided is based on the supplier data and Kohler Co. inspection results. The product is designed not to hurt the environment. Under current technology, all hazardous materials have been used in the smallest amounts possible. Kohler Co. will strive to reduce the use of these hazardous materials used in this product.

	The product “service life for environment protection” is 10 years; Kohler Co. will specify product service life based on product characteristics. The product “service life for environment protection” is only effective when the product is used as described in the product specification.
--	--

kohlerasiapacific.com

THE BOLD LOOK
OF **KOHLER**®

©2024 Kohler Co.



1617273-MY5

1617273-MY5-B