



记录您的型号:

Record your model number: \_\_\_\_\_

**警告:** 存在烫伤风险。水温过高会导致严重灼伤。将阀芯水温设置为等于或低于 120°F (49°C)。请参阅阀芯的温度调节说明。

**小心:** 存在产品损坏和人身伤害风险。产品应远离加热器。

请遵守当地管路安装及建筑条例。

关闭供水系统。

阅读并遵守所有说明

保存说明书

此洁面仪设计为与科勒 K-EX-38497T-4A-\*\*龙头或科勒 K-EX-38500T-7-\*\*龙头搭配使用。

**1A.** 将洁面仪上的灰点与手柄上的箭头尾部直线对齐。将洁面仪底部插入手柄顶部，确保两端紧密贴合。

**2A.** 旋转洁面仪直至洁面仪上和手柄上的灰点对齐。

**3A.** 打开供水系统。按手柄上的开/关按钮打开水流以使用洁面仪。再按一次开/关按钮关闭水流。

**需要帮助?** 请联系我们的客户服务中心。

• 中国大陆: +(86) 800-820-2628, +(86) 400-820-2628

• 保养和清洁: [kohler.com.cn/support/care-and-cleaning/](http://kohler.com.cn/support/care-and-cleaning/)

**WARNING: Risk of scalding.** High water temperature can cause severe burns. Set the valve water temperature at or below 120°F (49°C). Refer to the temperature adjustment instructions for the valve.

**CAUTION: Risk of product damage and personal injury.** Keep the product away from a heater.

Follow all local plumbing and building codes.

Turn OFF the water supply.


**READ AND FOLLOW ALL INSTRUCTIONS**

**SAVE THESE INSTRUCTIONS**


The face brush is designed for use with the KOHLER K-EX38497T-4A-\*\* or K-EX38500T-7-\*\* grooming faucet.

**1A.** Verify that the grey dot of the face brush is aligned with the arrow end of the handle. Lower the face brush onto the handle.


1

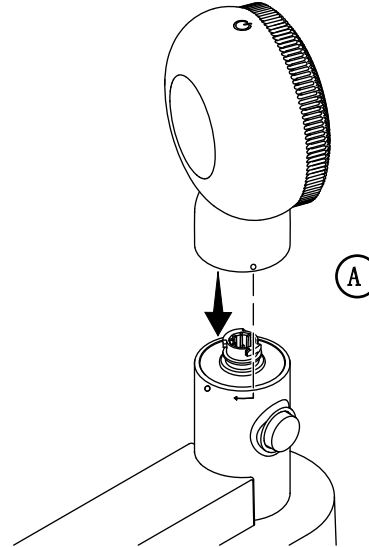

2

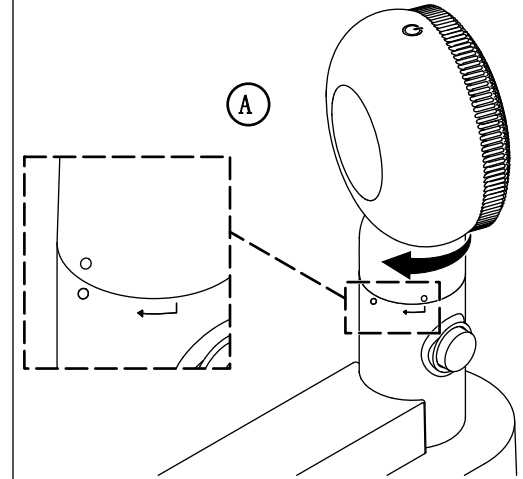

3

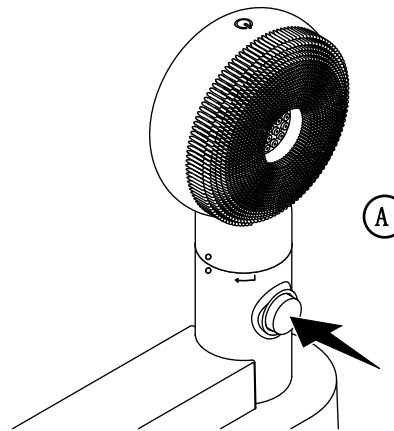

**2A.** Twist the face brush clockwise until the dots on the brush and handle are aligned.

**3A.** Turn ON the water supply. Press the button to start or stop the water flow from the face brush.

**Need help?** Contact our Customer Care Center.

- Mainland China: +(86) 800-820-2628, +(86) 400-820-2628
- **Care and cleaning:** [kohler.com.cn/support/care-and-cleaning/](https://kohler.com.cn/support/care-and-cleaning/)