



记录您的型号：

Record your model number: _____

警告： 存在烫伤风险。水温过高会导致严重灼伤。将阀芯水温设置为等于或低于 120°F (49°C)。请参阅阀芯的温度调节说明。

小心： 存在产品损坏和人身伤害风险。产品应远离加热器。

请遵守当地管路安装及建筑条例。

关闭供水系统。

阅读并遵守所有说明

保存说明书

此清洁喷头设计为与科勒 EX38497T-4A-** 龙头或科勒 EX38500T-7-** 龙头搭配使用。

1A. 将清洁喷头上的灰点与手柄上的箭头尾部直线对齐。将清洁喷头底部插入手柄顶部，确保两端紧密贴合。

2A. 旋转清洁喷头直至清洁喷头上和手柄上的灰点对齐。

3A. 打开供水系统。按手柄上的开/关按钮打开水流以使用清洁喷头。再按一次开/关按钮关闭水流。

需要帮助？ 请联系我们的客户服务中心。

• 中国大陆：+(86) 800-820-2628, +(86) 400-820-2628

• **保养和清洁：** kohler.com.cn/support/care-and-cleaning/

本产品支持科勒®水龙头五年有限担保，详见包装所附的《合格证》。

WARNING: Risk of scalding. High water temperature can cause severe burns. Set the valve water temperature at or below 120°F (49°C). Refer to the temperature adjustment instructions for the valve.

CAUTION: Risk of product damage and personal injury. Keep the product away from a heater.

Follow all local plumbing and building codes.


Turn OFF the water supply.

READ AND FOLLOW ALL INSTRUCTIONS


SAVE THESE INSTRUCTIONS

The cleaning nozzle is designed for use with the Kohler EX38497T-4A-** grooming faucet or the Kohler EX38500T-7-** grooming faucet.


1

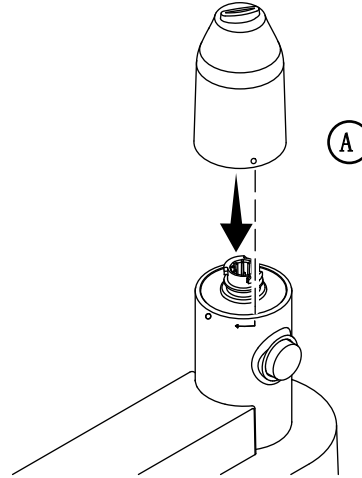

2

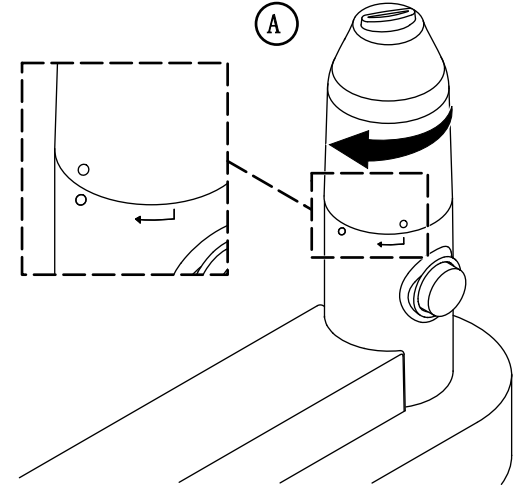

3

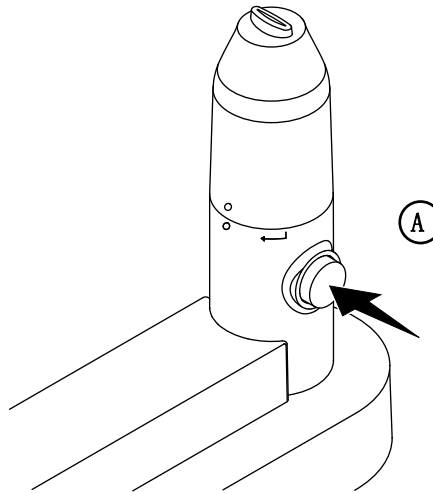

1A. Align the gray dot on the cleaning nozzle with the arrow end on the connector. Insert the bottom end of the cleaning nozzle into the top end of the connector. Verify that the two ends fit into place.

2A. Turn the cleaning nozzle until the gray dots on the cleaning nozzle and the connector are aligned.

3A. Turn ON the water supply. Press the ON/OFF button on the connector to start the water flow from the cleaning nozzle. Press the ON/OFF button again to turn OFF the water.

Need help? Please contact our Customer Care Center.

- Mainland China: +(86) 800-820-2628, +(86) 400-820-2628

- **Care and cleaning:** kohler.com.cn/support/care-and-cleaning/

This product is covered under the **Five-Year Limited Warranty for KOHLER® Faucets**, found in the packed Compliance Certification.