


取出塞扣(1)，用六角扳手(2)旋松把手(3)里面的螺钉(4)。拔下把手。
Remove the plug(1), loosen the screw(4) in the handle(3) by hex wrench(2).
Remove the handle.

将新把手装到阀轴(5)上，旋紧把手里面的螺钉，塞入塞扣，检查安装。
Install the new handle onto the valve stem, tighten the screw in the handle.
Reinstall the plug. Check it.


1604359-T2-A

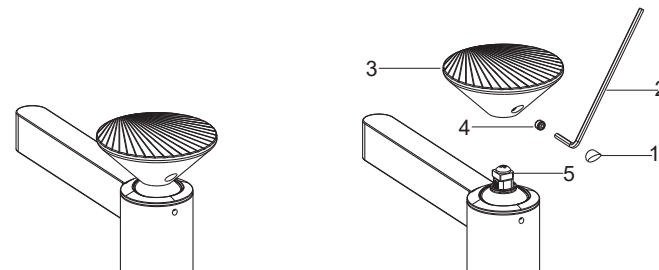

取出塞扣(1)，用六角扳手(2)旋松把手(3)里面的螺钉(4)。拔下把手。
Remove the plug(1), loosen the screw(4) in the handle(3) by hex wrench(2).
Remove the handle.

将新把手装到阀轴(5)上，旋紧把手里面的螺钉，塞入塞扣，检查安装。
Install the new handle onto the valve stem, tighten the screw in the handle.
Reinstall the plug. Check it.


1604359-T2-A

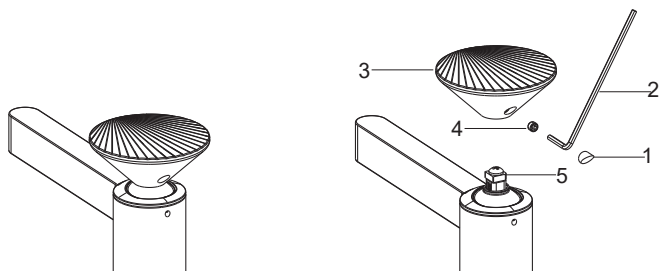

取出塞扣(1)，用六角扳手(2)旋松把手(3)里面的螺钉(4)。拔下把手。
Remove the plug(1), loosen the screw(4) in the handle(3) by hex wrench(2).
Remove the handle.

将新把手装到阀轴(5)上，旋紧把手里面的螺钉，塞入塞扣，检查安装。
Install the new handle onto the valve stem, tighten the screw in the handle.
Reinstall the plug. Check it.

1604359-T2-A

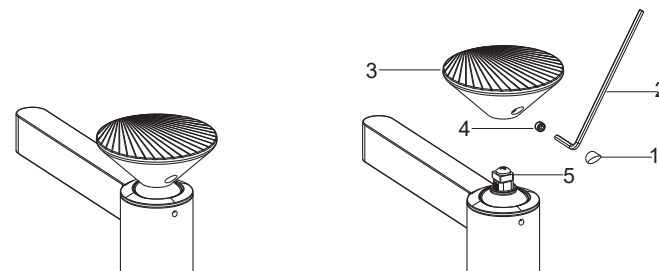

取出塞扣(1)，用六角扳手(2)旋松把手(3)里面的螺钉(4)。拔下把手。
Remove the plug(1), loosen the screw(4) in the handle(3) by hex wrench(2).
Remove the handle.

将新把手装到阀轴(5)上，旋紧把手里面的螺钉，塞入塞扣，检查安装。
Install the new handle onto the valve stem, tighten the screw in the handle.
Reinstall the plug. Check it.

1604359-T2-A