

### IMPORTANT NOTICE TO INSTALLERS!

Please leave these instructions for the consumer. Please retain for future reference.


**NOTE:** Some installation parts might not be provided.

**NOTE:** The toilet pictured in the installation steps may differ from the model being installed.


**CAUTION:** Turn on the water and allow water to flow through the supply pipe to flush the system of any debris before connecting fill valve.

Type of Trap	S-Trap	P-Trap
Ceramic Trap	225 mm	-
Plastic Trap	305 mm	185 mm

#### Ceramic Connector

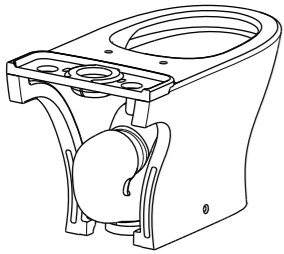

#### Plastic Connector

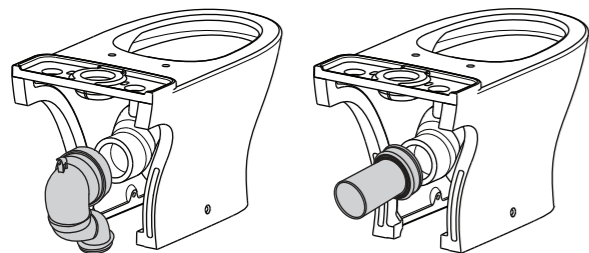


S-Trap

P-Trap


### Roughing-in

(Dimensions are approximate)  
Unit: mm


#### P-Trap

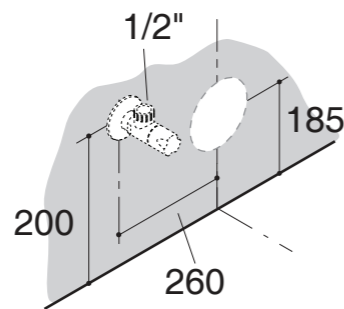


#### S-Trap

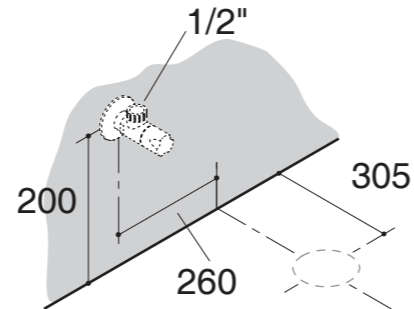


**1** Position the template on the floor to ensure the template against the wall.

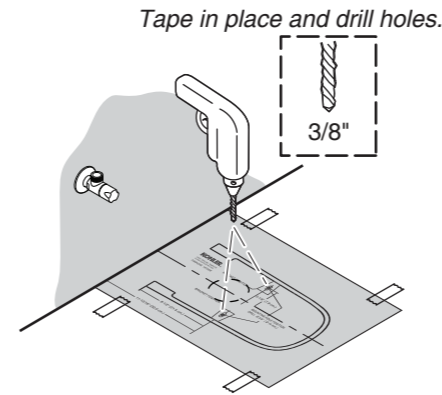

**2** Insert the anchors. Position the brackets as shown on the template and install.

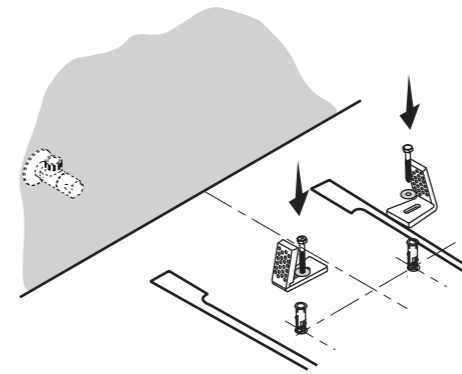


**3** Position the tank on the bowl. Slide the rubber washers and washer onto bolts and insert into mounting bowl. Tighten the nuts. **Do not overtighten.**

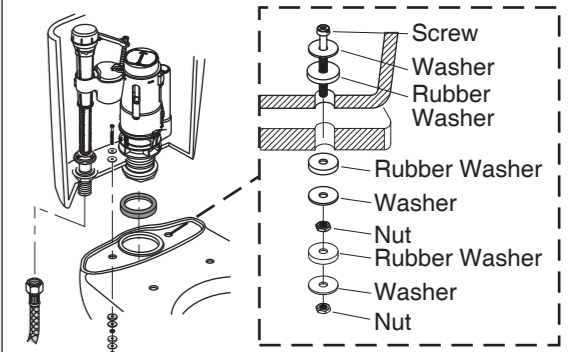

(For HK market only)


**4** Connect the connector on the bowl. Carefully tilt backward until connector and waste pipe touch.

#### Connector to Floor

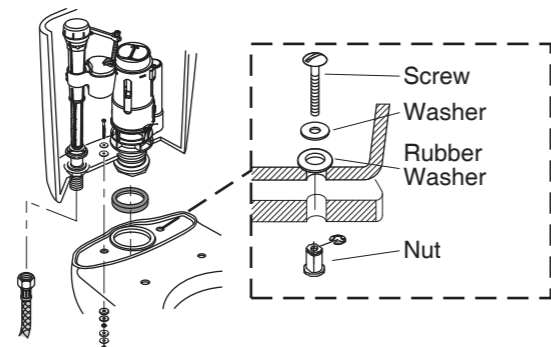

(For Asia, UK market)

#### Connector to Wall

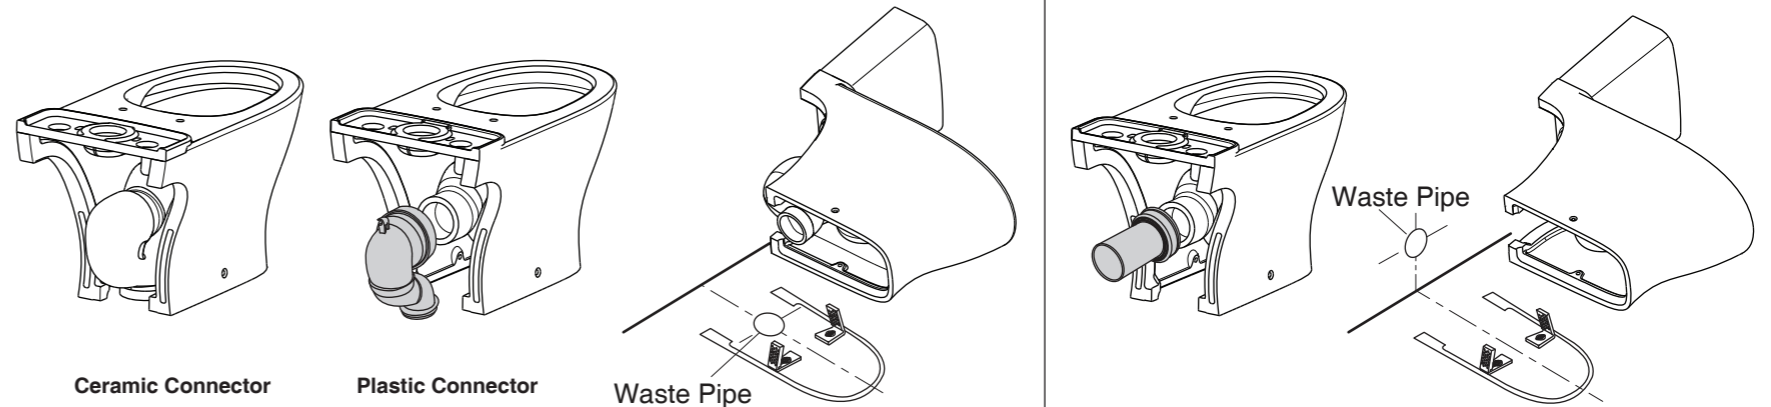


Ceramic Connector


Plastic Connector

Waste Pipe


**5** Align connector and carefully lower over brackets.

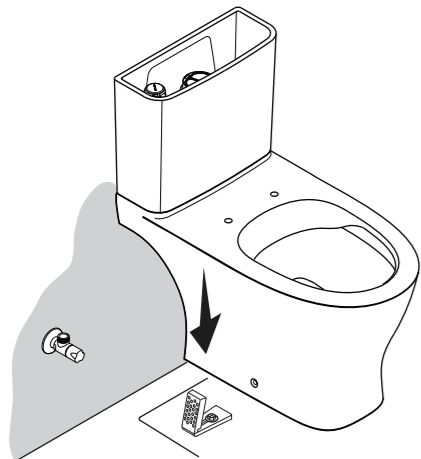


**6** Apply silicone around base.

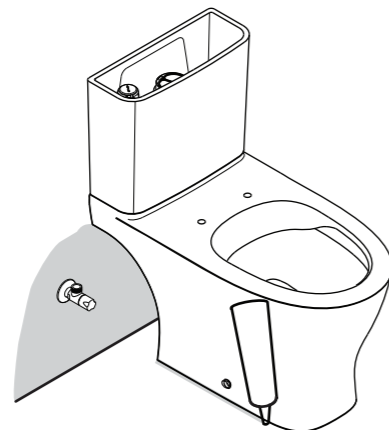


**7** Flush several times and check for leaks. **Do not overtighten!**

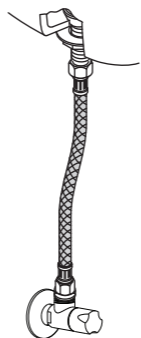

**8** Install the tank cover and the seat.

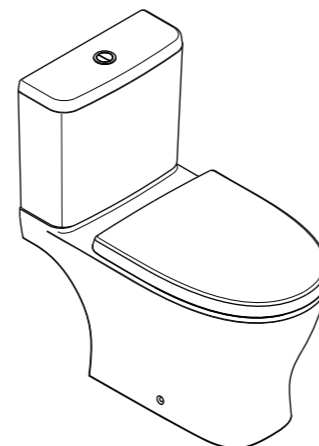


**Adjust the water level. If needed.**

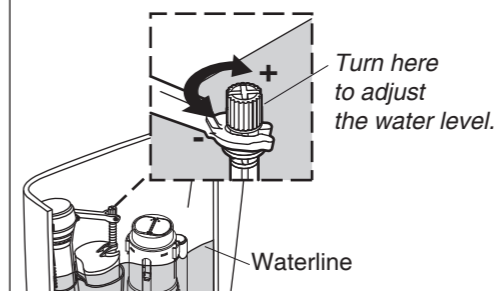


### Push Button Installation Guide

 
**1** Remove the nut from push button kit




**2** Tighten the nut to the push button from under tank cover.

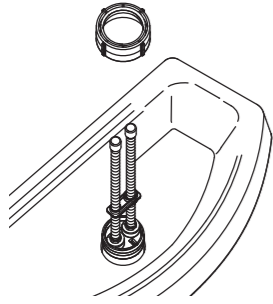

**3** Attach the tank cover.

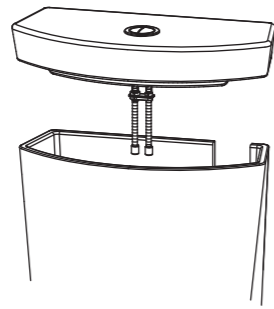


**4** Adjust the rod length if needed.

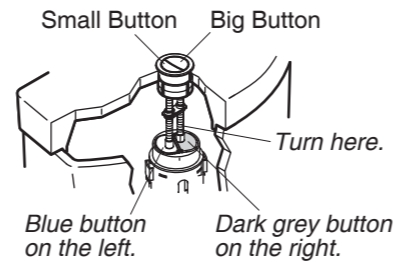

**Hole Plug Assy Installation Guide. (For Hong Kong Market Only)**


**Step 1 :** Choose the overflow hole which need to cover with Hole Plug Assy.

**Step 2 :** Fit the nut onto the screw. Turn clockwise until it is too tight to turn.

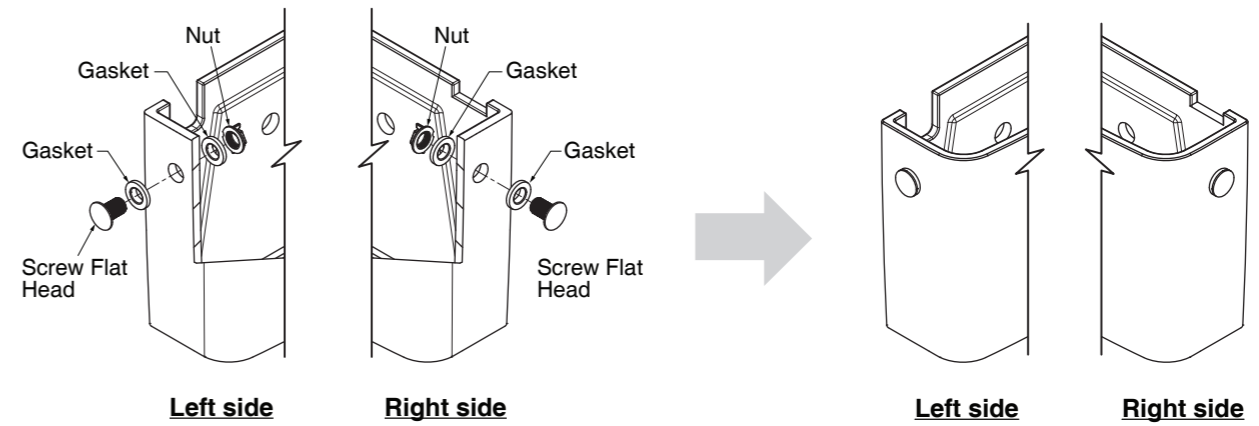


**Replace the Seal**

**1** Shut off the water supply.

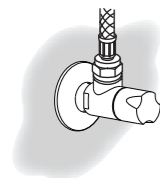


(Not supply)

**2** Remove the tank cover.

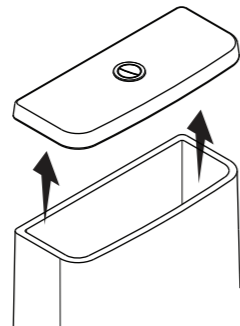


**3** Note the position of the colored buttons for reinstallation.

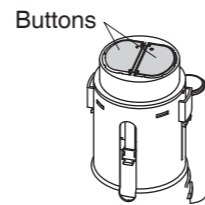


**4** Turn the flush valve tabs and pull straight up on the canister.




**5** Remove and replace the seal.

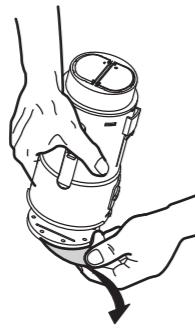


**6** Reinstall the canister so it snaps into place.

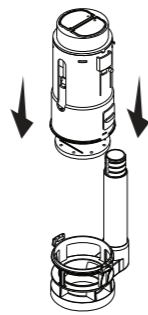


**7** Rotate the canister so that the colored button are in their original positions.

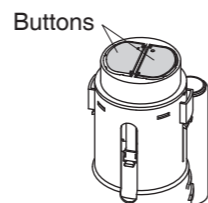

**8** Reinstall the tank cover.

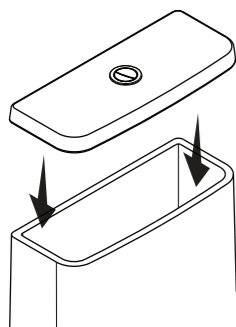


**9** Turn on the water supply.

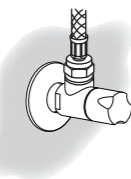

(Not supply)

**10** Flush several times and check for leaks. **Do not overtighten!**

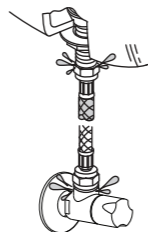

(Not supply)

**Troubleshooting**

Symptoms	Recommended Action
1. Poor flush.	A. Adjust the tank water level to match the waterline. B. Fully open the water supply shut-off valve. C. Clear obstructions from the trapway, jet, or bowl rim holes. D. Clear obstructions from the waste line.
2. No flush.	A. Make sure the push button rods are in place. Adjust as needed.
3. The fill valve turns on/off by itself or it runs, allowing water to enter the tank.	A. Adjust push button rods for proper slack so the flush valve seal isn't held off the flush valve. B. Clean or replace the flush valve seal if it is worn, dirty, or misaligned with the valve seat or flush valve seat is damaged. C. Remove the tank and tighten the flush valve nut if flush valve gasket is leaking. Do not overtighten. If leakage continues replace the gasket. D. Clean the fill valve seal of debris or replace the seal assembly. E. Replace the fill valve if the valve float sinks. F. Adjust the tank water level if it is too high.
4. Long tank fill cycle.	A. Fully open the water supply shut-off valve. B. Clean the valve inlet, valve head, or supply line. Flush the lines.
5. Noisy tank fill cycle.	A. Partially close the water supply shut-off valve if the water pressure to the toilet is too high. Check the toilet performance following any such adjustment. B. Remove dirt or obstructions from the valve head. Flush the lines.

**Care and Cleaning**

**WARNING: Risk of property or product damage.**  
Do not use in-tank cleaners in your toilet. Products containing chlorine (calcium hypochlorite) can seriously damage fittings in the tank. This damage can cause leakage and property damage.

For best results, keep the following in mind when caring for your product:

- Carefully read the cleaner product label to ensure the cleaner is safe for use on the material.
- Always test your cleaning solution on an inconspicuous area before applying to the entire surface.
- Wipe surfaces clean and rinse completely with water immediately after cleaner application. Rinse and dry any overspray that lands on nearby surfaces.
- Do not allow cleaners to sit or soak on the surface.
- Use a soft, dampened sponge or cloth. Never use an abrasive material such as a brush or scouring pad to clean surfaces.
- Be careful not to leave staining materials in contact with the surface for extended periods of time.
- The ideal cleaning technique is to rinse thoroughly and blot dry any water from the surface after each use.

Note: The images used in this document are images used for installation. Some images may not match the actual product.

**KOHLER**

Asia Customer Service Centre  
No. 158, Jiang Chang San Road, Zhabei District, Shanghai, PRC 200436  
Tel: +(86) 21 2606 2572 Fax: +(86) 21 6107 8900

Kohler Asia Pacific Limited  
29/F, Siu On Centre, 188 Lockhart Road, Wanchai, Hong Kong  
Tel: +(852) 3125 7728 Fax: +(852) 2802 2162

Kohler UK  
Cromwell Road, Cheltenham, Gloucestershire, GL52 5EP.  
Tel: +44 (0) 844 571 0048  
www.Kohler.co.uk