

K-72866T-B-CP STRAYT SENSOR FAUCET-COLD,AC, W/O P,0.5G

斯磊台盆感应龙头—单冷, 交流不含电源盒, 1.9升

K-72867T-B-CP STRAYT SENSOR FAUCET-COLD,DC, W/ P,0.5G

斯磊台盆感应龙头—单冷, 直流含电源盒, 1.9升

安装之前

所有的资料是按最新出版的产品资料编写而成。科勒公司保留任何时候不经通知即可改变产品特性、包装或产品可供类型的权利。

说明书包括重要的安装、保养及清洁方面的内容, 请把这些资料交给用户阅读。

注意事项

1. 一定要先彻底冲洗供水管以清除管道中的杂质,使用水源为自来水或可供饮用水。
2. 请勿将强大的冲击力施于产品, 以免造成损害, 引起故障。
3. 安装、清洁龙头时, 切勿损伤感应窗口表面, 以免造成故障。
4. 如果是安装新的洗面盆, 可将水龙头和排水组件先安装好到面盆上。
5. 对于直流龙头, 安装时注意电池的正负极不能装反, 电池盒盖要拧紧, 防止电池受潮。
6. 对于交流龙头, 安装时务必按照说明书的要求正确连接导线, 龙头安装完毕后才可向电源盒供电。
7. 修理面盆时, 用黑色电工胶布粘住感应窗口。
8. 维修交流龙头时, 必须断开交流电源并关闭水源。

BEFORE YOU BEGIN

All information is based on the latest product information available at the time of publication, Kohler Co. reserves the right to make changes to product characteristics, packaging, or availability at any time without notice. Please leave these instructions for the consumer. They contain important installation, maintenance and cleaning information.


Notes:

1. Flush the water supply pipes thoroughly to remove debris. Faucet is designed for tap water or potable water.
2. Handle the faucet with care to avoid damage.
3. Do not damage the surface of sensing window when installing or cleaning the faucet.
4. For new installations, install the faucet and drain onto the lavatory before installing the lavatory.
5. As for DC type faucets, please pay special attention to the battery poles direction. Tighten the battery cover completely to prevent its exposure to moisture.
6. For electric connection on AC faucets, carefully follow the installation provided. Only provide electric supply to the power box after the installation is completed.
7. Cover the sensing window with black tape when repairing lavatories.
8. Turn off the electrical source and shut down the water supply before servicing faucet.

使用说明

OPERATING INSTRUCTIONS

1. 手伸到出水口下方感应范围内(感应距离随面盆, 周围的情况而自动调节), 水龙头出水。手离, 0.5~1秒, 水龙头自动止水。

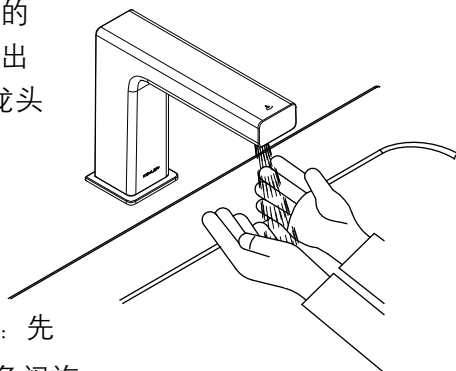

2. 冷热混水龙头水温调节: 先关闭热水角阀, 再将冷水角阀旋至冷水最大状态, 再缓慢打开热水角阀, 以免烫伤。如冷水水压大, 打开全部热水角阀后, 仍无合适水温, 请再缓慢减少冷水出水量, 直至水温使用舒适。

1. Place your hands under the faucet within the sensor range (the sensor range will auto-adjust to its surroundings , the faucet should be on.) The faucet will automatically turn off after 0.5~1 second after moving your hands away from the sensor. The sensing distance will be adjusted automatically per the condition of the lavatory and surrounding environment.

2. Adjust the water temp for faucet with temperature mixture: turn off hot water valve first, and then turn on the water and adjust to full cold, slowly turn on hot water valve to avoid scalding. If cold water pressure is high and unable to gain proper comfortable water temp even hot water valve is fully open, turn down cold water capacity slowly until water temp is comfortable for use.

注意:

1. 如果使用非推荐的脸盆, 可能会产生溅水在脸盆外面或感应异常等情况;
2. 请勿将龙头安装在台面上, 同时搭配台上盆。

NOTE:


1. Use of a non-recommended lavatory may result in water spillage outside of the lavatory or will cause the poor sensing problem;
2. Note: please do not install the faucet on the table and match the washbasin

安装尺寸

ROUGH-IN DIMENSIONS


72866T-B-CP Strayt Sensor Faucet - Cold Only (AC w/o power unit)

斯磊台盆感应龙头-交流电
(单冷型不含交流电源盒)

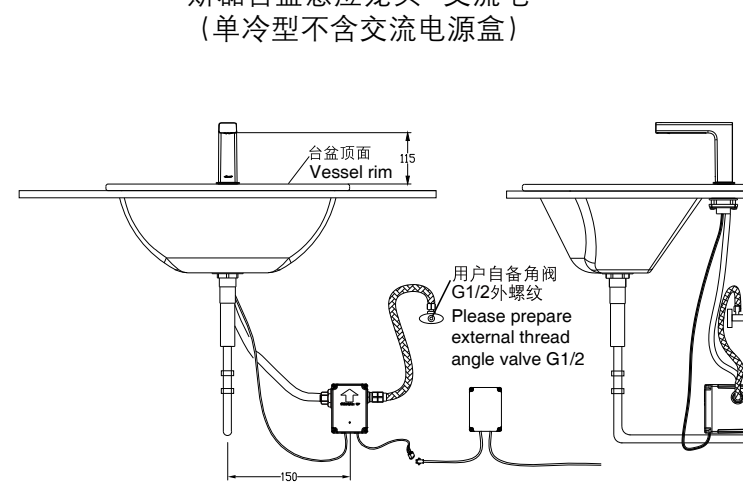


完整墙面
Whole metope

16305T-NA AC/DC transformer 交流电源盒

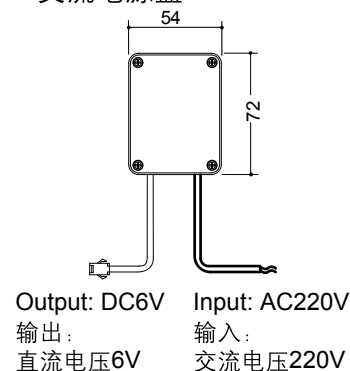


72867T-B-CP Strayt Sensor Faucet - Cold Only (DC) 斯磊台盆感应龙头-直流电 (单冷型)

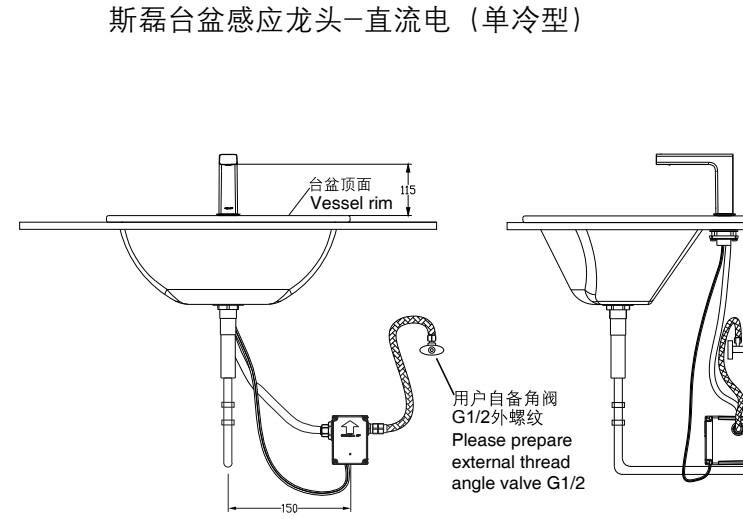

完整墙面
Whole metope


排水组件 Drain

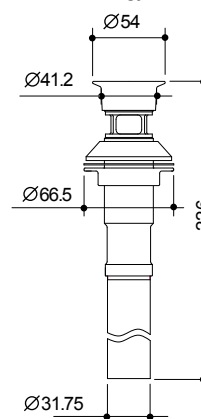

注意:在选用台上盆时,安装后从台面到台盆最高处不要超过10cm,否则可能影响美观以及手在使用时的舒适性。


NOTE: When installing a self-rimming lavatory make sure the distance between the wall and the lavatory does not exceed 10cm.

技术参数	TECHNICAL SPECIFICATION
<p>电源：直流 4节5号碱性电池(LR06×4) 交流 电压220V ,频率50/60Hz</p> <p>检测时间：小于0.5秒</p> <p>关阀延时：0.5~1秒</p> <p>感应距离：自动调节</p> <p>流量：水压为0.3MPa 时，流量不大于 2.0L/min</p> <p>超时用水控制：超时用水1分钟，自动止水。</p> <p>环境温度：1~55℃</p> <p>进水温度：0.5~71℃</p> <p>适用水压：0.05~0.86MPa</p>	<p>Power: DC 4 pieces of AA size alkaline batteries (LR06x4) AC 220V, frequency 50/60Hz</p> <p>Inspection Duration: ≤ 0.5s</p> <p>Shut-off Delay: 0.5~1s</p> <p>Sensing Distance: auto adjust</p> <p>Flow Rate: No more than 2.0L/min at 0.3MPa.</p> <p>Overtime Flowing Control: Automatically stop flushing when the faucet continuously senses an object for more than 1 minute</p> <p>Ambient Temperature: 1~55℃</p> <p>Supply Water Temperature: 0.5~71℃</p> <p>Supply Water Pressure: 0.05~0.86MPa</p>
安装步骤	INSTALLATION
<p>一 如何安装水龙头</p> <p>1. 龙头与面盆的安装固定</p> <p>将龙头电源线(7)和进水软管穿过橡胶垫片，并将橡胶垫片嵌入龙头(1)底部的盘槽中，再将电源线(7)和进水软管(8)从面盆安装孔穿过，从台盆下方依次将垫片(3)压片(4)固定环(5)穿过电源线和进水软管，将牙管固定在龙头底座上，固定环按照图示方向拧在牙管上，用十字螺丝刀将两个螺钉(6)紧固在固定环上，由螺钉端部压紧压片(4)固定水龙头。</p>	<p>How to Install the Faucet</p> <p>1. Secure faucet on lavatory:</p> <p>Cross faucet power cord (7) and water inlet hose through gasket; insert gasket into faucet (1) bottom groove; then cross power cord (7) and water inlet hose (8) from lavatory installation hole; then cross washer (3), spacer (4) and threaded ring (5) through power cord and water inlet hose. Fasten screw pipe on faucet base, tighten threaded ring on screw pipe as shown. Tighten two screws (6) on the threaded ring by cross-head screwdriver. Fasten faucet by pressurizing spacer (4) from the top of the screw.</p>

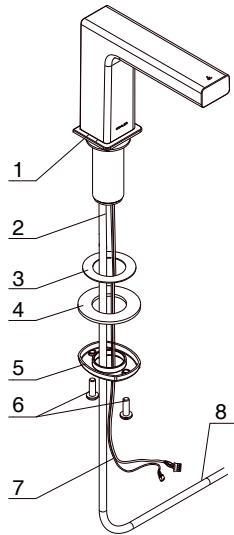

2. 控制阀组件的安装固定


用螺丝刀拧下阀盒盖螺钉(12)，将阀盒盖(11)打开。根据安装尺寸图确定控制阀组件(10)安装位置，打孔，打入膨胀管(13)，使阀盒紧贴墙面且控制阀组件出水口朝上，再用膨胀螺钉(14)将控制阀组件固定在墙壁上，注意控制阀组件要与墙面保持平行。

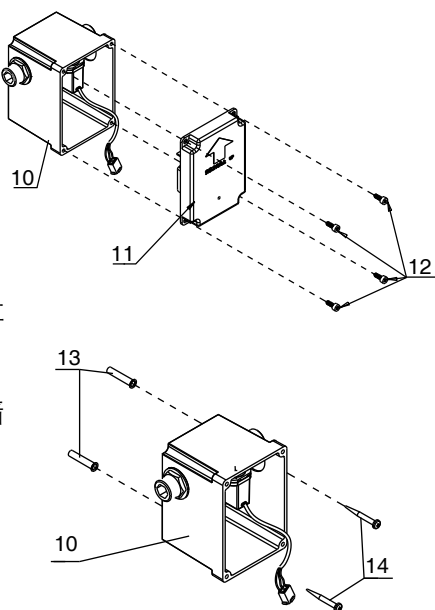

2. Fasten control valve assembly

Unscrew valve cover screws (12) with a screwdriver and open valve cover (11). Determine control box assembly (10) installation location per rough-in; then drill holes, and punch plastic expansion tube (13) in. Place valve box against the wall and control valve assembly water outlet upwards, and then mount control valve assembly on the wall by expansion screws (14). Keep control box assembly parallel to the wall.

将角阀(15)与管道出水口连接，再将软管(16)与角阀(15)连接，在软管(16)前放一水桶，将角阀(15)完全打开，打开供水系统，通水约一分钟，确认管道连接无渗漏后，关闭供水系统。

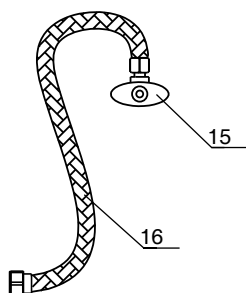


Connect check valve (15) to outlet, then connect the hose (16) to check valve (15). Put a bucket in the front of hose (16). Keep check valve (15) fully open, turn on the water supply for about 1 minute, make sure no leakage in pipeline, and then turn off the water supply.

再将软管(16)与阀体进水口连接，然后连接阀体出水口与龙头组件出水软管(9)。

注意：

1. 请用户自备角阀。
2. 请勿将进水口与出水混淆。
3. 进水软管处的滤网组件(18)和接头(19)不要漏装。

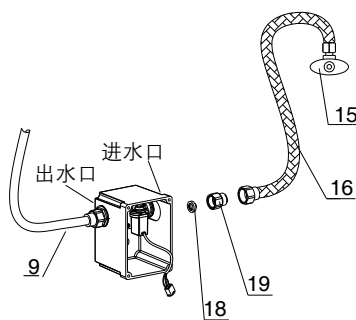

Then connect check valve (16) to valve outlet to faucet assembly water outlet hose (9).

Note:


1. Customer to supply check valve.
2. Do not confuse water inlet with water outlet.
3. Ensure screen (18) and cylinder (19) installed on water inlet.

1. 取出电池盒组件，旋松螺钉(20)，按电池盒盖(21)上的正负极标示装入4节5号电池，紧锁电池盒盖(21)的螺钉(20)后。

注意：电池极性不能装反，新旧电池不能混用。

2. 在合适的位置打孔，打入膨胀管，用自攻螺钉固定电池盒。将相同颜色接插件分别连接。

注意：接插件位置朝上。

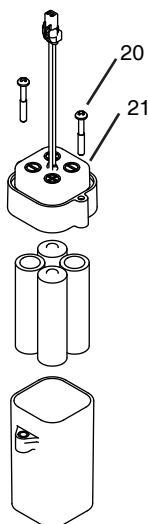

1. Take battery box out, loosen screws, insert 4 AA batteries per battery box +/- pole indication (21) on battery box cover. Fasten battery box cover (21) with screws (20).


Note: no reversed battery polarity. Do not mix new and used batteries together.

2. Drill holes in the correct location, insert plastic expansion tube and fasten battery box with self-tapping screws. Connect same color inserts separately.

Note: place inserts upwards.

2. 将所有导线根据对应的颜色连接上，再将电池盒组件放在控制组件内空旷处，合理调整位置，将合盖根据安装方向用螺钉紧固在控制盒上。


对于交流龙头，除对应的导线连接到交流电源盒输出端上，其余安装方式一致。

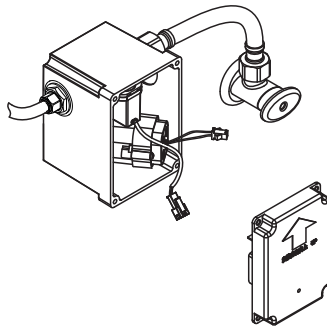

2. Connect power cords with corresponding color wires, then place battery box assembly to empty space within control assembly then fasten control box by screws based on installation direction. For AC faucet, except corresponding cords connect to AC/DC transformer output, other installation methods are identical.

注意:

1. 在用螺钉固定阀盒(10)和阀盖(11)时，确保探头线(22)需通过阀盖上大U型缺口。
2. 接上电池后，龙头进入2分钟自动调距阶段，此过程龙头不会出水。

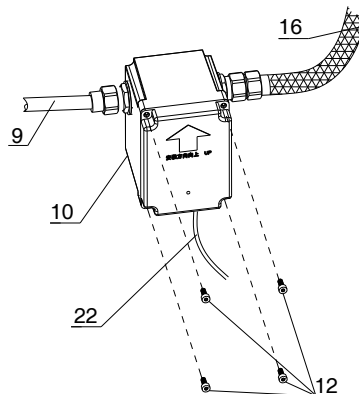


Note:

1. Fasten valve box (10) and valve cover (11) with screws provided, ensure sensing wire (22) crosses through large U slot on valve cover.
2. After connecting to the battery, faucet will commence auto-sense mode which will take 2 minutes. The faucet will not work during this period.

二 如何安装排水组件

旋下排水器盘片(23)，在其底面沿周围涂上一圈密封油灰。把排水本体(24)由底下插入面盆。

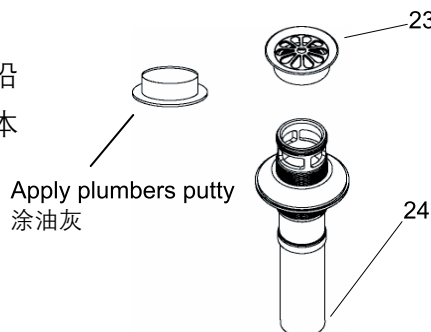


How to install water drain assembly

Unscrew the drain flange (23) from drain assembly. Apply plumbers putty around the bottom circle. Insert drain body (24) into lavatory from the underside.

把排水器盘片(23)旋入排水本体(24)。从下方用手拧紧锁紧螺母(25)，去除多余的油灰。


注意：在锁紧螺母(25)拧紧后，不可再调整排水本体的位置，否则将会破坏油灰密封。

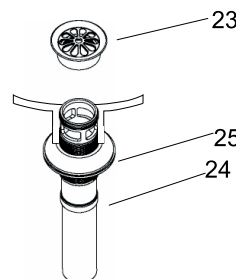

Screw the drain flange (23) into drain body (24). Tighten the locknut (25) manually from the underside. Remove excessive putty.

Note: after tightening locknut (25), do not adjust drain body position, otherwise putty seal might be damaged.

把尾管(26)接上存水弯(27)，尾管需插入存水弯25mm到55mm之间。


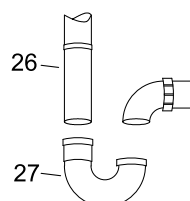


Connect the tailpiece (26) to the trap (27). The tailpiece should extend 25mm to 55mm into the trap.

如何安装交流电源盒
(仅限于交流电感应龙头,
若用户另购交流电源盒,具
体安装详见其说明书)

HOW TO INSTALL THE AC/DC
TRANSFORMER (Only used for
AC sensor faucet. Customers
purchasing AC transformer can
refer to the installations instruction.)

一个交流电源盒供一个感应龙头
Wire connection pattern for one-to-one

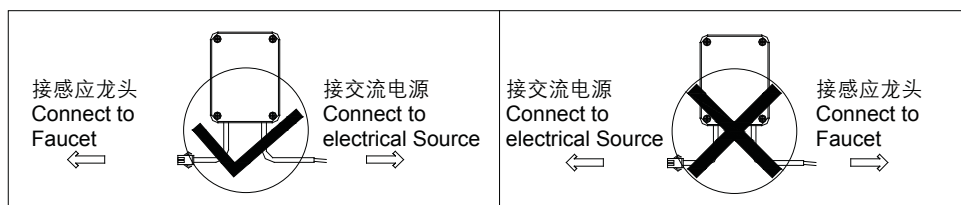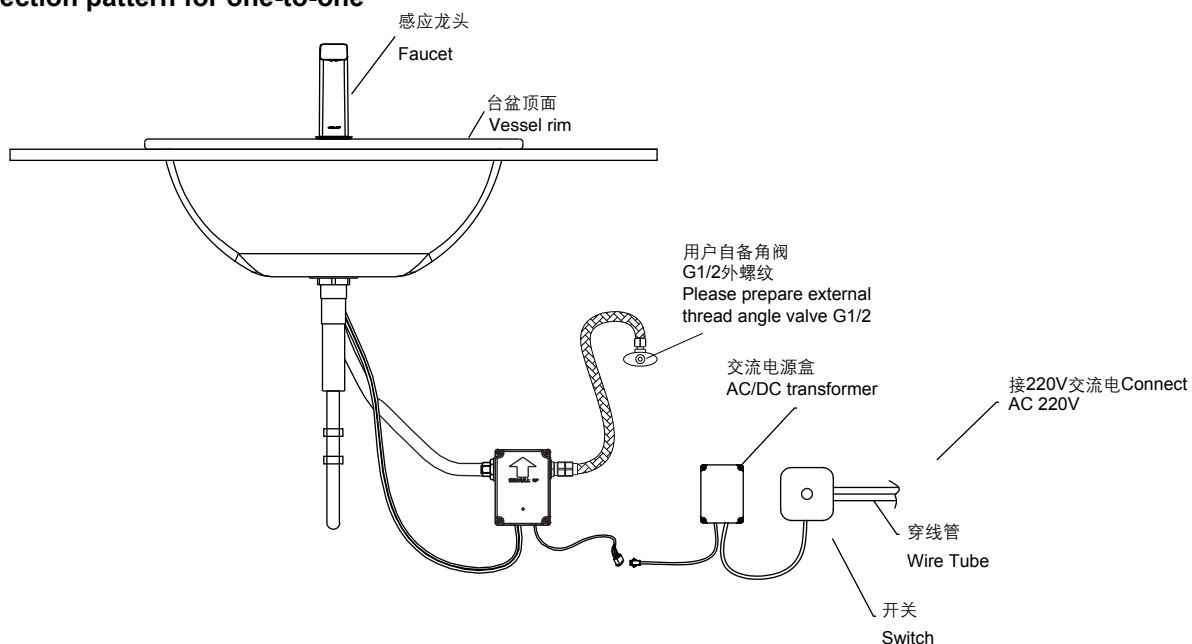

注意：禁止将交流AC220V接入直流DC接线端。

Note: Do not connect AC 220V electrical source directly to DC connector

1.电源盒(背面有不干胶)应安装在干燥,不会被水淋湿、浸泡的位置。根据需要客户自备穿线管及连接线。穿线管安装在墙内。建议交流电源线采用带绝缘和护套层的电线,导体标称截面积 $\geq 0.5\text{mm}^2$;直流连接线采用导体标称截面积 $\geq 0.3\text{mm}^2$ 的电线。请严格按照上图进行连接。


2. 排线完毕后,应检查并确保所有排、接线无误,再分别连接电源盒AC接线端与排线管内交流接线端,以及电源盒DC接线端(黑橙线接头)与龙头的电源线接插件(从阀盒内引出的电线),最后打开AC电源,龙头进入工作状态。

1. AC power unit (sticker on the back) should be installed in a dry place away from water. Customers should prepare wire tube and wire according to their requirements. Wire tube should be mounted into the wall. Suggested wire: AC connection wire adopts wires with protecting layer or sleeve and the section should be $\geq 0.5\text{mm}^2$. The section of DC connection wire should be $\geq 0.3\text{mm}^2$. The connection pattern must follow the illustrations above.

2. After wire layout finished, check and repair if needed. Then connect AC connector to AC connector, DC connector (black-orange) on electrical box to faucet power cord connector (wire from valve box). Finally turn on AC power source. The faucet will work this period.


如何转换成混水感应龙头
(若用户另购三通软管组
件1240574-SP)

HOW TO CHANGE TO A MIXING SENSOR
FAUCET (If customer purchases tee hose
Assembly 1240574-SP)

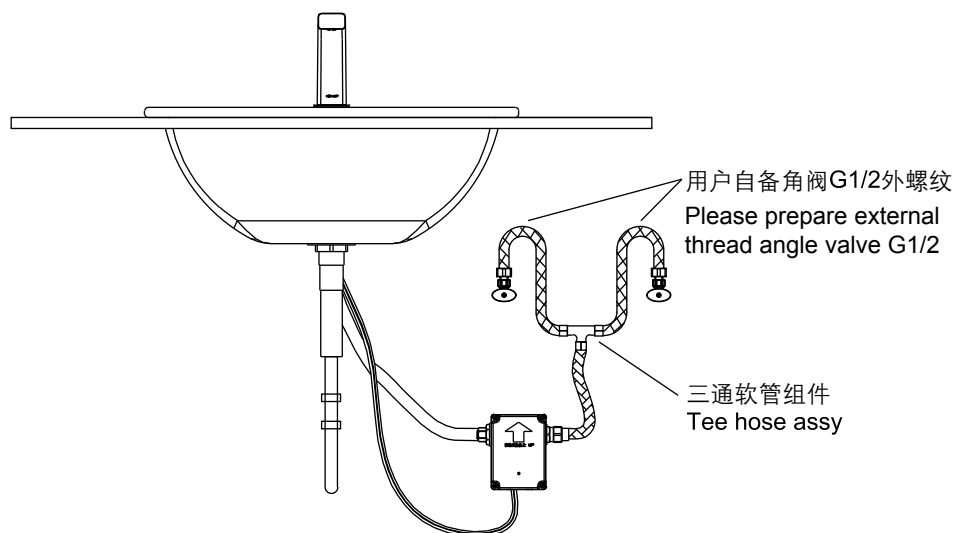

如何转换成恒温阀感应龙头
(若用户另购恒温阀16294T-3-CP,
具体安装详见其说明书)


HOW TO CHANGE TO A THERMOSTATIC
SENSOR FAUCET (If customer purchased
the thermostatic valve 16294T-3-CP, please
refer to the installation manual)

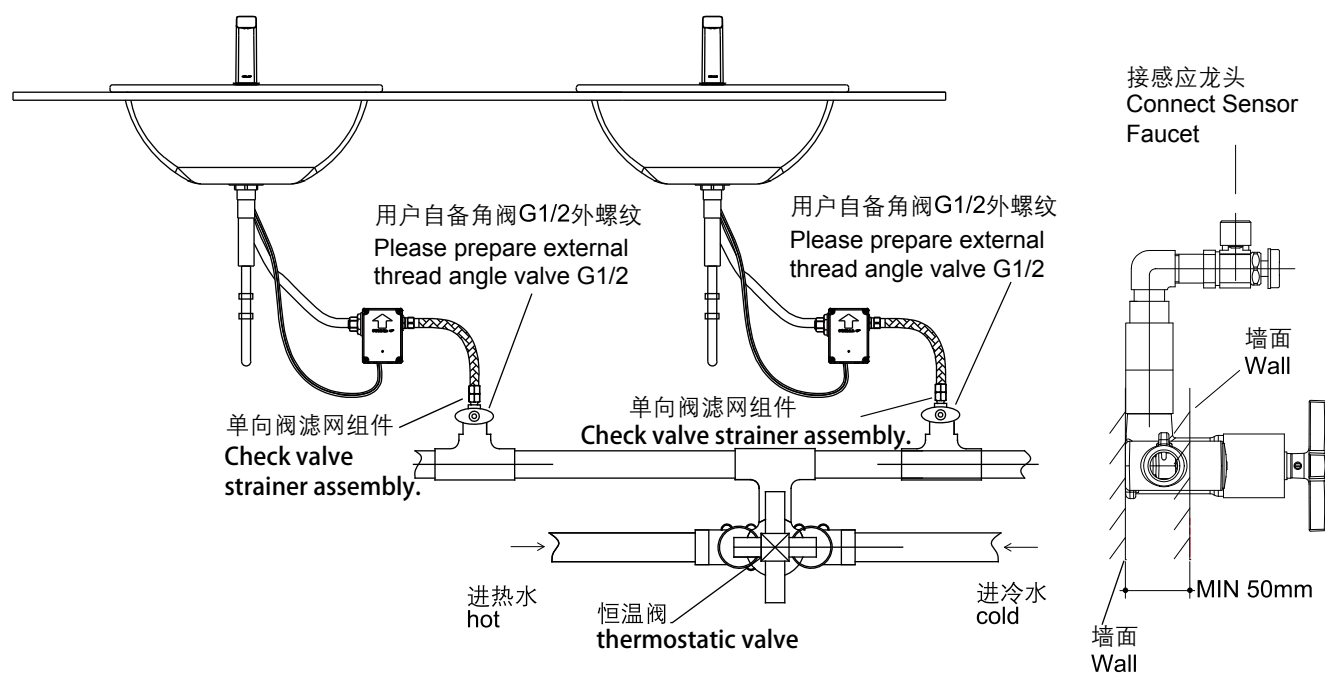

注：三通、角阀请用户自备。

Note: Please let users prepare the tee and angle
valve by themselves.

安装结果检查	INSTALLATION CHECKLIST
<p>检查并确保所有衔接处都已拧紧，打开排水系统和主要供水源，检查并修理有漏水的接口。</p>	<p>Check and ensure that all connections are tight. Open the drain. Turn on main water supply and check for leaks. Repair leakage when necessary.</p>
清理说明	CLEANING INSTRUCTIONS
<p>适用于所有加工处理过的表面，以中性肥皂水清洗镀层表面，再以干净的软布彻底擦干整个表面。许多清洁剂，比如氨水，去污粉及洁厕灵等，会对电镀表面造成伤害，切忌使用。</p> <p>有腐蚀性的清洁剂或溶剂不可使用于科勒的水龙头及其配件上。</p>	<p>Applicable for all finishes: clean the finish with a mild soap. Wipe entire surface completely dry with a clean soft cloth. Most cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning.</p> <p>Do not use abrasive cleaners or solvents on Kohler faucets and fittings.</p>
用户须知	IMPORTANT CONSUMER INFORMATION
<p>1. 感应指示灯的各种闪烁情况</p> <p>感应指示灯是使用者了解感应龙头有效、唯一的途径。所以明白了感应指示灯闪烁所代表的含义，可以正确使用感应龙头，如图示：</p> <p>(1) 间隔约6秒钟闪烁一次(直流版本)：表示电池即将使用完，请更换电池。</p> <p>(2) 间隔约2秒钟连续闪烁：若直流感应龙头，代表龙头电池耗尽，已停止工作，等待使用者更换电池；若交流感应龙头，表示为两种情况：一种为刚刚停电；另一种为在交流供电正常的情况下，则电源盒直流接线端接触不良。</p> <p>(3) 在正常工作情况下，当有物体被感应时，龙头出水，感应指示灯闪烁一次。（龙头关闭，感应指示灯不闪烁。）</p>	<p>1. Light Indicator Key</p> <p>The indicator is the only and effective way to learn the faucet's working conditions. So the users can use the sensor faucet correctly with knowing the meaning of the sensor indicator's flashing.</p> <p>As shown:</p> <p>(1) The indicator flashes every 6 seconds (DC type) indicates that the unit is out of battery and has stopped working. Replace batteries.</p> <p>(2) The indicator flashes every 2 seconds : as for DC type faucets, this indicates the unit is out of battery and has stopped working. Replace batteries. For AC faucets, it indicates two possibilities: one is that the unit is out of battery; or poor DC terminal contact under normal AC power supply.</p> <p>(3) Under normal conditions, the water will flow and the indicator will flash once when objects are detected. (The indicator does not flash when the faucet stops flowing.)</p>
<p>2. 超时出水控制</p> <p>连续在感应状态下使用约一分钟，龙头自动止水。自动止水后，手或物体离开感应范围后，再次进入感应范围内，龙头正常工作，否则无反应。</p>	<p>2. Timeout setting</p> <p>When the faucet flows continuously for 1 minute, the faucet will automatically stop. Objects must be removed from the sensing range. Then the water will flow when objects re-enter into the sensing range again. Otherwise, the faucet will not work.</p>

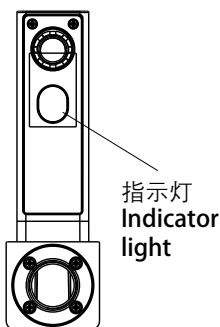

常见故障排除

以下部分故障现象可通过指示灯闪烁情况识别。（参考“感应指示灯的各种闪烁情况”）

现 象	原 因	处理方法
不出水 (感应指示灯不闪烁)	无电池或电池装反(直流电) 无电源或接线有误(交流电) 感应范围内有其它物体 感应窗口较脏 接线端未插好、插错	检查电池 检查总电源和接线情况 移开物体 清洁窗口 检查接线端
感应指示灯每2秒快速 闪烁1次而不出水	电池耗尽(直流电) 刚刚停电(交流电) 直流或交流接线端接触不良(交流电)	更换电池 检查总电源 重新连接接插件
感应指示灯闪烁 不出水	角阀关闭 过滤装置堵塞 起泡器堵塞	打开角阀 清洗过滤装置 清洗起泡器
感应指示灯闪烁 出水量小	角阀是否彻底打开 起泡器堵塞 过滤装置堵塞 水压太低	打开角阀 清洗起泡器 清洗过滤装置 检查供水系统
约1分钟以内不止水 (感应指示灯不闪烁)	感应范围内有物体	移开物体

如按以上操作仍未解除故障，请与销售商或科勒(中国)投资有限公司联系。

除安装更换电池外，请勿随意拆卸龙头其它部件。

TROUBLE SHOOTING

Some trouble symptoms can be identified by the indicator flashing. (Refer to "Light Indicator Key")

Symptoms	Probable Causes	Corrective Action
No water flow (Indicator not flashing)	No battery or battery installed in reversed (DC) No power supply or wrong connection (AC) Other objects in sensing range Dirt on the sensing window Poor or wrong terminal connection	Check the batteries Check the power supply and the connction Remove the object Clean the sensing window Check the connector
The indicator flashes once every 2 seconds with no water flow.	Batteries are out of power (DC) Power cut (AC) Poor DC/AC transformer connection (AC)	Replace batteries Check the power supply Reconnect the connector
No water flow while the indicator flashes	The angle valve is closed The filter is blocked The aerator is blocked	Open the angle valve Clean filter Clean Aerator
Low water flow while the indicator does not flash	The angle valve is not open completely The aerator is blocked The filter is blocked The water pressure is too low	Open the angle valve Clean Aerator Clean filtration system Check the water supply system
Water runs for longer than 1 minute without switching off (indicator does not flash)	Object in sensing range	Remove object

Please contact with distributor or Kohler China Investment Co., Ltd., if the trouble remains after above-mentioned actions are taken. Please do not disassemble the other parts of the faucet freely except installing and replacing batteries.

产品中有害物质含量的说明

回收提示

本产品超过使用期限或经过维修无法正常使用后，不应随意丢弃，请交由有废弃电器电子产品处理资质的企业处理，正确的处理方法请查阅国家或当地有关废旧电器电子产品处理的规定。

有害物质统计表

部件名称	有害物质名称					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
外壳组件	×	○	○	○	○	○
阀体组件	×	○	○	○	○	○
控制盒组件	×	○	○	○	○	○
*电池盒组件	○	○	○	○	○	○
*电池	○	○	○	○	○	○
*交流电源盒	○	○	○	○	○	○
*进水组件	×	○	○	○	○	○
附件类	○	○	○	○	○	○

○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572现行有效版本规定的限量要求以下。

×：表示有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572现行有效版本规定的限量要求。

*：表示部分机型含有该部件。

注：本表格提供的信息是基于供应商提供的数据及科勒公司的检测结果。本产品应用环保设计理念，在当前技术水平下，所有有害物质或元素的使用已经控制到了最低程度，科勒公司会继续努力通过改善现有技术来减少这些物质的使用。



本产品的“环保使用期限”为10年，科勒公司根据产品设计特性指定该期限。只有在本产品使用说明书所述的正常情况下使用本产品时，“环保使用期限”才有效。

Description of Content of Hazardous Substances in Product

Reclaim Indication

When the product exceeds service life or is unable to use after repair, do not throw the product away in the normal trash. Please dispose the waste electronic parts through a qualified reclamation enterprise. Make sure the product is handled properly. Disposing of product must be done in accordance with the local or national government law.

Statistics of Contents of Toxic or Hazardous Substances or Elements

Part name	Toxic or Hazardous Substance or Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Cover Assy.	×	○	○	○	○	○
Valve Assy.	×	○	○	○	○	○
Control Box Assy.	×	○	○	○	○	○
* Battery Box Assy.	○	○	○	○	○	○
* Battery	○	○	○	○	○	○
* AC Power Box	○	○	○	○	○	○
* Water Inlet Assy.	×	○	○	○	○	○
Accessories	○	○	○	○	○	○

○：Indicates that the substance in the material composition is below the high limits of the current requirements in GB/T26572.

×：Indicates that at least one of the homogeneous substance in the material composition is below the high limits of the current requirements in GB/T 26572.

*：Indicate only partial product series contains this substance.

Note: the information provided is based on the supplier data and Kohler inspection results. The product is designed not to hurt the environment. Under current technology, all hazardous materials have been used in the smallest amounts possible. Kohler will strive to reduce the use of these hazardous materials used in this product.



The product “service life for environment protection” is 10 years; Kohler Company will specify product service life based on product characteristics. The product “service life for environment protection” is only effective when the product is used as described in the product specification.