


BEITOU

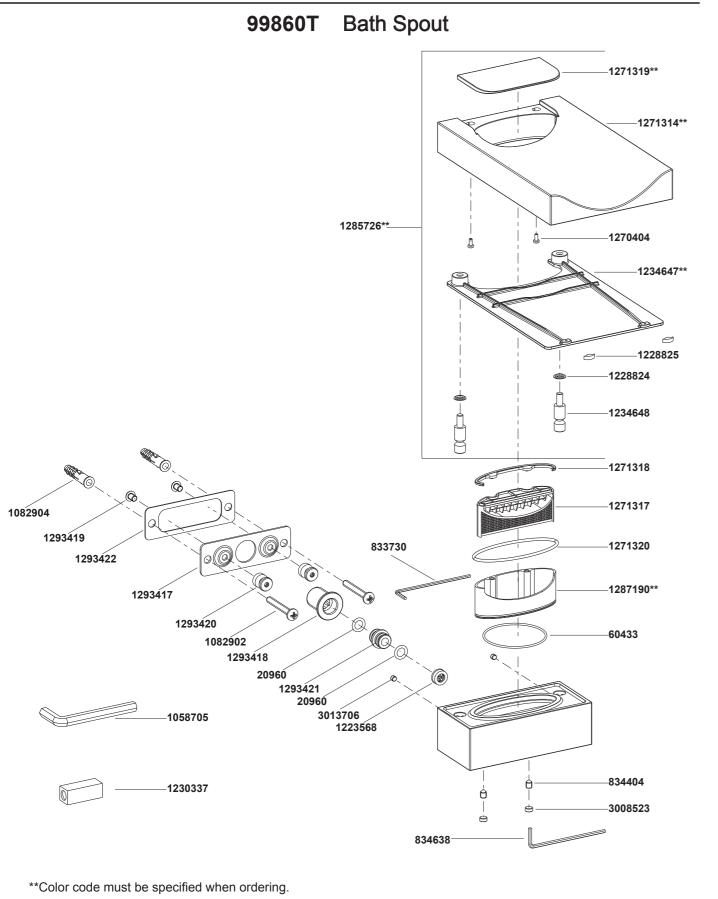

KOHLER® INSTALLATION INSTRUCTIONS

99860T

BEFORE YOU BEGIN

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please leave these instructions for the consumer. They contain important information.


NOTES:

- 1. Flush the water supply pipes thoroughly to remove debris.
- 2. Shut off the water supplies to the fitting.
- 3. Observe local plumbing codes.
- 4. Maximum working pressure for spout: 0.5Mpa(5 bar).

DANGER: Risk of personal injury.

This product can not be used as a shelf or support bar. The misoperation may damage the product, and even cause personal injury.


ROUGH-IN DIMENSIONS

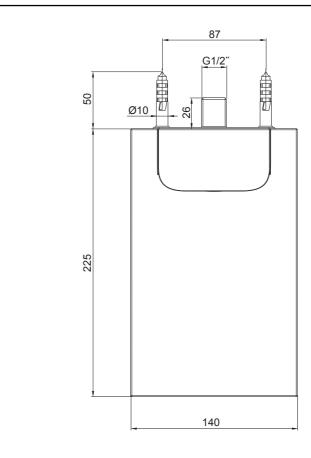

1293806-2A-B


BEITOU

Bath Spout

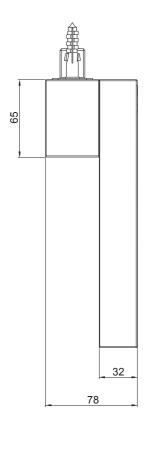



99860T


INSTALLATION

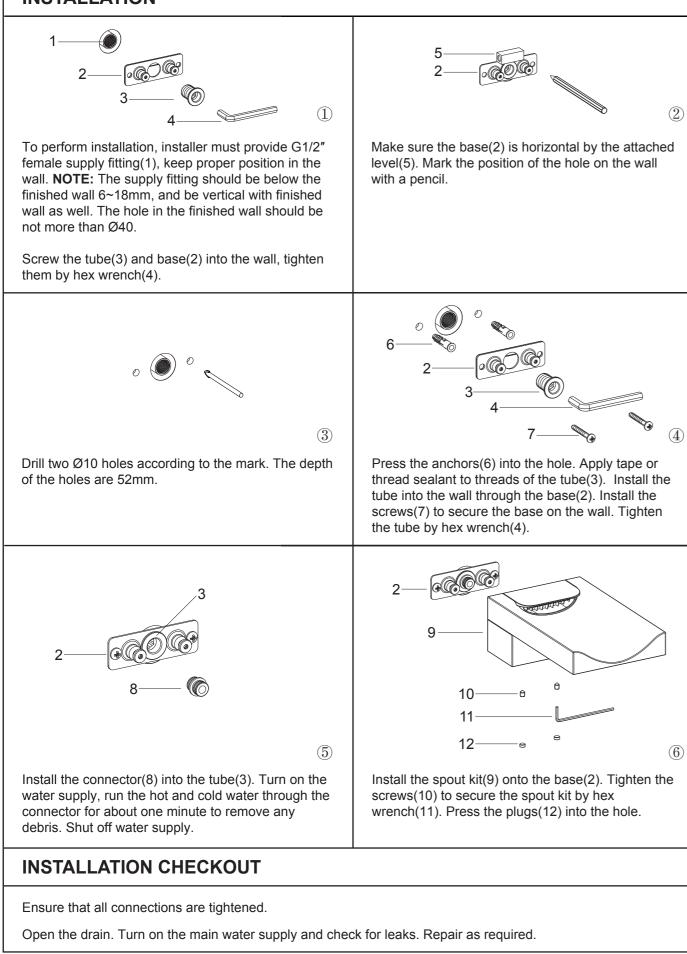

CARE AND MAINTENANCE

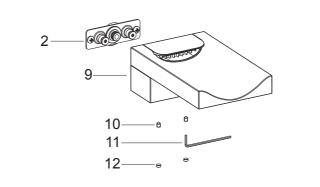

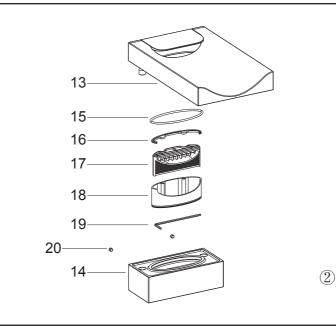

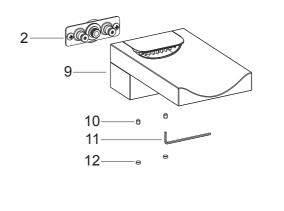

CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc, which could adversely affect the finish and are not recommended for cleaning.

 $(\overline{3})$

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.

Clean Rectifier

(1)

If there is a lot of debris in the supply pipes or the quality of water is bad, it will cause the flow in bad condition. Please clean the filter as following steps:

Turn off the supply water. Take out the plugs(12), remove the screws(10) by hex wrench(11). Remove the spout kit(9).

Take out the screw(20) in the bottom of the spout by hex wrench(19). Uninstall the spout(13) from body(14). Remove the washer(16), rectifier(17) and support ring(18).

Flush the filter of rectifier(17). Check the filter whether is intact, if damaged replace it.

Reassemble the spout and body: put the rectifier(17) and washer(16) into the support ring(18). Put them into the original position. Slide the O-ring(15) onto the support ring. Install the spout into the body, tighten the screw(20) in the bottom of the spout by hex wrench(19).

Install the spout kit(9) onto the base(2). Tighten the screws(10) to secure the spout kit by hex wrench(11). Press the plugs(12) into the hole.