


# **Transfer Switch Accessories**

### **RXT Status Indicator Kit**

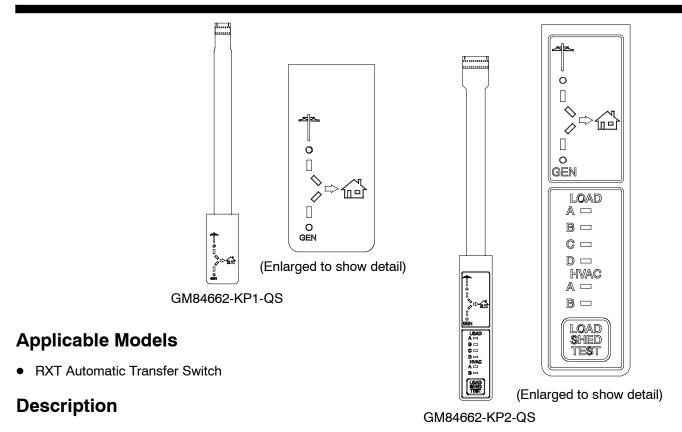

Status Indicator Kits provide LEDs to indicate transfer switch status, including the following:

- Source Available:
  - Utility power (normal)
  - Generator (emergency)
- Transfer Switch Position:
  - Utility (utility power supplying the load)
  - Generator (standby generator supplying the load)
- Six Load Status Indicators (GM84662-KP2-QS only):
  - Four customer-supplied loads
  - Two HVAC loads

The load shed test button (GM84662-KP2-QS only) exercises the load shed relays in the sequence of assigned priority.

Both the **GM84662-KP1-QS** and **GM84662-KP2-QS** status indicator kits are designed only for the Kohler Model RXT automatic transfer switch. The kits will not connect to or operate with any other automatic transfer switch (ATS). The Model RXT transfer switch must be connected to a Kohler generator set equipped with the RDC2 or DC2 controller for proper indicator LED operation.

GM84662-KP2-QS is designed only for use with a combined interface/load management board.

The indicator panel mounts on the outside of the transfer switch for clear visibility. The status indicator kits can be used on transfer switches installed indoors or outdoors. An overhang on the enclosure protects the indicator panel and ribbon cable opening.



KOHLER CO., Kohler, Wisconsin 53044 USA Phone 920-457-4441, Fax 920-459-1646 For the nearest sales and service outlet in the US and Canada, phone 1-800-544-2444 KOHLERPower.com

# **LED Operation**

| _   |              |  |
|---|--------------|--|
| LED   | State/Color  | Indicates  |
| Utility Available                           | On           | Utility power is available                                     |
|   | Off          | Utility power is not available                                 |
| Utility Connected                           | On           | Utility power is connected (ATS in normal position)            |
|   | Off          | Utility power is not connected                                 |
| Generator Available                         | On           | Generator set is running and producing power                   |
|   | Off          | Generator set power is not available                           |
| Generator<br>Connected                      | On           | Generator is connected to the load (ATS in Emergency position) |
|   | Off          | Generator not connected  |
| Loads A through D<br>GM84662-KP2-QS<br>only | Red          | Load disconnected (shed)                                       |
|   | Green        | Load connected (added)   |
|   | Flashing red | Disconnected (test)  |
| HVAC Loads A, B<br>GM84662-KP2-QS<br>only   | Red          | Load disconnected (shed)                                       |
|   | Green        | Load connected (added)   |
|   | Flashing red | Disconnected (test)  |


#### **Dimensions**

| Model          | Item                                   | Dimensions, mm (in.)                 |
|----------------|--|--------------------------------------|
| GM84662-KP1-QS | Indicator panel Ribbon cable length    | 92 x 42 (3.62 x 1.65)<br>254 (10)    |
| GM84662-KP2-QS | Indicator panel<br>Ribbon cable length | 183 x 42 (7.20 x 1.65)<br>252 (9.93) |

### **Kit Contents**

| Kit                                 | GM84662-KP1-QS | GM84662-KP2-QS |
|-------------------------------------|----------------|----------------|
| Description                         | Qty.           | Qty.           |
| Decal, Membrane<br>Status Indicator | 1              | 1              |
| Installation<br>Instructions        | 1              | 1              |

## **Status Indicator Location and Connection**

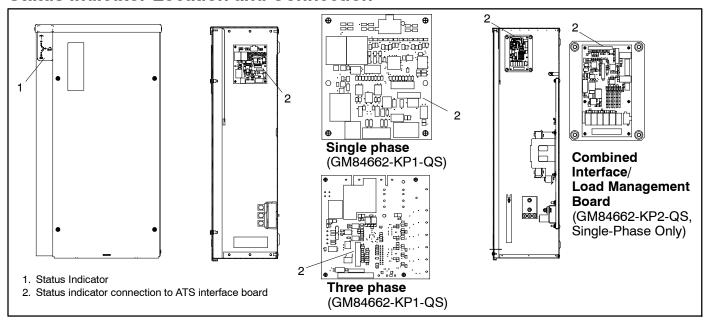

DISTRIBUTED BY:

Availability is subject to change without notice. Kohler Co. reserves the right to change the design or specifications without notice and without any obligation or liability whatsoever. Contact your local Kohler® generator distributor for availability.

© 2013, 2015 by Kohler Co. All rights reserved.