

Tools and Materials

- Flat-blade Screwdriver
- Adjustable Wrench
- Cable Tie (optional)
- Needle Nose Pliers
- Masking Tape

Before You Begin


IMPORTANT! Locate the white label attached to the cold supply hose of the faucet. If the date stamped on the label is after April 15, 2005, DO NOT replace the insert included in this kit. If the date is stamped before April 15, 2005, the insert supplied in this kit should be installed.

- Cover the drain hole to prevent losing faucet components during the installation.

Kit Contents

- Screen washer
- Washer
- Plastic ring
- Seal retainer
- Hose retainer
- Insert
- O-ring
- Nut
- Silicone lubricant

Kit Installation

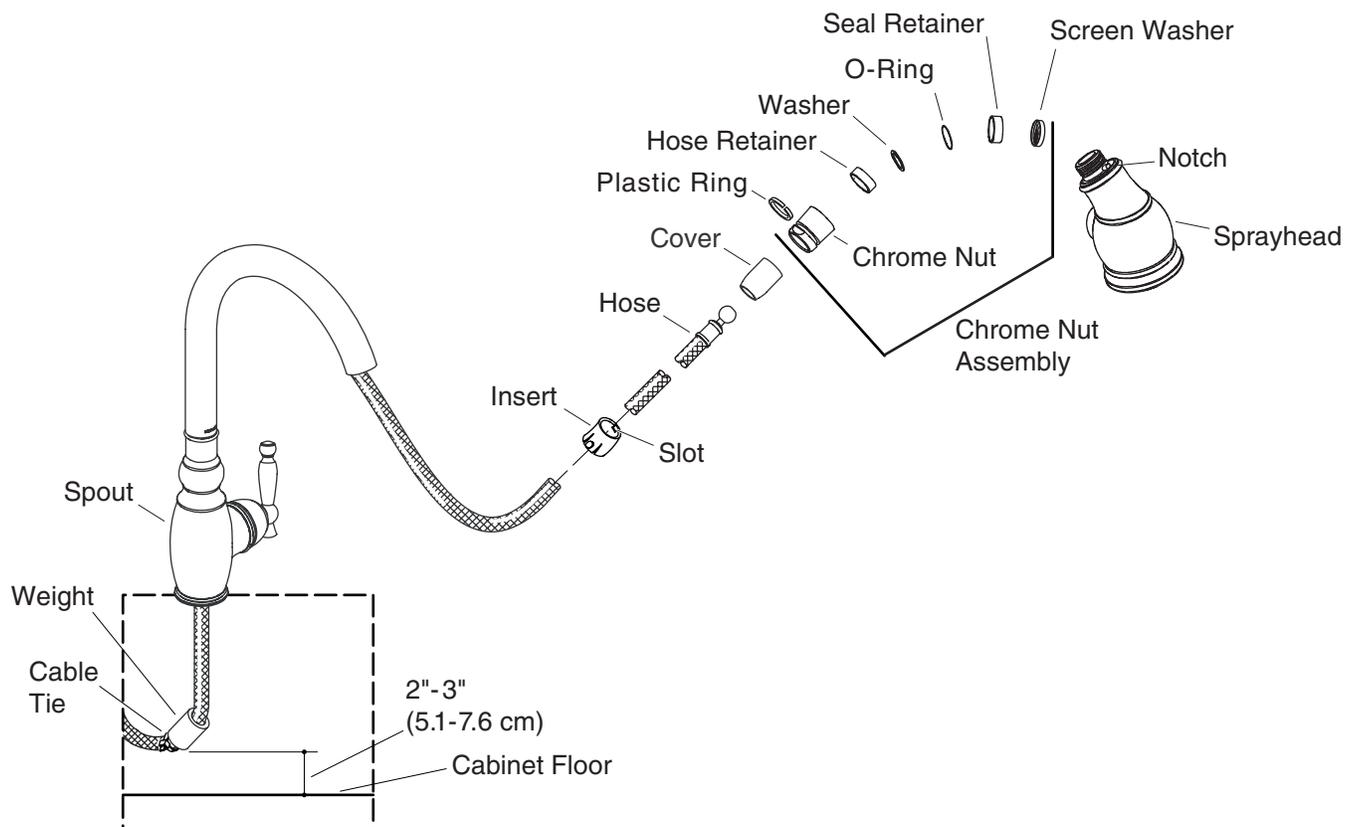

1. Remove the Existing Components

- Fully extend the hose from the spout of the faucet. Secure the hose with masking tape (or a similar method) to prevent the hose from retracting back into the spout.

IMPORTANT! Remove the insert only if the date of manufacture is before April 15, 2005. If the date is after April 15, 2005, proceed to the *Remove the Remaining Components* subsection.

Remove the Insert (if applicable)

- Push the tab on the insert against the spout with a flat-blade screwdriver. This will force the insert out of the spout.
- Pull the insert out of the spout with a needle nose pliers.

Remove the Remaining Components

- Unthread the sprayhead from the chrome nut.
- Remove and discard the screen washer, seal retainer, O-ring, and washer from inside the chrome nut.
- Remove the hose retainer from inside the chrome nut using a flat-blade screwdriver. Be careful not to damage the finish to the ball of the hose. Discard the seal retainer.
- Remove and discard the chrome nut and insert.

2. Install the New Components

- Assemble the new components inside the new chrome nut as follows: hose retainer, washer, O-ring, seal retainer, then screen washer. Set the assembly aside.
- Place the new insert with the tab toward the spout around the hose. Do not seat the insert until instructed to do so.
- Apply a light film of silicone lubricant to the ball of the hose with your finger.
- Press the chrome nut assembly onto the ball of the hose until the assembly clicks into place.
- Thread the sprayhead onto the chrome nut assembly until finger tight. Turn the sprayhead another 1/4 turn using an adjustable wrench. Do not overtighten.
- Install the plastic ring into the groove of the chrome nut.

3. Complete the Installation

For All Installations

- Remove the masking tape from the hose, then retract the hose into the spout.

NOTE: If the hose does not properly retract, ensure the hose and weight is 2" (5.1 cm) to 3" (7.6 cm) above the cabinet floor. If adjustment is needed, reposition the weight to this height. Secure a cable tie around the hose and below the weight. Do not overtighten the cable tie.

Seat the Insert (if applicable)

- Engage the small slot on the sprayhead into the notch on the insert.
- Align the tab on the insert with the hole in the spout, then gently push the sprayhead into the spout to engage the insert into the spout.

For All Installations

- Check for leaks. Adjust as needed.