

9038T 9039T 9040T 花洒托架

安装之前

所有的资料是按最新出版的产品资料编写而成。科勒公司保留任何时候不经通知即可改变产品特性、包装或产品可供类型的权利。

说明书包括重要的安装、保养及清洁方面的内容，请把这些资料交给用户阅读。


BEFORE YOU BEGIN

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.


Please leave these instructions for the consumer. They contain important information.

安装尺寸


ROUGH-IN DIMENSIONS

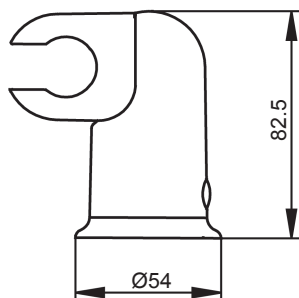

9038T

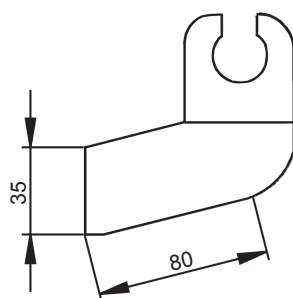

9039T

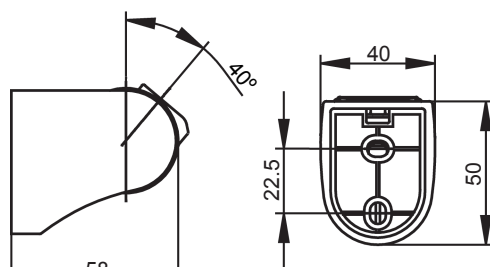


9040T

安装步骤

INSTALLATION

对于9038T

在墙面选一合适的位置，来安装托架。先将固定销(2)从托架(1)上扣下，把塑料套(4)取出。将托架内腔中的自攻螺钉(3)和胀塞(5)取出。在墙壁上标上安装托架底板位置的记号，按记号钻两个洞。将胀塞插入洞中，然后按照图示将自攻螺钉通过塑料套旋入胀塞中，用螺丝刀拧紧。将托架内壁的凹槽对准塑料套的凸台插入，然后将固定销按入托架的固定孔中。

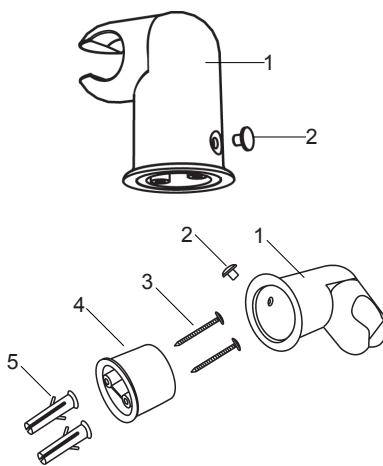


For 9038T

Determine a suitable location on the finished wall to install the bracket. Take off the locking pin(2) from the bracket(1). Take out the self-tapping screws(3) and anchors(5) from the inside of the bracket by pulling out the plastic sleeve(4). Mark bracket base mounting hole location on the wall. Drill two holes in the finished wall as required. Press the anchors into the holes and screw the self-tapping screws into the anchors through the sleeve. Tighten them by screwdriver. Align the bulge of the bracket with the slot of the sleeve. Slide the bracket onto the sleeve and insert the locking pin into the hole of bracket and sleeve.

对于9039T

在墙面选一合适的位置来安装托架。把托架盖(6)与托架底板(7)撬开。在墙壁标上安装托架底板位置的记号。在墙上钻两个孔，以便于安装胀塞及螺钉。旋紧螺钉，使托架固定贴紧墙壁，用托架盖盖住底板。

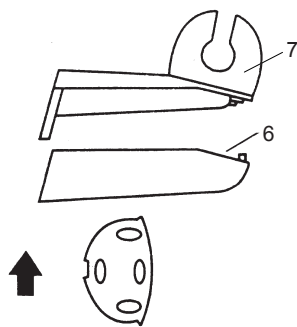


For 9039T

Determine a suitable location on the finished wall to install the bracket. Pry between the bracket cover(6) and base(7) to separate the two parts. Mark bracket base mounting hole locations on wall as shown. Drill two holes in the finished wall as required, for the installation screws and anchors. Tighten screws to secure bracket base to the finished wall. Replace bracket cover onto bracket base.

对于9040T

在墙面选一合适的位置来安装托架。根据孔距在墙面标记钻孔的位置，依据胀塞(8)直径打孔，安装胀塞。旋紧螺钉(11)，使底座(9，平面朝上)固定紧贴墙壁。将托架(10)扣在底座上，使凸台嵌入豁口。

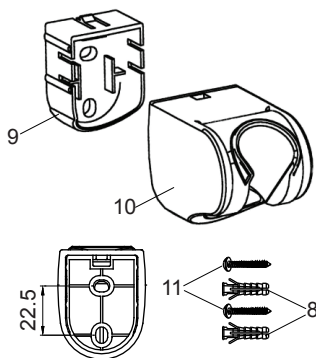

For 9040T

Determine a suitable location on the finished wall to install the bracket. Mark bracket base mounting hole locations on the wall according to the dimension. Drill two holes on the finished wall, the holes should match the anchors(8). Install the anchors. Tighten screws(11) to secure bracket base(9). Put the bracket(10) onto the bracket base and lock by stopper.

清洗说明

适用于所有加工处理过的表面：以中性肥皂水清洗镀层表面，再以干净的软布彻底擦干整个表面，许多清洁剂，比如氨水、去污粉及洁厕灵等，会对电镀表面造成伤害，切忌使用。

有磨损性的清洁用具或清洁剂也不可使用于科勒牌的水龙头及其配件上。

CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.