

BEFORE YOU BEGIN

开始之前

- Congratulation on your purchase of this high quality Bathroom Accessory. Before proceeding with the installation, please carefully read this installation instruction in order to ensure proper care and assembly of this accessory.
- Please keep this installation instruction for future reference.
- **The light must be in the vertical surface which is 0.6 meters away.**



Prior to drilling into walls, check there are no hidden electrical wires, cables or water supply pipes with the aid of an electronic detector. If you use power tools do not forget:

1. Wear eye protection.
2. Unplug equipment after use.

- 首先恭喜您购买到了高档的卫浴产品，为了使您正确保护和组装产品，在您安装之前请详细阅读此说明书。
- 请保留此说明书以备参考。
- 此灯必须位于**0.6米**的竖直平面之外。





警示：在钻孔之前，请借助电子探测仪确认墙内是否有电源线，通讯光缆或者水管之类的东西。如果使用电钻的话请勿忘记以下两点：

1. 请戴上防护镜。
2. 用完设备后关掉电源。

ROUGHING-IN


尺寸图

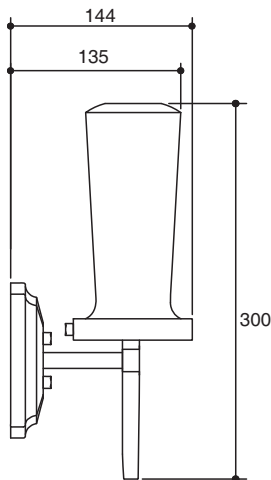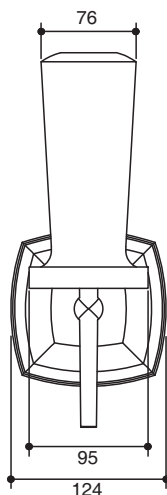

UNIT : mm
单位：毫米

科勒(中国)投资有限公司
上海市闸北区江场三路158号 邮编：200436

INSTALL THE MOUNTING PLATE 安装安装背板

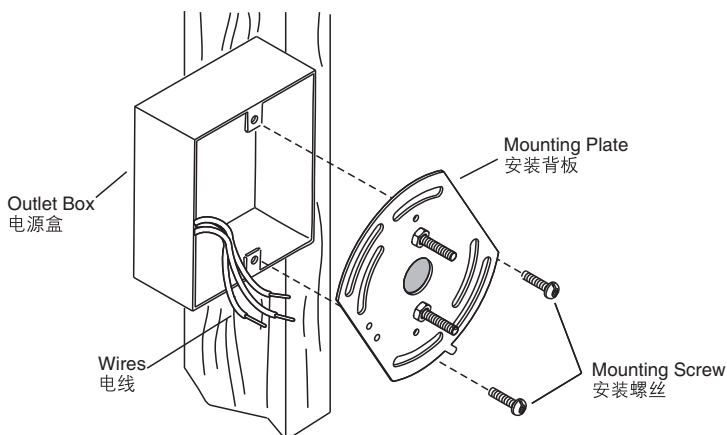


DANGER: Risk of personal injury. To avoid possible electrical shock, the electricity must be turned off at the circuit breaker or fuse box before attempting any installation procedure.



注意危险：防止安装过程中受伤。为了预防潜在的触电危险，在任何安装步骤之前，必须切断断路器或保险丝盒电源。

- If you have not already done so, Turn off the electricity the circuit breaker or fuse box.
- Carefully pull the wiring out from the outlet box and allow the wires to hang down.
- Position the mounting plate on desired place, the flat side of the mounting plate flat against the wall.
- Adjust the mounting plate, so the two screw of the mounting plate on the same vertical plane.
- Securely tighten the mounting plate to the wall with the mounting screw.
- 如果您还未进行此项操作，请立即切断断路器或保险丝盒电源。
- 小心将电源盒中的电线拉出，使电线散挂在外。
- 将安装背板放在希望安装灯具的位置，平整表面靠墙。
- 调整安装背板，使背板上两个螺栓在同一个竖直面上。
- 使用安装螺丝将安装背板紧固于墙壁之上。

CONNECT THE ELECTRICAL WIRES 连接电线

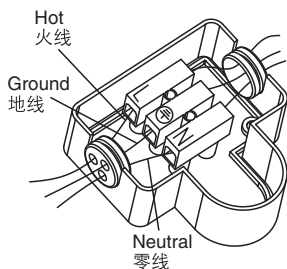

Fixture 接线座	Outlet 电源线
	Ground 地线
N	Neutral 零线
L	Hot 火线

⚠ DANGER: Risk of personal injury. To avoid possible electrical shock, the outlet box must be properly grounded.


- Attach the ground wire to the ground wire terminal of the terminal box.
- Attach the hot wire to the hot wire terminal of the terminal box.
- Attach the neutral wire to the hot neutral terminal of the terminal box.
- Verify all the terminals are securely fastened and wire strands are not exposed.
- Carefully place the terminal box into the outlet box.
- Position the back Plate of the fixture over the mounting plate.

⚠ 注意危险: 防止安装过程中受伤。为了预防潜在的触电危险，电源盒必须有效接地。

- 将电源线的地线与接线座的接地端子相连。
- 将电源线的火线与接线座的火线端子相连。
- 将电源线的零线与接线座的零线端子相连。
- 检查确保所有的接线端子都已安全紧固，并且没有电线暴露在外。
- 将接线座小心的放入电源盒。
- 将灯座置于安装背板之上。

INSTALL THE WALL SCONCE

安装壁灯

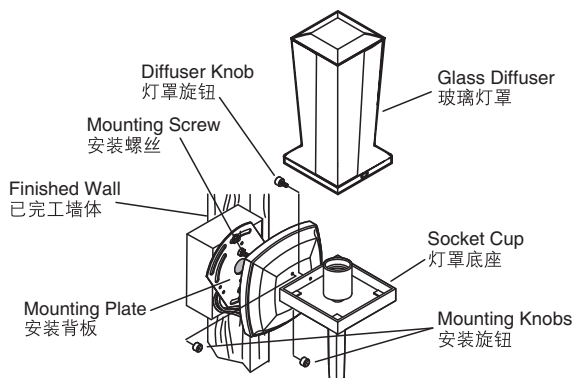

- Secure the fixture to the mounting plate with the screws. The fixture should be flush against the finished wall.
- Insert the bulb into the fixture.
- Position the glass diffuser on the socket cup.
- Hand tighten the diffuser knob.
- Turn on the main electrical supply from the main fuse or circuit breaker.
- Check for proper operation.

- 使用螺丝将底座固定于安装背板之上，灯座应与已完工墙体紧贴。
- 将灯泡装入灯座。
- 将玻璃灯罩安装于底座上。
- 手动固定灯罩旋钮。
- 打开断路开关或保险丝的主电源。
- 检查灯具能否正常工作。