KOHLER®

安装说明书
INSTALLATION INSTRUCTIONS
浴室配件
BATHROOM ACCESSORIES
K-11797T/K-11798T/K-11799T

BEFORE YOU BEGIN

- Congratulation on your purchase of this high quality Bathroom Accessory. Before proceeding with the installation, please carefully read this installation instruction in order to ensure proper care and assembly of this accessory.
- Please keep this installation instruction for future reference.

⚠ Prior to drilling into walls, check there are no hidden electrical wires, cables or water supply pipes with the aid of ar, electronic detector. If you use power tools do not forget:
1. Wear eye protection.
2. Unplug equipment after use.

开始之前

- 首先恭喜您购买到了高档的卫浴产品，为了使您正确保护和组装产品，在您安装之前请详细阅读此说明书。
- 请保留此说明书以备参考。


⚠ 警示：在钻孔之前，请借助电子探测仪确认墙内是否有电源线，通讯光缆或者水管之类的东西。如果使用电钻的话请勿忘记以下两点：

1. 请戴上防护镜。
2. 用完设备后关掉电源。


ROUGHING-IN

尺寸图


UNIT : mm
单位：毫米

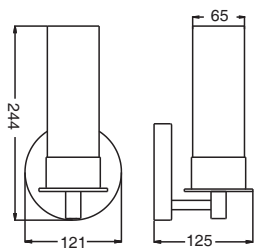

K-11797T

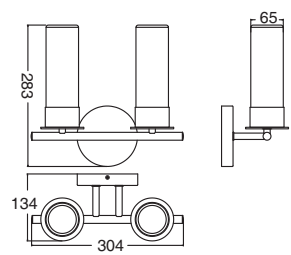

K-11798T

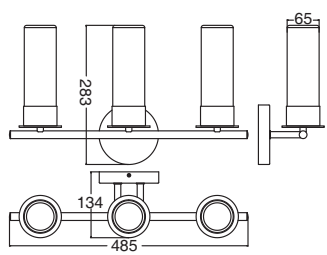

K-11799T

科勒(中国)投资有限公司
上海市闸北区江场三路158号 邮编：200436

© 版权为科勒中国有限公司所有，2009
© Copyright Kohler China Ltd., 2009

PREPARE THE SITE

NOTE:

1. For the sake of your safety, please turn off the electricity before installation, dismantling or cleaning.
2. The installation is suggested to be executed by certified electrician, and the ground wires Should be properly connected.

安装准备

注意：

1. 为了你的安全，请在安装与拆卸或清洁此产品前，需先关掉电源。
2. 建议由有资格的电工安装并确保连接好地线。

INSTALLATION

1. Remove the mounting plate from the backplate of the fixture. Securely tighten the mounting plate to outlet box with the mounting screws. (If there is no outlet box, drill a proper hole on the wall, insert wall plugs into it and then tighten the mounting plate on the wall.)
2. Remove the four screws of the outlet box, than connect the electrical wires with the wires of the fixture on the wire holder. See Figure 1 and below.

安装步骤

1. 从灯体背板上拆下安装板，并将安装板用接线盒螺丝固定在接线盒上（如果没有接线盒，则可先在墙上钻个适合的孔，再塞入胶苗并用木牙螺丝将安装板固定在墙上）。
2. 先将接线盒四个螺丝拆卸,再将墙上供给的电源线与灯体的电线连接在接线座上，方式如下及参照指示图:


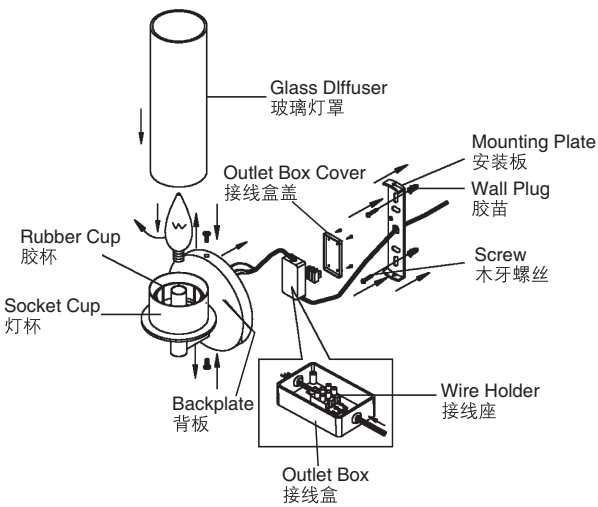


Fig #1
图**1**

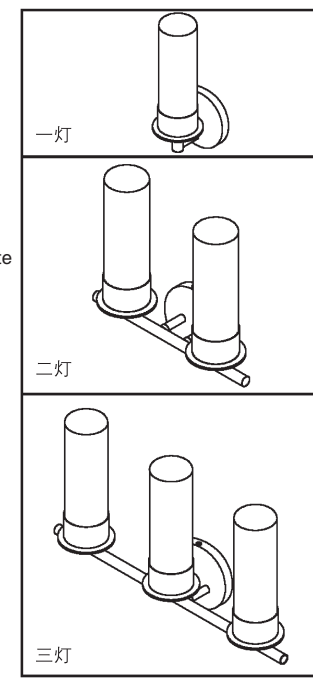

Mark “L” means hot wires.
Mark “N” means neutral wires.
Mark “⏚” means ground wires.

L 标记代表火线
N 标记代表零线
⏚ 标记代表地线

2.1 Loose the wire-tightening screws of the wire holder with the slotted screwdriver for certain space in order to insert the electrical wires into the connecting holes. Tighten the screws with the screwdriver till the wires are well fixed.

2.2 After connecting the wires, securely screw the threaded clamp to fix the position of the wires.

3. Arrange the wires neatly and then fix the backplate of the fixture on the tightened mounting plate with screws.

4. Insert the bulb of E14 spec which can be contained in the glass diffuser into the socket cup. (Please note that the power rating of the bulb should within the limit of power rating which listed on the label.)

5. Carefully set the glass diffuser into rubber cup in the socket cup, and make sure that it is fixed on the socket cup securely.

6. After the installation and checking, power on and a scone is ready to be used.

Note: Please use glass sealant to fill the clearance between the upper part of the backplate and the finished wall if the installation place is suspected to have water sprayed in. That is to prevent the water from entering into the backplate and cause any possible accident.

2.1 先将接线座上固定电线的螺丝用一字螺丝刀松离一定位置，以便将电源线塞入接线孔，用螺丝刀拧紧固定线螺丝，直至锁紧电线为止。

2.2 接好线后，再将接线盒盖重装在接线盒子上并用螺丝锁紧。

3. 将连接好的电线整理后，用拆卸下螺丝再将灯体的背板安装在已固定的安装板上。

4. 将E14规格的且可容纳在灯罩内的灯泡安装在灯座上（请注意，灯泡的功率数不可大于标贴规定的额定功率数）。

5. 将玻璃灯罩小心地套入灯杯内的胶杯上，并要确保灯罩完全地固定在灯杯上。

6. 安装及检查完毕后，打开电源，则可正常使用。

提示：为了更安全，当你要将此灯安装在会有水喷洒到的地方，则请用玻璃胶将背板上半部位与墙壁之间的间隙填密封，以防水进入背板内。