


SERVICE KIT INSTRUCTION

The purpose of the Deep Rough-In Kit is to provide mounting hardware for thicker than normal finished deck thickness that are between 1/2" and 1".


This deep rough-in kit applies to K-7533-CA Kohler 3/4" High-Flow deck mount valves*.

* Valve body and handle escutcheon threads must be 1-15/16-16.

1. See the figure below for range of rough-in depth possible.

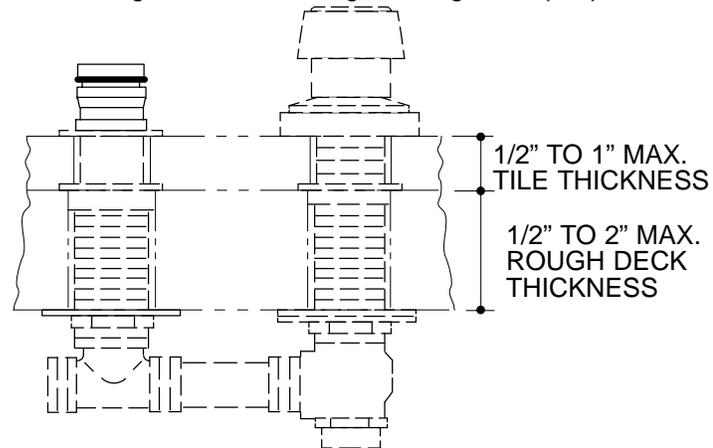

2. Thread supply tube with O-rings through brass washer and into tee assembly. Be careful not to cut or damage the O-rings. Thread bonnet/stem extension assembly over valve body.

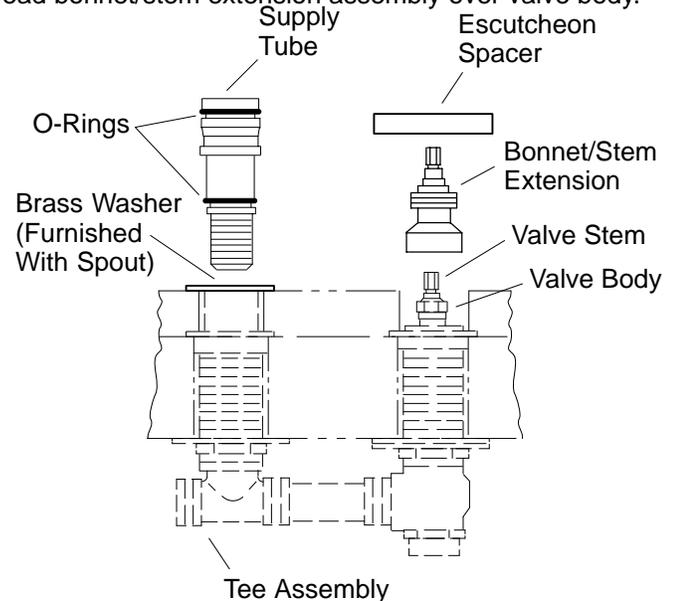

3. Place escutcheon spacer over extension and continue with handle installation per instruction packed with handle.