


TOOLS REQUIRED:

- Hacksaw
- File
- Tubing Reamer or 1-1/4" Bit

NOTE: Servicing requires access to aspirator standpipe.

1. Remove damaged standpipe and any attached tubing down to the tee/elbow fitting. Ream tubing from tee/elbow or replace tee/elbow if necessary.

2. Align the replacement check valve assembly. Allow 1" (2.5cm) clearance between the top of the check valve and the underside rim of the bath. Allow 1" (2.5cm) of tubing at bottom for insertion into tee/elbow.

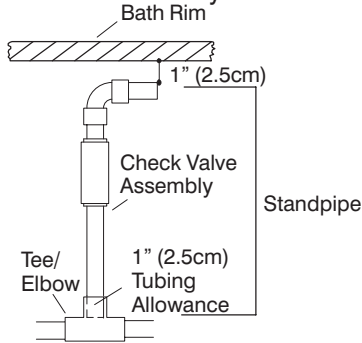

3. Mark and cut tubing to size. Cement tubing into tee/elbow using PVC solvent cement.
4. Operate whirlpool and check for leaks. Seal if necessary.