


7685K WALL-MOUNT BATH FAUCET
7686K WALL-MOUNT BATH SHOWER FAUCET

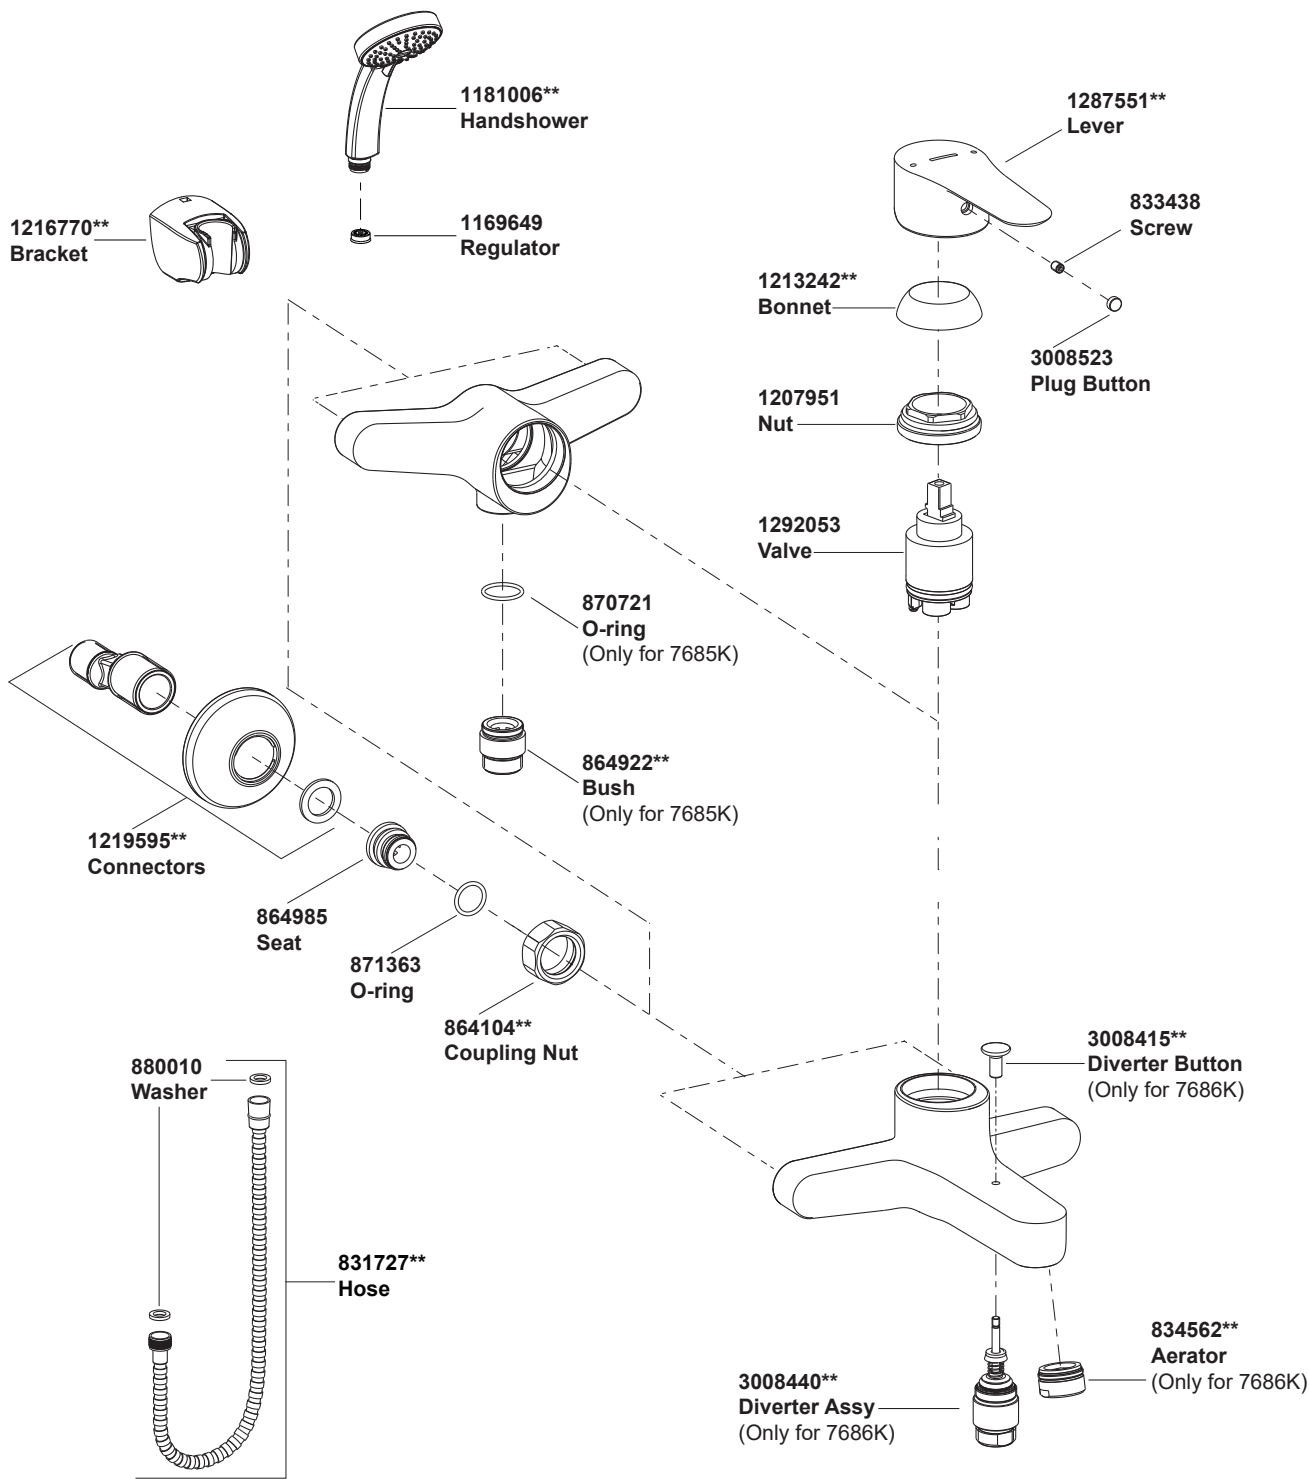

**Color code must be specified when ordering

7685K WALL-MOUNT BATH FAUCET
7686K WALL-MOUNT BATH SHOWER FAUCET

BEFORE YOU BEGIN

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please leave these instructions for the consumer. They contain important information.


NOTES:

1. Observe local plumbing codes. Inspect the supply tubing for damage. Replace if necessary.
2. The minimum inlet water pressure for diverter is 0.05MPa(0.5bar).
3. The highest working pressure for handshower & showerhead is 0.5MPa(5bar). If it exceeds 0.5MPa(5bar), a pressure reducer is needed. The highest water and environment temperature is 60°C. Please keep the handshower, shower head and shower arm away from heater, or it may become damaged and cause injury to the user.

HANDLE OPERATION

Lift the handle gently. Turn clockwise for hot water, counter-clockwise for cold water. For 7686K, diverter turns clockwise for shower. Shut off the faucet, turn counter-clockwise until it stops for bath spout.

ROUGH-IN DIMENSIONS

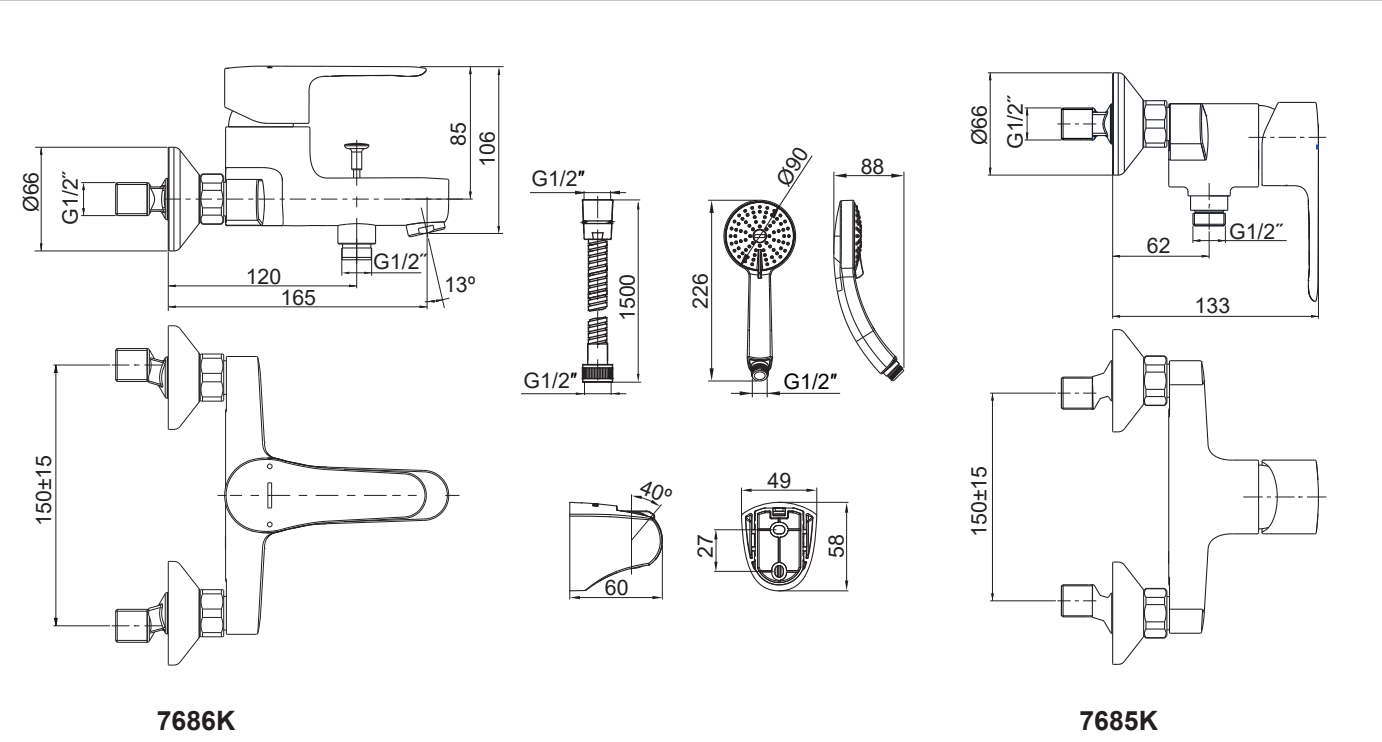

INSTALLATION

How to Install the Faucet

To perform installation, installer must provide G1/2" female supply fittings(1), spaced 150mm apart horizontally. The supply fittings should be vertical and not beyond the finished wall. Hot supply pipe must be located on the left.

Flush the water supply pipes thoroughly to remove debris.


Apply enough tape or suitable sealant on threads of offset connectors(2). Install the two offset connectors into the hot and cold supply pipes.

Adjust the center-to-center distance between the connectors to 150mm horizontally. They should extend 29mm beyond the finished wall. Thread the escutcheons(3) onto the connectors until they are against the finished wall.

Put washers(5) into nuts(4) of the faucet. Thread the nuts to connectors.

NOTE: When tighten the nuts, use strap wrench or soft cloth between product and regular wrench to protect the finish.


Insert the water flow regulator(9) into the handshower(10) if needed. Connect the faucet outlet(7) and the handshower with hose(8) and washers(6).

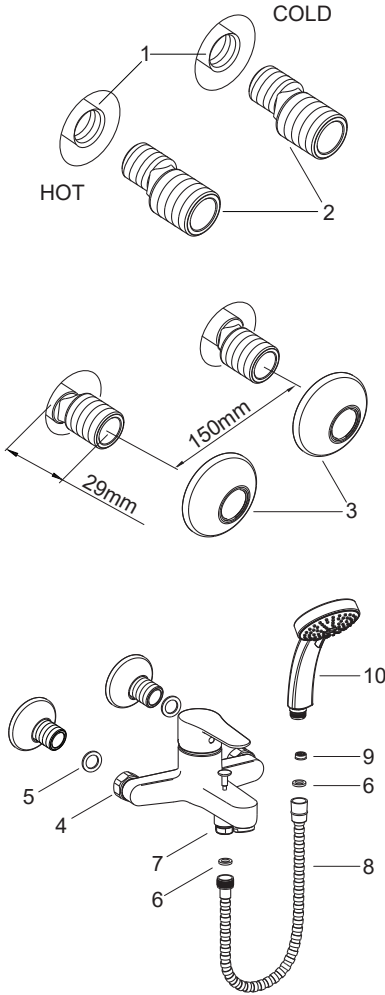

How to Install the Bracket

Determine a suitable location on the finished wall to install the bracket. Mark bracket base mounting hole locations on the wall according to the dimension. Drill two holes on the finished wall, the holes should match the anchors(11). Install the anchors.

Tighten screws(12) to secure bracket base(13, flat side upward). Put the bracket(14) onto the bracket base and lock by stopper.

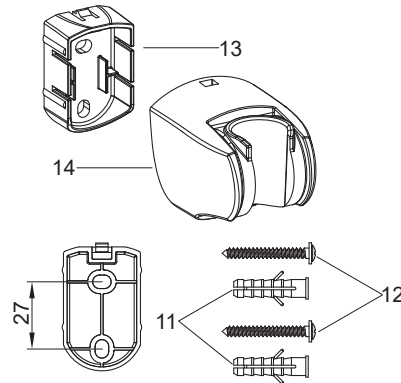


INSTALLATION CHECKOUT

Ensure that all coupling nuts are tight.

Ensure that the lever handle is in the off position.

Turn on the main water supply, and check for leaks. Repair as needed.

Remove the aerator(15) and handshower(10). Run hot and cold water through the faucet for about one minute to remove any debris. Check for leaks. Remove any debris from the aerator assembly. Shut the faucet off, and reinstall the aerator assembly and handshower.

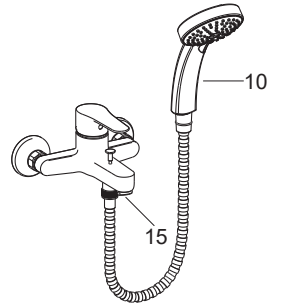

CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.