

TOOLS REQUIRED:

- 1/8" Hex wrench

INSTALLATION:

1. See Fig. #1 . Position the grip rail so that the holes line-up with the studs on the bath. **NOTE:** The set screws should face toward the floor.

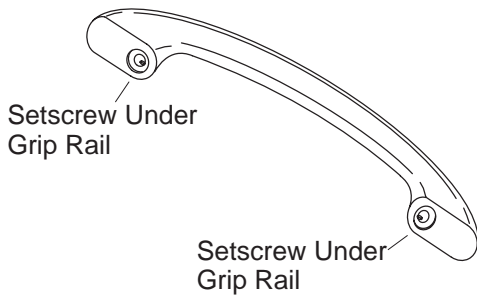


Fig. #1

2. See Fig. #2. Push grip rail on studs until it contacts the bath surface and tighten set screw with 1/8" hex wrench.

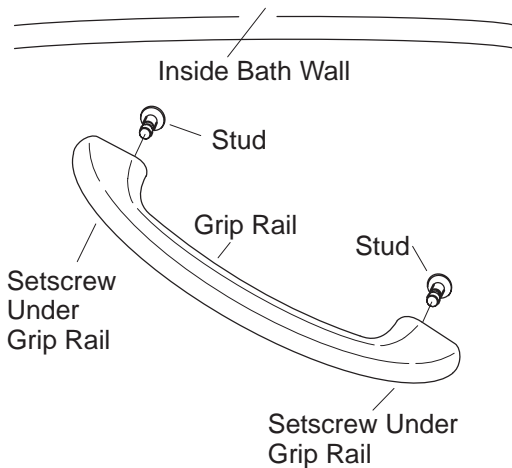


Fig. #2

SERVICE PARTS

ITEM NO.	PART NO.	DESCRIPTION
1	77407	Rail
2	52306	Set Screw

Specify finish when ordering.

