


99460T-4E2 Wall Mount Bath Shower Faucet
99463T-4E2 Wall Mount Shower Faucet

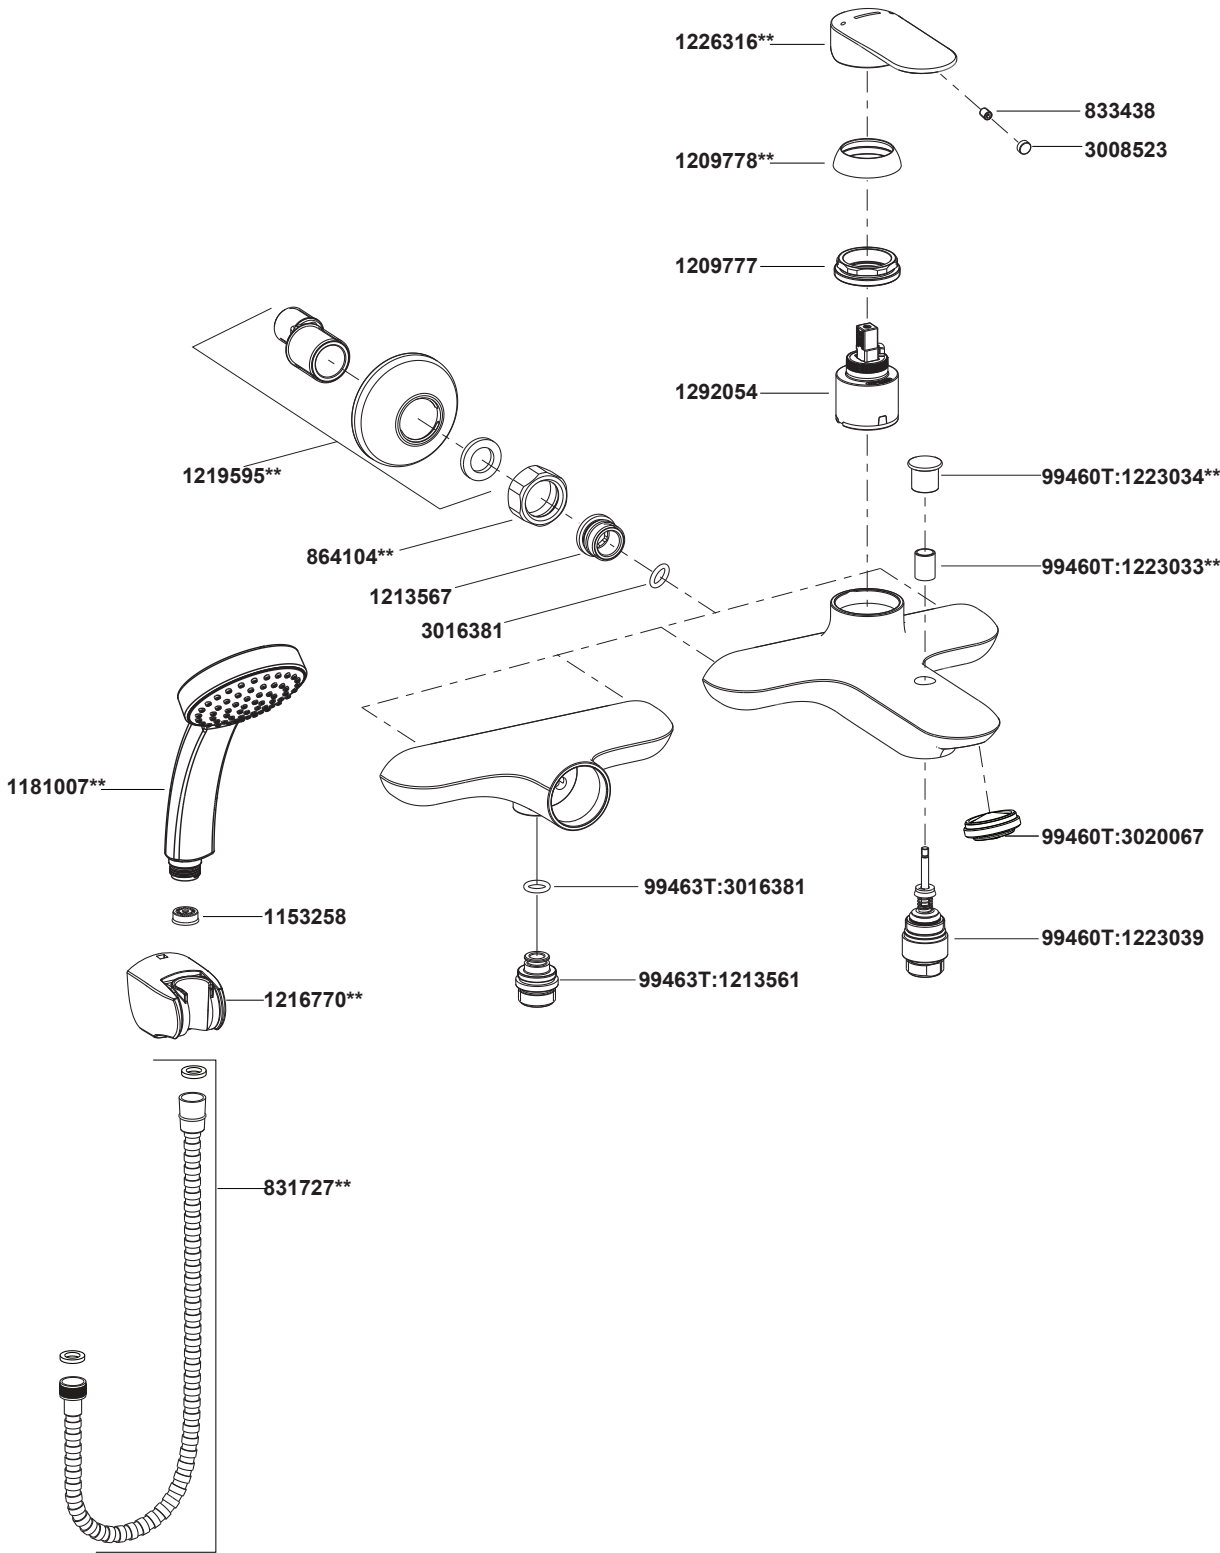

**Color code must be specified when ordering.

99460T-4E2 Wall Mount Bath Shower Faucet
99463T-4E2 Wall Mount Shower Faucet

BEFORE YOU BEGIN

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice. Please leave these instructions for the consumer. They contain important information.


NOTES:

1. Flush the water supply pipes thoroughly to remove debris.
2. Inspect the supply tubing for damage and leakage. Replace and maintain as necessary.
3. Observe local plumbing codes.
4. The minimum inlet water pressure for the diverter is 0.05MPa(0.5bar).
5. The highest working pressure for handspray is 0.5MPa(5 bar). If it exceeds 0.5MPa(5 bar), a pressure reducer is needed. The highest water and environment temperature is 60°C. Please keep handspray, showerhead and the shower arm away from heater, or it may become damaged and cause injury to the user.

HANDLE OPERATION

Lift handle gently. Turn clockwise for hot water, turn counter-clockwise for cold water. For 99460T-4E2, Water flows out from spout when faucet diverter is in the normal position; lift the diverter gently, turn clockwise for handspray; shut off the faucet, turn counter-clockwise until it stops.

ROUGH-IN DIMENSIONS

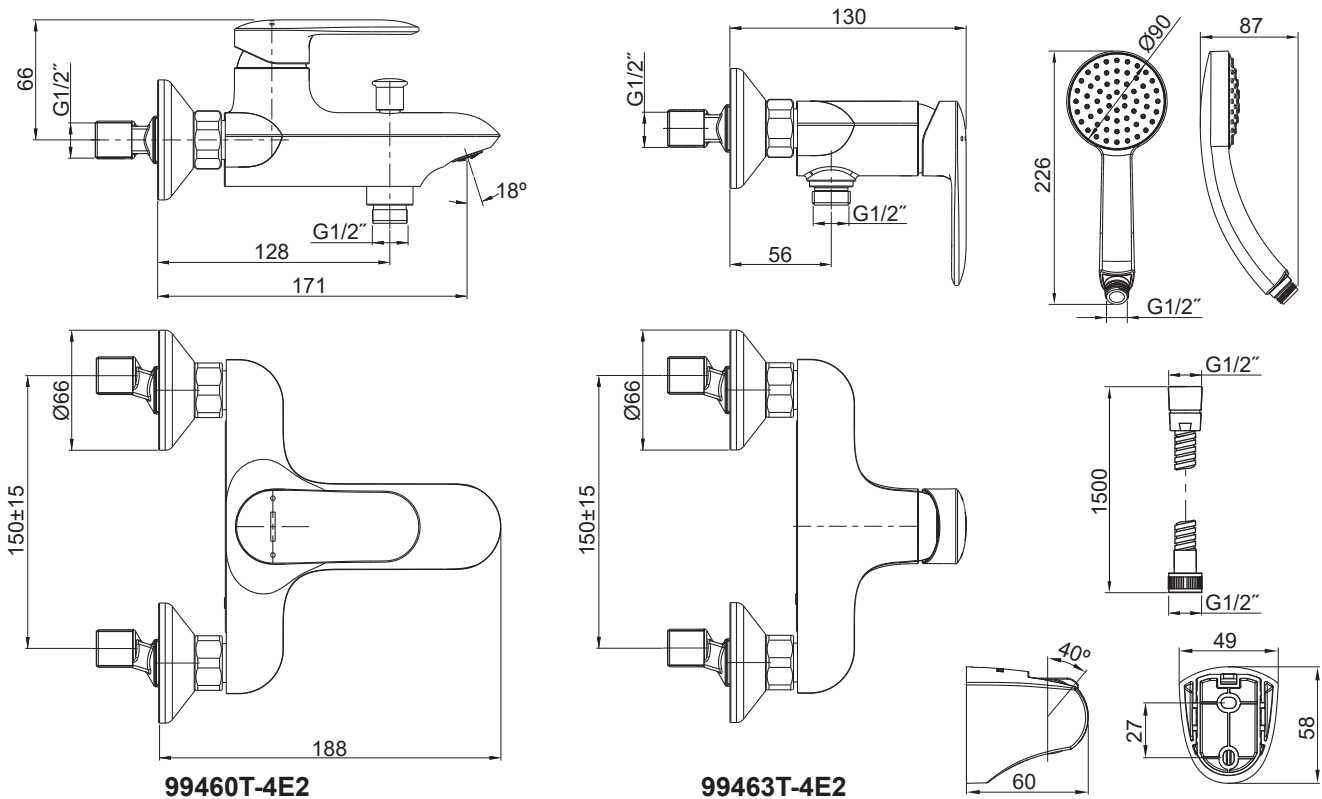


INSTALLATION

How to Install Faucet

Use appropriate thread sealants or thread tape on pipe threads. Install the two offset connectors(1) into the hot and cold supply pipes.

Adjust the center-to-center distance between the connectors to 150mm and horizontally. They should extend 27mm from finished wall. Thread the escutcheons(2) onto the connectors until they contact the finished wall.


Put the washers(3) into the nuts(4). Thread the nuts onto the connectors(1) and tighten by wrench.

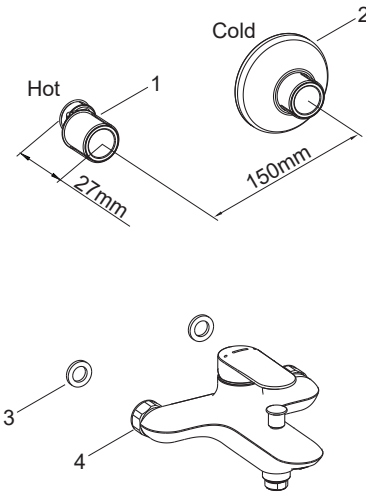

How to Install the Handspray

Remove the guard on the outlet connector firstly.


Put the washer(5) into end A of the hose(6), and then connect to the faucet outlet(7). Put the washer(8) into end B of the hose, and install the regulator(9) into the handspray(10) inlet if needed, then connect end B of the hose to the handspray inlet.

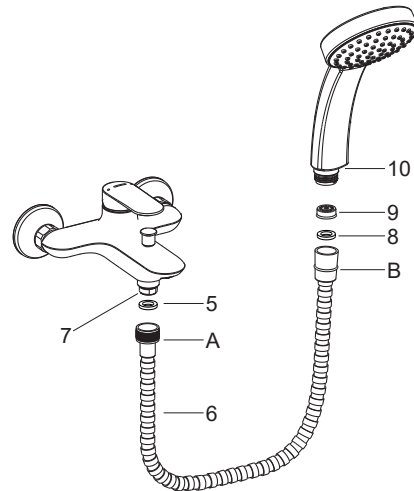

How to Install the Bracket

Determine a suitable location on the finished wall to install the bracket. Mark bracket base mounting hole locations on the wall according to the dimension. Drill two holes on the finished wall, the holes should match the anchors(11). Install the anchors.

Tighten screws(12) to secure bracket base(13, flat side upward). Put the bracket(14) onto the bracket base and lock by stopper.

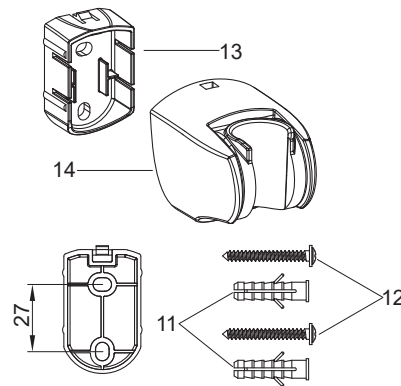

INSTALLATION CHECKOUT

Ensure that all coupling nuts are tight.


Ensure that the handle is in the off position.

Turn on the main water supply, and check for leaks. Repair as needed.

99460T-4E2: Bath Shower Faucet


Remove the handspray(10). Remove the aerator(16) by coin. Run hot and cold water through the faucet for about one minute to remove any debris. Check for leaks. Remove any debris from the aerator.

Lift the diverter(15) gently, turn clockwise for handspray. Run hot and cold water through the faucet for about one minute to remove any debris. Check for leaks. Shut off the faucet, and reinstall the handspray and aerator.

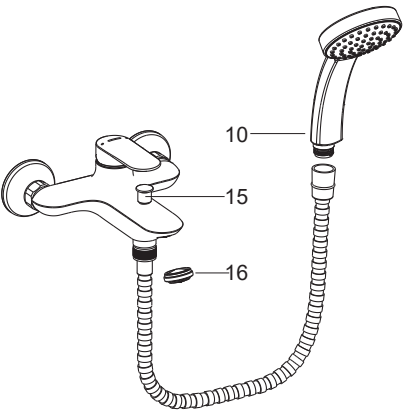

99463T-4E2: Shower Faucet

Remove the handspray(10). Run hot and cold water through the faucet for about one minute to remove any debris. Check for leaks. Shut off the faucet, and reinstall the handspray.

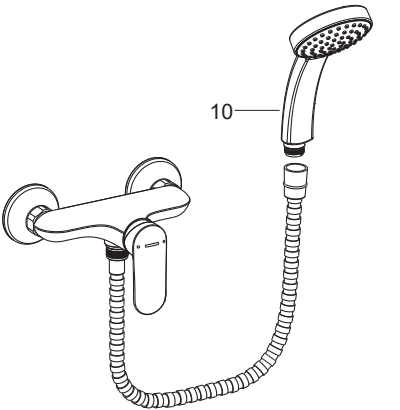

CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc, which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.