


12885T-B4 Deck Mount Bath Faucet

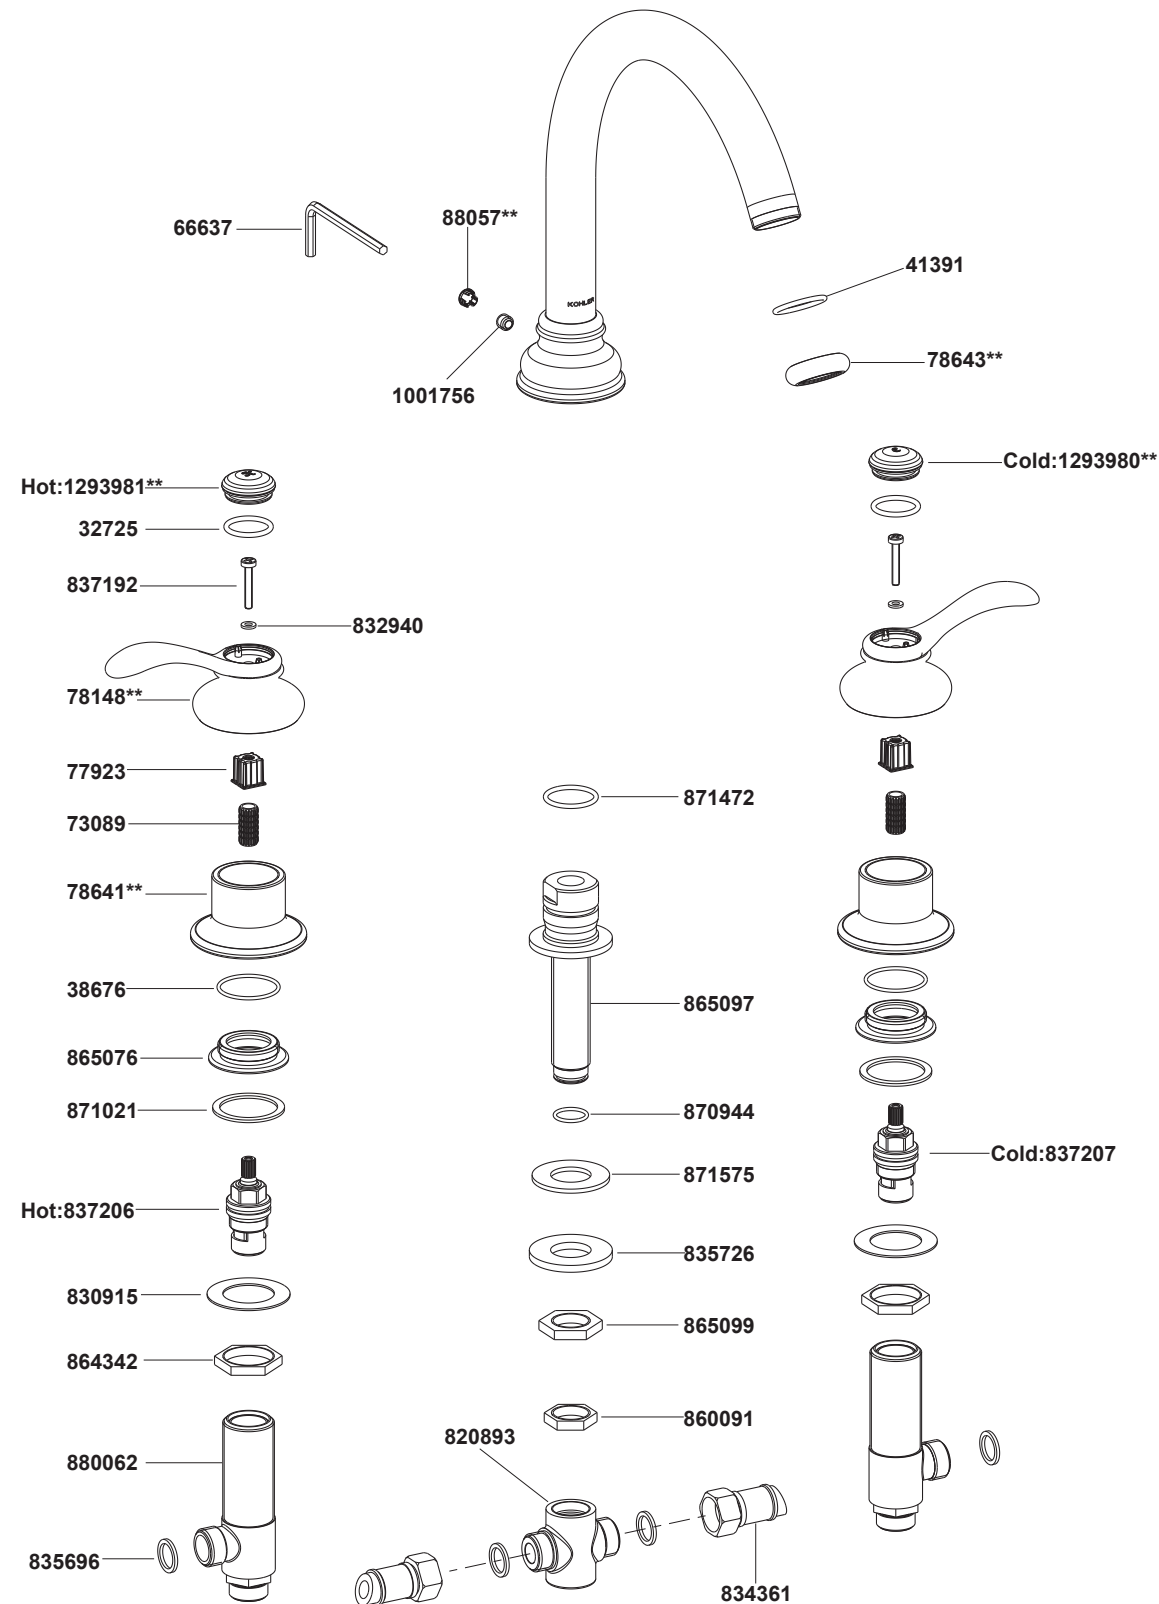

****Color code must be specified when ordering.**

NOTE: For all Asia pacific regions (excluding China) add SP (SPxxxxxxx**) in front of the part number when ordering.

12885T-B4 Deck Mount Bath Faucet

BEFORE YOU BEGIN

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please leave these instructions for the consumer. They contain important information.


NOTES:

1. Shut off the water supplies to the fitting.
2. Inspect the supply tubing for damage. Replace as necessary.
3. Observe local plumbing codes.
4. If possible, install this faucet before installing the tub.
5. This product contains natural jade material. Do not contact lipstick and other easy dyeing cosmetics.

HANDLE OPERATION

Left handle opens with one-quarter turning counter-clockwise. Right handle opens with one-quarter turning clockwise.

ROUGH-IN DIMENSIONS

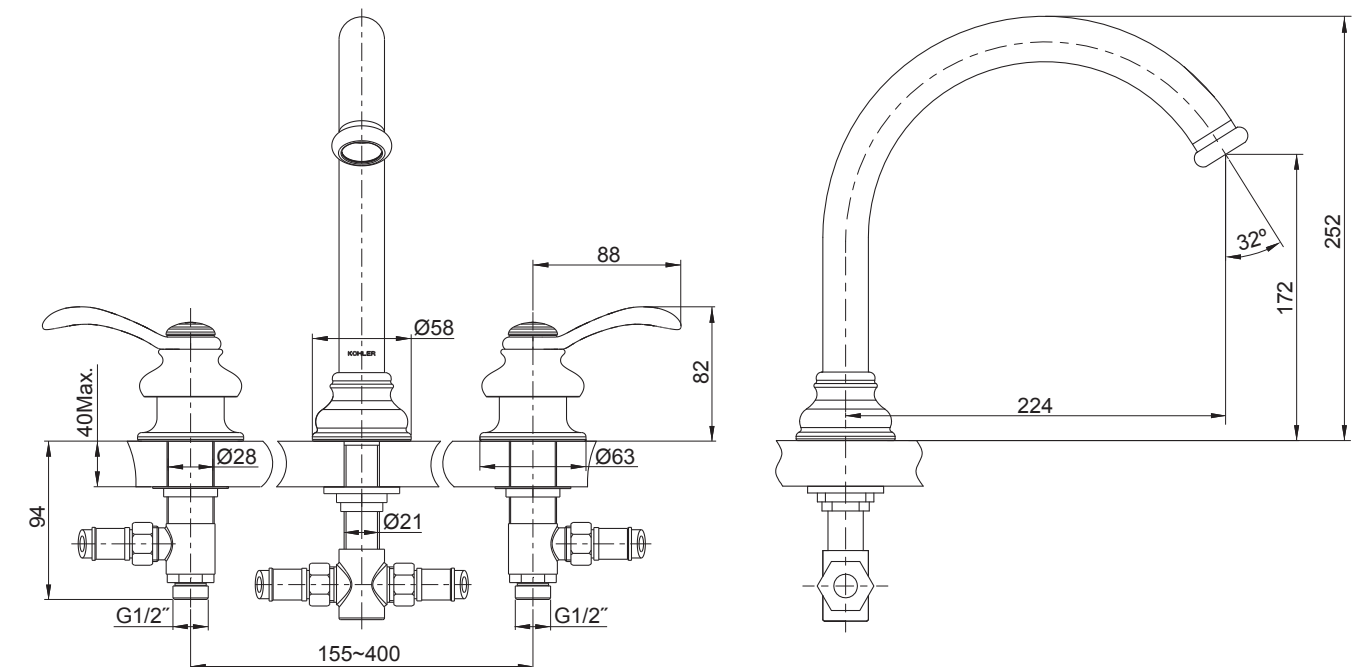


INSTALLATION

How to Install the Shank

Remove the parts from the shank(1) and retain them according to the following order: supply tee(5), nut(4, 3) and washer(2). Fit the shank to the center hole of tub.

Install the washer(2), nut(3, 4), and wrench to tighten nut(3), then tighten nut(4).

Thread supply tee to the shank of the unit kit until hand-tight.

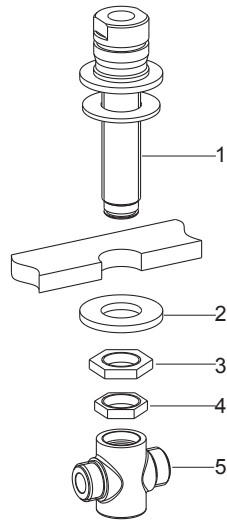

How to Install the Side Bodies


Remove the parts from the side bodies and retain them according to the following order: escutcheon(12), nut(11), washer(10).

Put the washers into the nuts of the hoses(8). Connect the side bodies and center tee(5) with hoses as shown in the drawing.

NOTE: Install the valve body with blue mark on the right when facing the front of the faucet. For easy installation, loosen the supply tee properly by unscrewing it, but not more than 180 degrees. Ensure that the water inside the hoses flow smoothly. The hoses(8) should be only used here.

Insert side bodies(9) with washers(6) and nuts(7) through mounting holes from the bottom of the deck or bath tub rim.

Put the washer(10) onto each side body, tighten the nut(11, with flange side down) and escutcheon(12). Wrench to tighten nut(7).

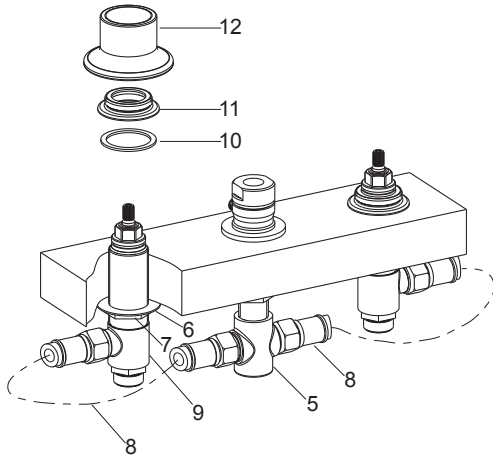


How to Install the Handles and Spout

Adjust the valves so that they are in the closed position. Press the stem extensions(13) and the handle kits(14) onto the side bodies. Put the washers(17) on the screws(16), then screw them into the valve bodies through the holes of the handle kits. Install the plugs(15) on the top of the handle kits. Be sure that the red one on the left and the blue one on the right.

Insert the spout(18) to the shank until its escutcheon contacts the deck. Tighten the screw(19) by hex wrench provided, then insert the plug button(20) into rear hole.


The following configuration shown is the correct position for the installed spout and handles when closed.

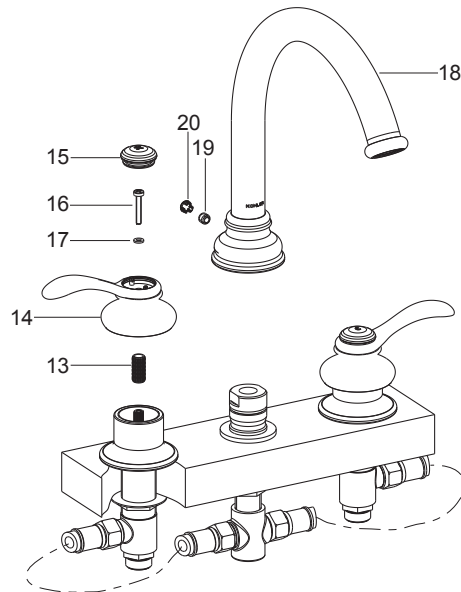

INSTALLATION CHECKOUT

Ensure that all connections are tight.

Open the drain. Turn on the main supply and check for leaks. Repair as needed. Open both hot and cold valves and run water through the spout to remove any debris. Turn the valve off.

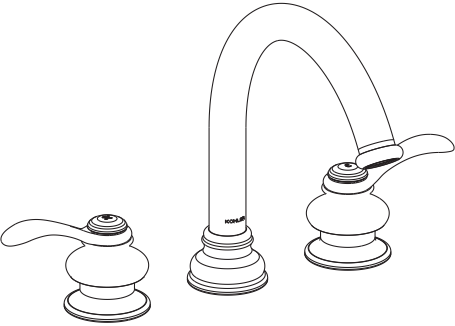

CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc, which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.