


# Fast Fix Kit

## 1836.457

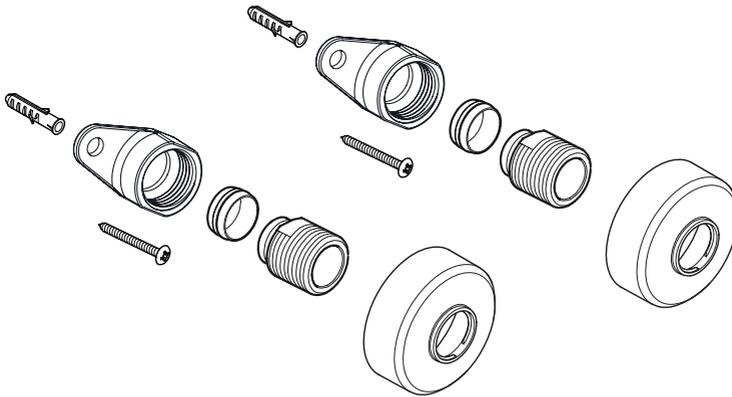

**Must be fitted by a competent tradesperson.  
These instructions must be left with the user**


**Genuine Mira Spare Parts**

*Showering perfection*


***mira***  
SHOWERS

## Installation of the Bar Valve Fast Fix Kit


1. Installation of this product must be carried out in accordance with these instructions by qualified, competent personnel.
2. The plumbing installation must comply with all national or local water regulations and all relevant building regulations, or any particular regulation or practice specified by the local water supply company.

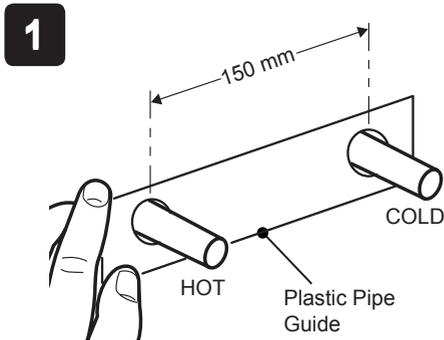


Fit the plastic pipe guide over the inlet pipes. Level the pipe guide and secure to the wall to hold in position. **Leave the guide in place and finish the wall.**

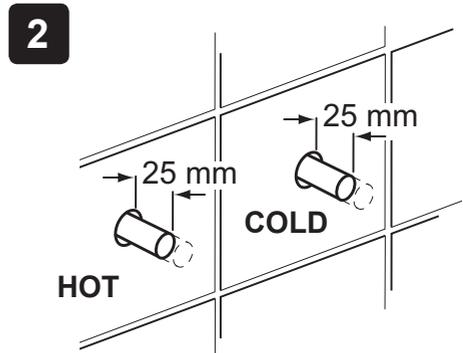

Make sure that the pipework has been installed correctly and that it protrudes 25 mm from the finished wall surface.

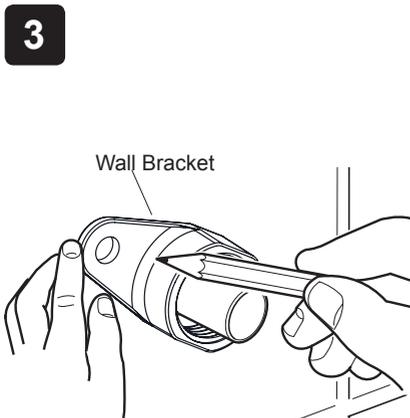


Hold the wall bracket in position and mark the position of the fixing holes.

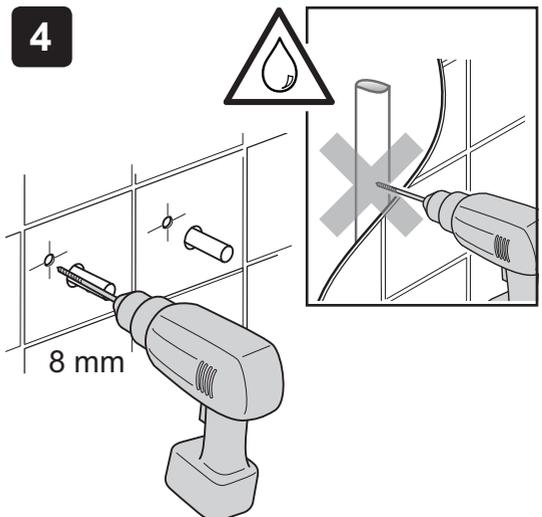


Drill the fixing holes using an 8 mm diameter drill.

5

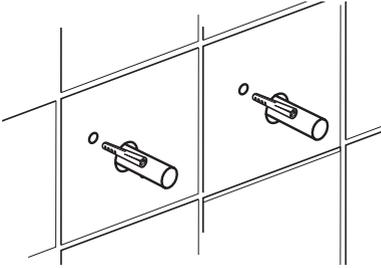

Install the wall plugs.


6

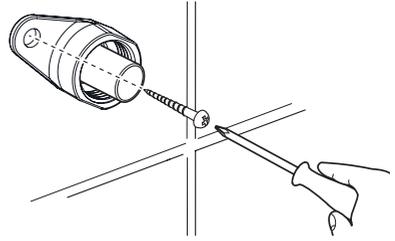

Install the fixing screws (supplied) and tighten.


**Note!** If alternative screws are used ensure they are non corrosive

7

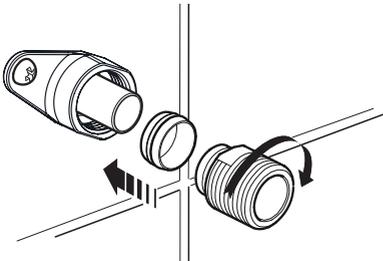


Install the olives and the connectors. Tighten finger tight and then another 1/4 to 1/2 turn.

8

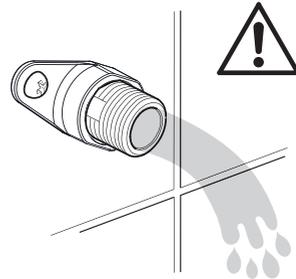

Turn on the water supply and flush the pipework.


9

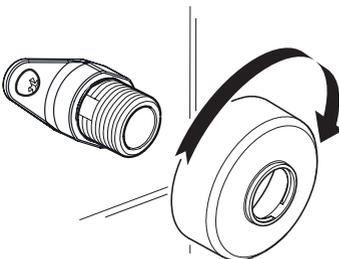

Install the concealing plates.

10


**Note!** Bar valve may differ from the one shown, but the installation procedure is the same.

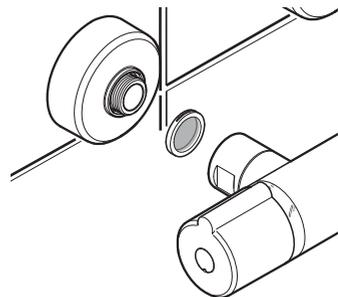

Assemble the bar valve with a sealing washer / filter in each inlet and attach to the wall bracket.

**Note!** Connections are: **Hot-Left, Cold-Right.**

11

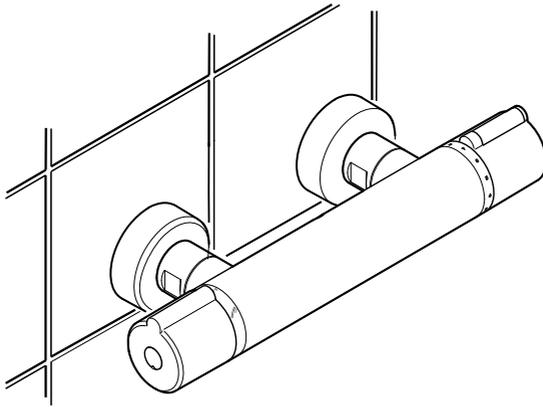

Tighten the connections, turn on the water supply and check for leaks.



0800 001 4040



Visit website: [www.mirashowers.co.uk/contactus](http://www.mirashowers.co.uk/contactus)

***mira***  
SHOWERS