

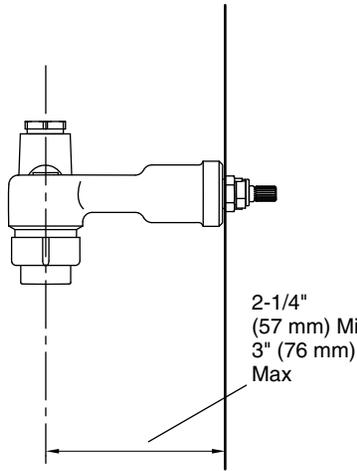
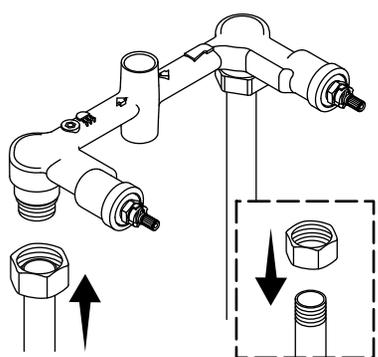
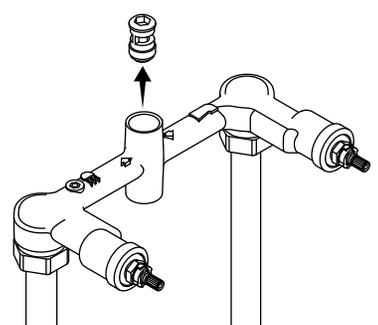
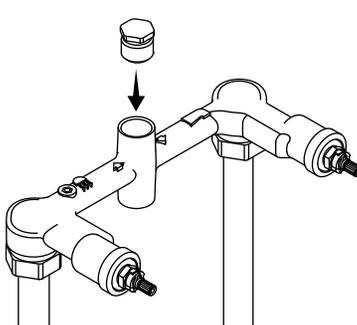


KALLISTA®

Installation Guide

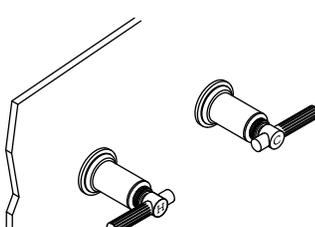

Plus:
1/2" Copper
Supply Tubing

<p>Record your model number.</p>	<p>Important Information Follow all local plumbing and building codes.</p>	<p>Roughing In</p>  <p>2-1/4" (57 mm) Min 3" (76 mm) Max</p>	<p>1 Install 1/2" hot and cold copper supply tubing. Install screwdriver stop valves, if needed.</p> 	<p>2 Remove the aspirator from the yoke using a 3/8" hex wrench.</p> 
<p>3 Install a plug in the showerhead pipe opening.</p> 	<p>4 Complete the handle installation according to the manufacturer's instructions.</p> 			

Questions? Problems? For additional assistance, please contact
KALLISTA's Customer Service Department at 1-888-4-KALLISTA
(1-888-452-5547) or kallista.com.