


78020T-B4/B4A/B8/B9

Recessed Shower Only Trim & Valve

78021T-B4/B4A/B4AMU/B8/B9

Recessed Bath Shower Trim & Valve

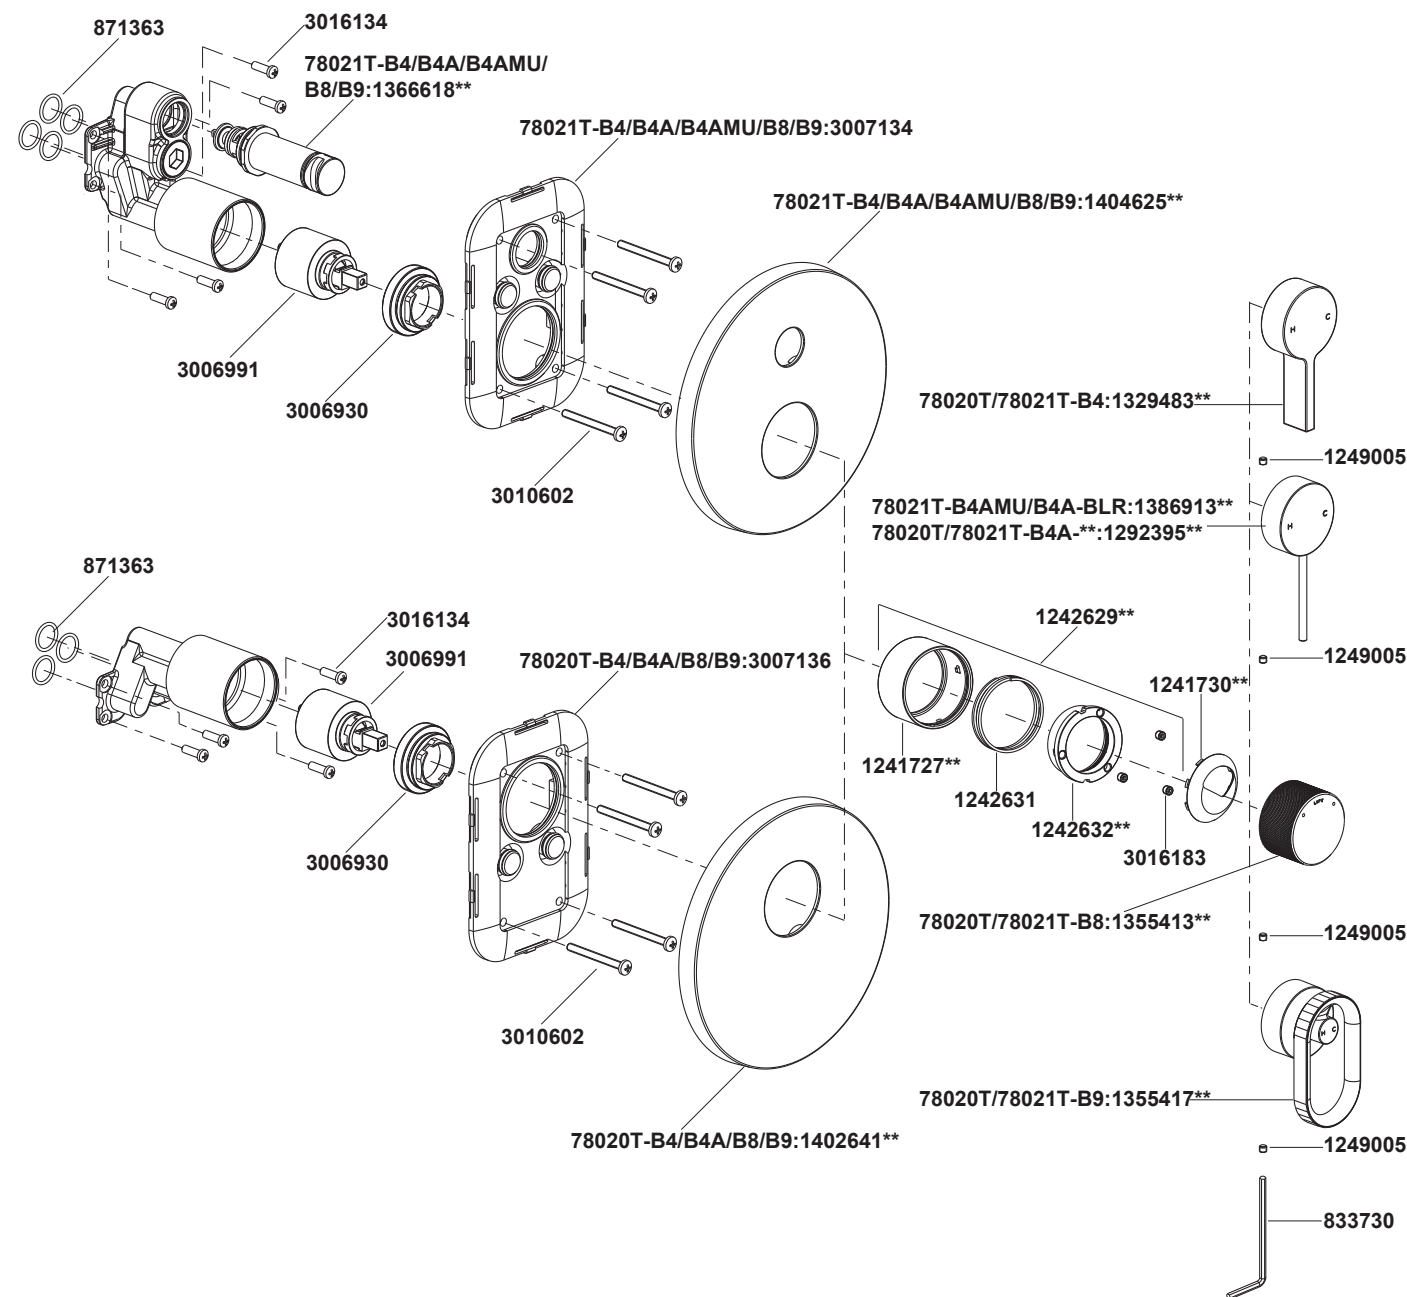

**Color code must be specified when ordering.

78020T-B4/B4A/B8/B9

Recessed Shower Only Trim & Valve

78021T-B4/B4A/B4AMU/B8/B9

Recessed Bath Shower Trim & Valve

BEFORE YOU BEGIN


All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please leave these instructions for the consumer. They contain important information.


NOTES:

1. Flush the water supply pipes thoroughly to remove debris.
2. Inspect the supply tubing for damage and leakage. Replace and maintain as necessary.
3. Observe local plumbing codes. Shut off the main water supply.
4. Check for leaks before covering the pipes, repair as needed.
5. Please ensure only apply water pressure test on the product, and empty the air in pipe and faucet thoroughly before the test. Please ensure test pressure below 0.8MPa(8bar) and test duration within 30 minutes.


ROUGH-IN DIMENSIONS

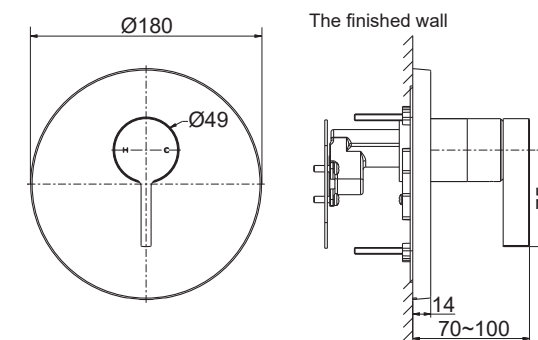


78020T-B4

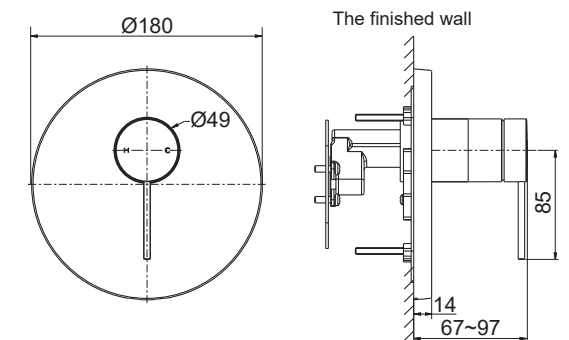


78020T-B4A

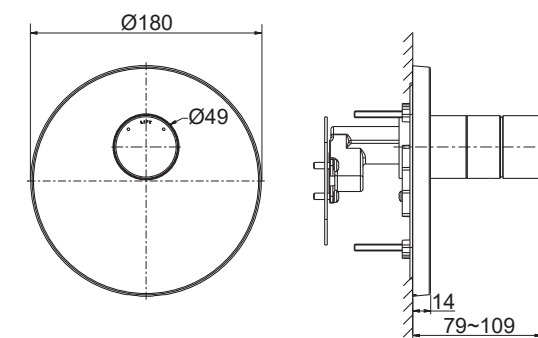




78020T-B8

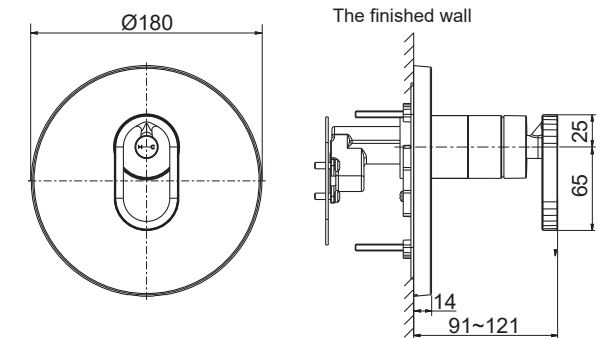


78020T-B9

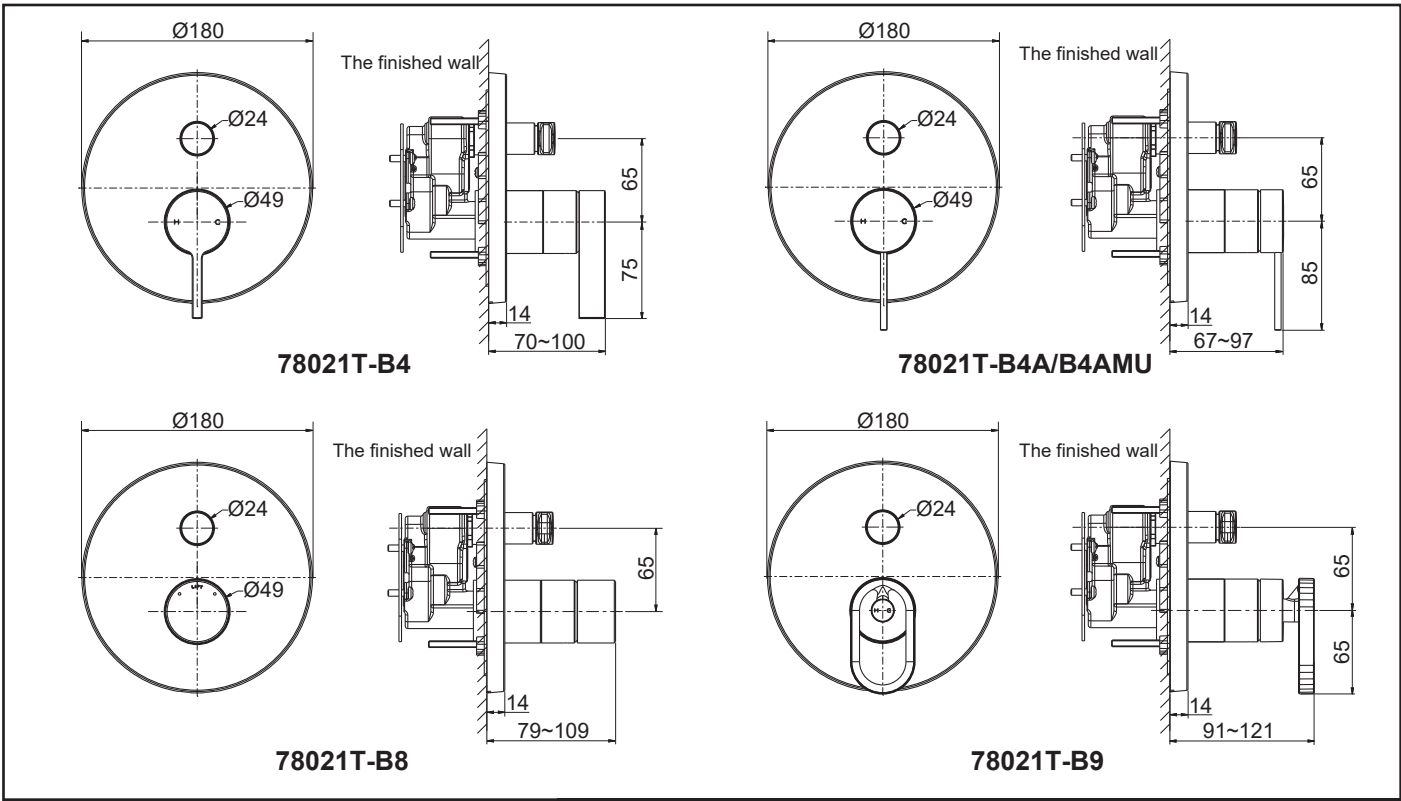

INSTALLATION

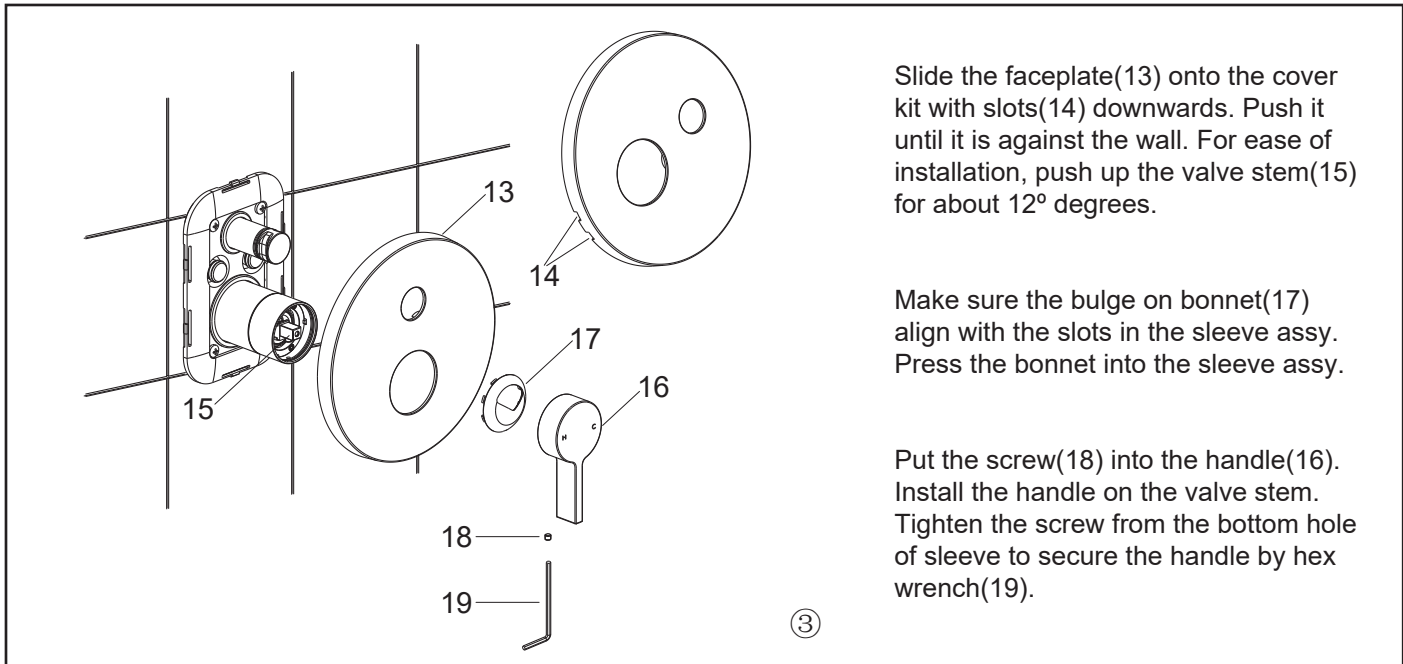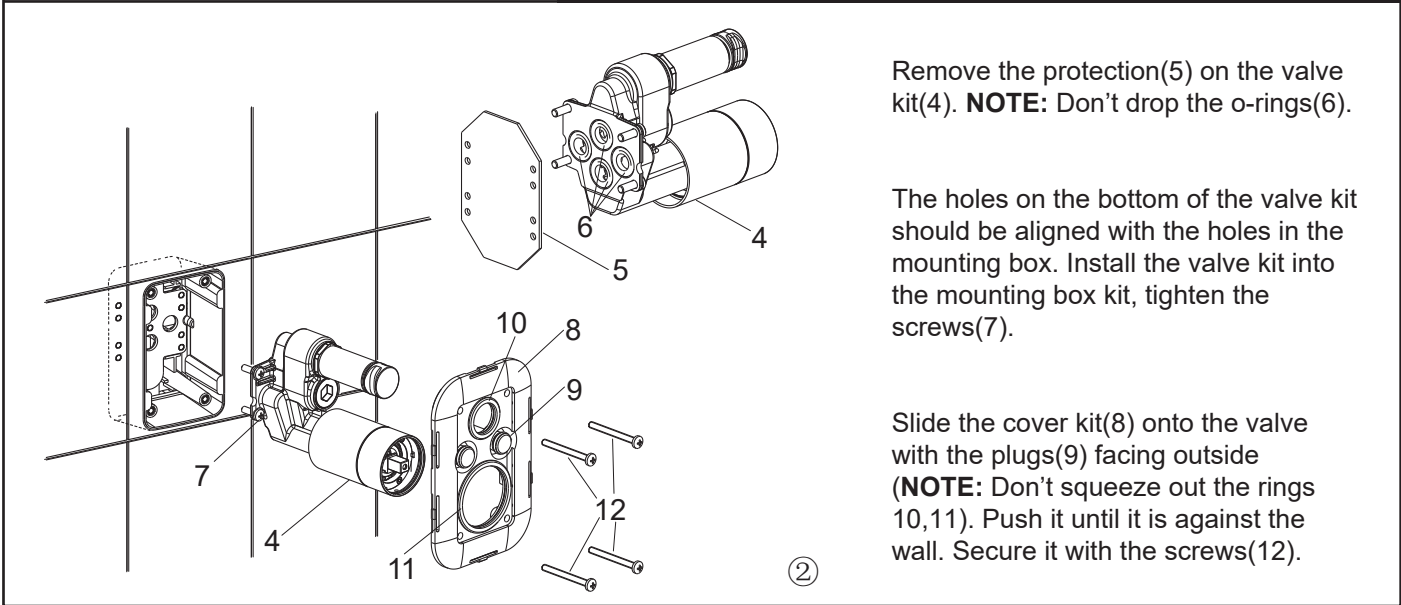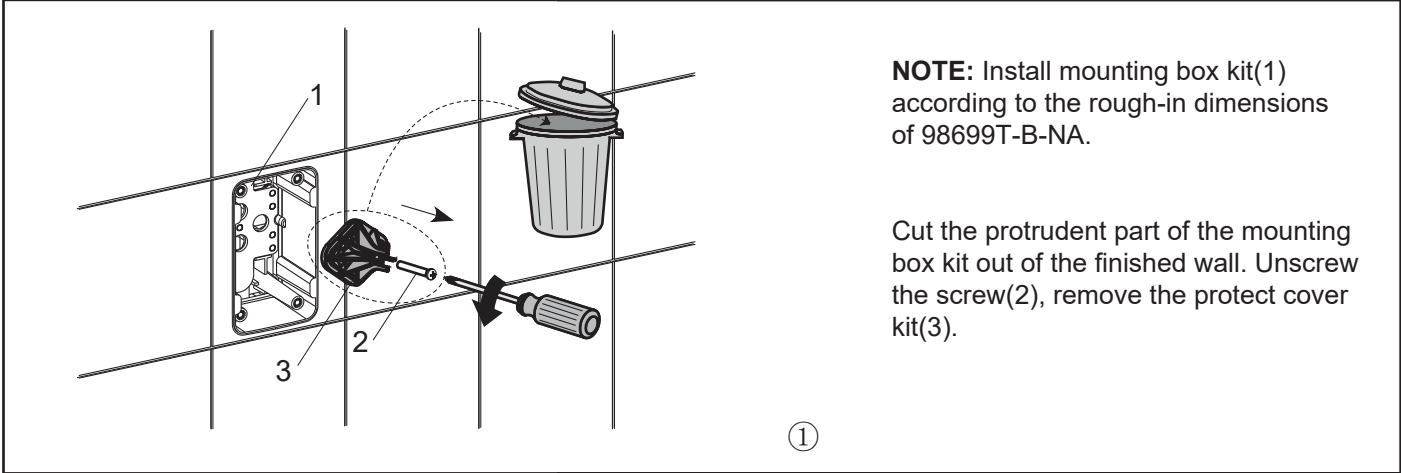

The illustrations shown is the correct position of the handles in the off position.

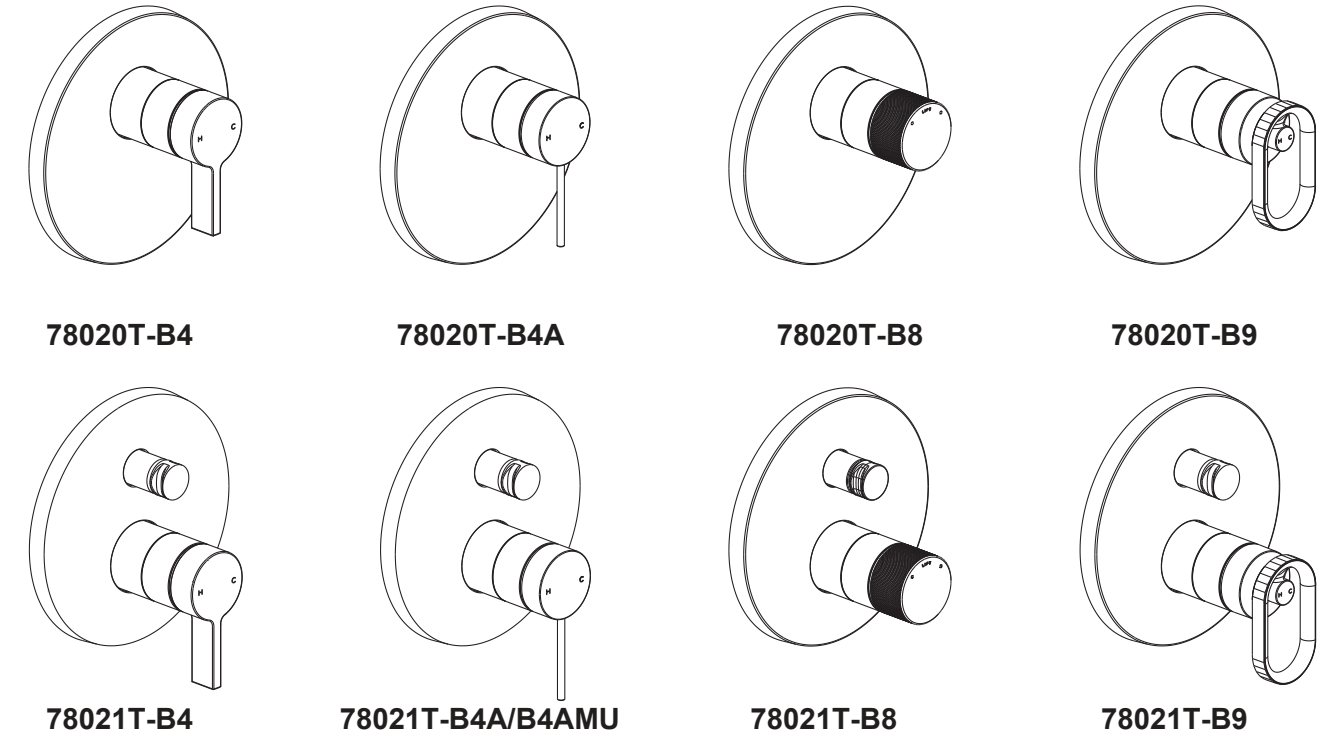

INSTALLATION CHECKOUT

Ensure that all coupling nuts are tight.
Ensure that the handle is in the off position.
Turn on the main water supply, and check for leaks. Repair as needed.

CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc, which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.