


- 33059K-4 Single Handle Lavatory Faucet - Paddle
- 33063K-4 Tall Single Handle Lavatory Faucet - Paddle
- 33064K-4 Super Tall Single Handle Lavatory Faucet - Paddle

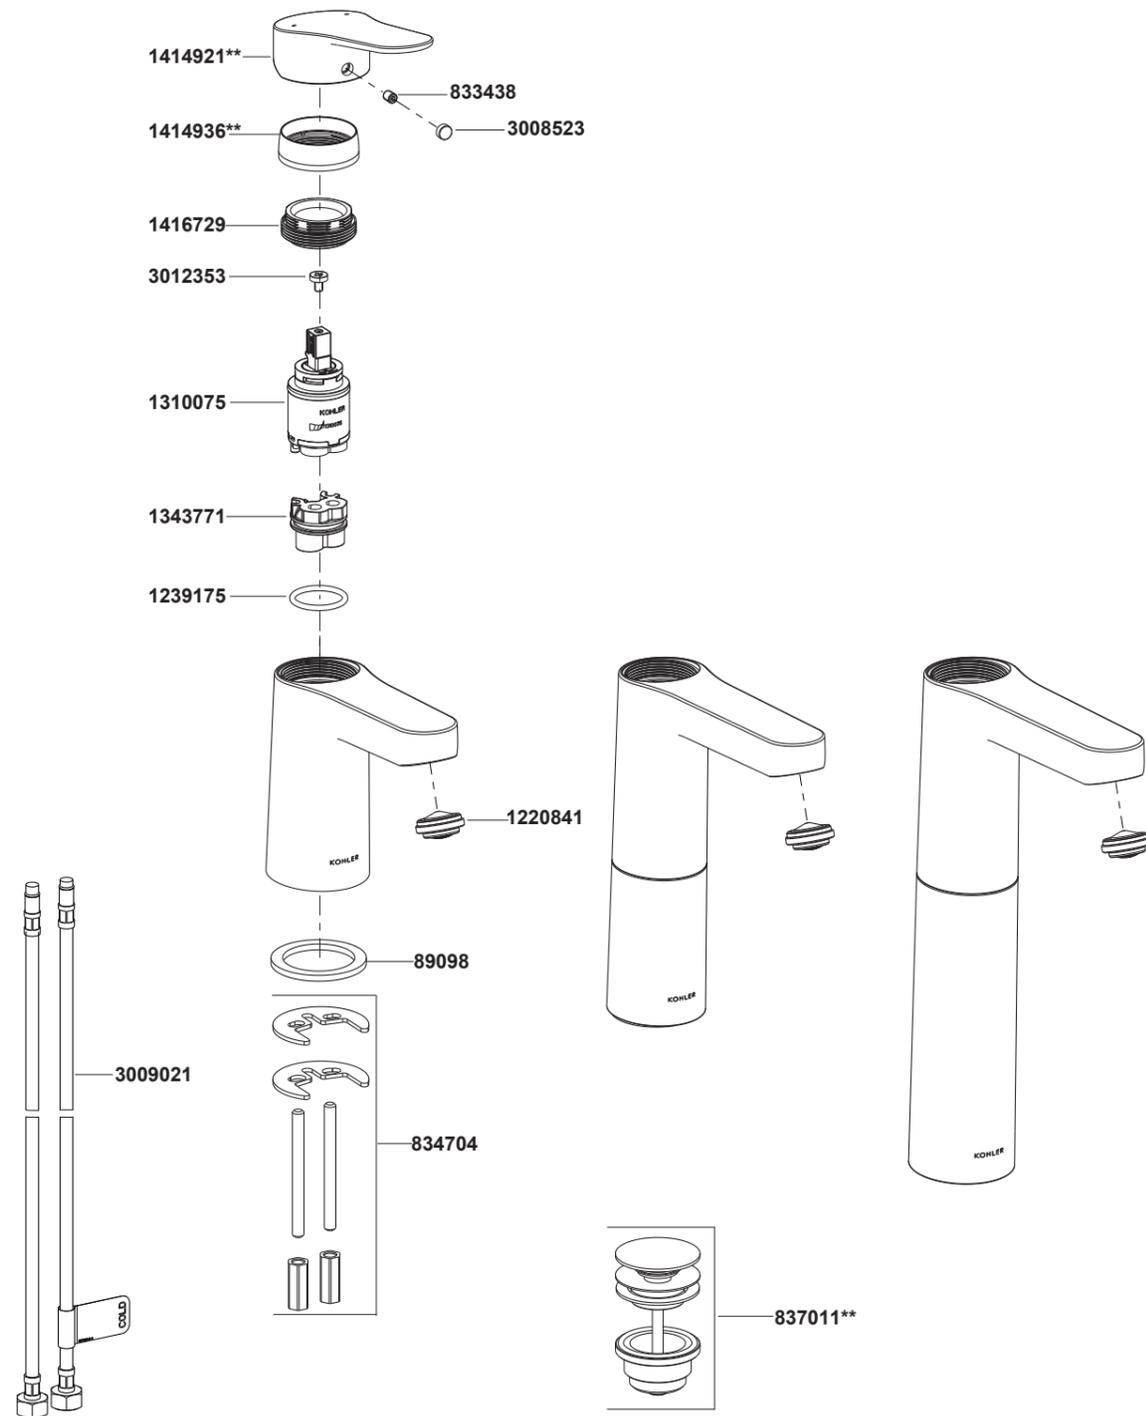

**Color code must be specified when ordering.

- 33059K-4 Single Handle Lavatory Faucet - Paddle
- 33063K-4 Tall Single Handle Lavatory Faucet - Paddle
- 33064K-4 Super Tall Single Handle Lavatory Faucet - Paddle

BEFORE YOU BEGIN

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please leave these instructions for the consumer. They contain important information.


NOTES:

1. Flush the water supply pipes thoroughly to remove debris.
2. If possible, install this faucet before installing the lavatory.
3. Inspect the supply tubing for damage and leakage. Replace and maintain as necessary.
4. Observe local plumbing codes.
5. Shut off the water supplies to the fitting.

HANDLE OPERATION

Lift the handle gently. Turn clockwise for hot water, turn counter-clockwise for cold water.

ROUGH-IN DIMENSIONS

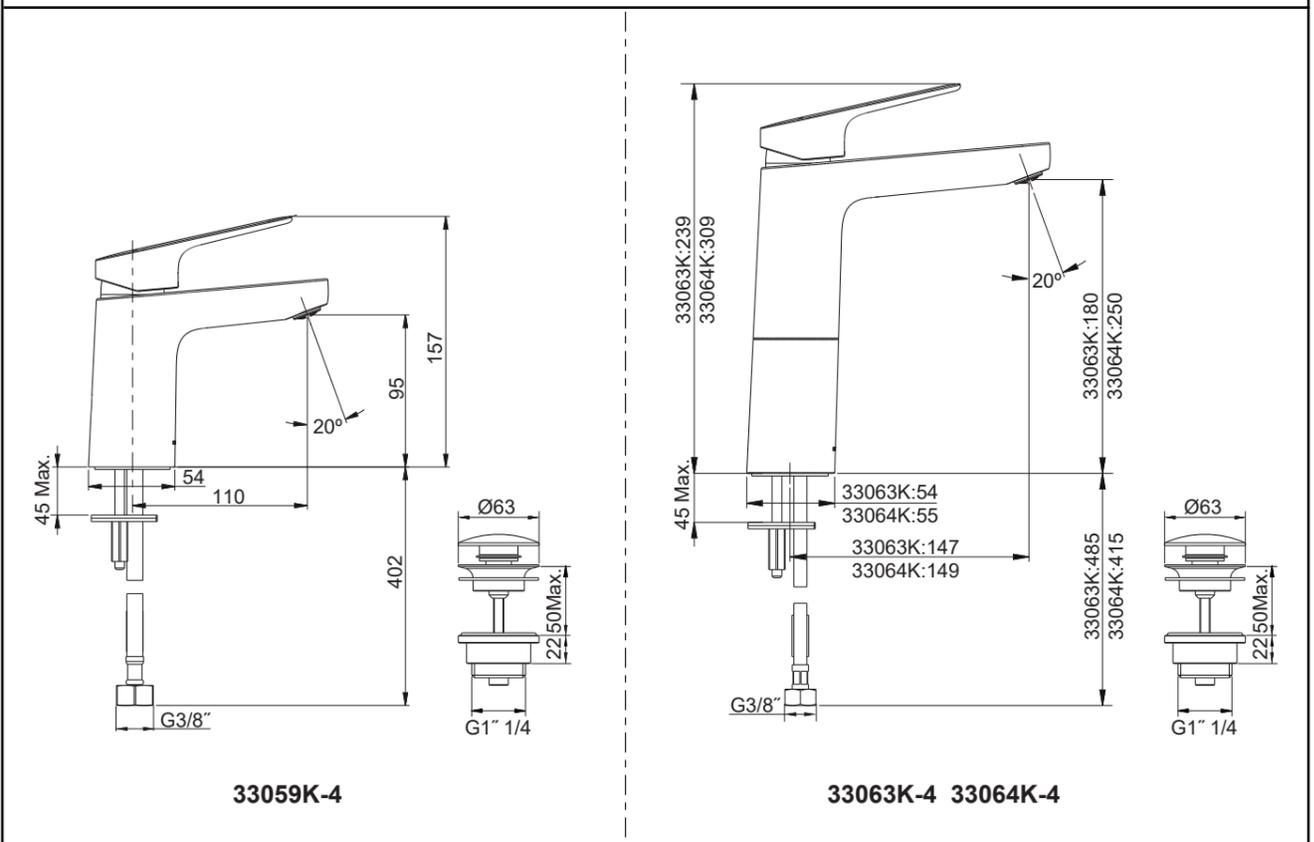


INSTALLATION

How to Install the Spout

Install the mounting studs(3) onto the underside of faucet body(1), and put the adhesive washer(2) into the bottom groove of the faucet over the hoses(4) and mounting studs.

Insert the faucet assembly into the lavatory hole. Position the faucet properly. From underside, place the washers(5, Rubber washer is on the top) onto the mounting studs, and tighten nuts(6, 7) to secure the faucet.

Attach the hoses to water supplies. When facing front of the faucet, the left hose should be connected to hot water, the right hose with "COLD" label(8) should be connected to cold water.

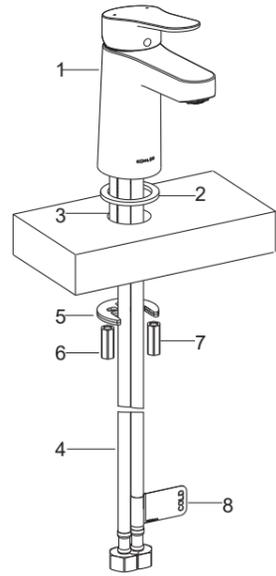


How to Install the Drain

Remove the stopper(9) from the top waste(11). Install the top waste with the foam washer(12) into the drain hole. Put the rubber washer(13, tapered side up) into the groove of the bottom waste(14).

Align the top waste(11) with the bottom waste(14), screw the stud(10) through the hole of the top waste and bottom waste with hexagon wrench. Then screw the stopper into the top waste.


NOTE: If needed, apply a ring of plumbers putty around the underside of the top waste, instead of using foam washer.

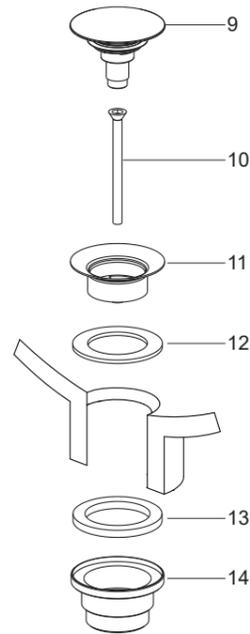

INSTALLATION CHECKOUT

Ensure that all connections are tight. Ensure the handle is in the off position. Turn on the drain and main water supply, and check for leaks. Repair as needed.

Remove the aerator kit(15) with a coin. Turn on the faucet. Run hot and cold water through spout for about one minute to remove any debris. Remove any debris from the aerator kit. Shut off the faucet. Reinstall the aerator kit.

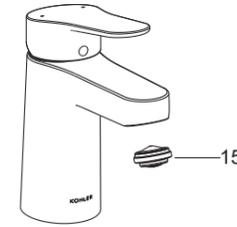

CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.