




RAINMAX SHOWERHEAD INSTALLATION INSTRUCTIONS



26854IN**
RAINMAX
255 mm (10")




26855IN**
RAINMAX
255 mm (10")




26856IN**
RAINMAX
310 mm (12")

** Finish code must be specified when ordering.


ROUGH-IN (in mm)

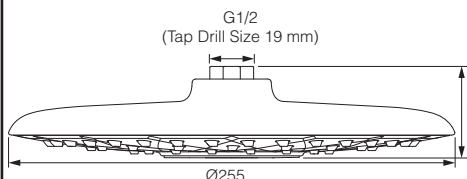

26854IN

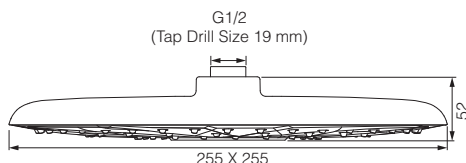

26855IN

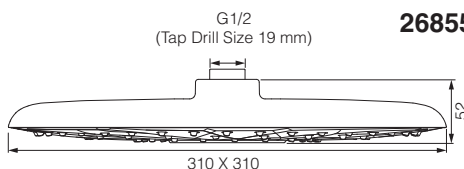

26856IN

PRESSURE AND HOT INLET TEMPERATURE




P (Bar) 0.5 < 3 < 5.5




T (°C) < 65

TOOLS REQUIRED

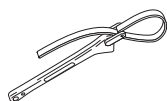


INSTALLATION INSTRUCTIONS



1

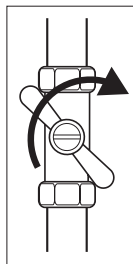


OPEN

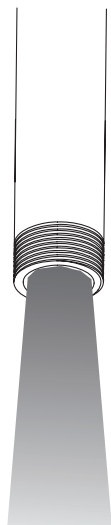



2

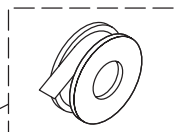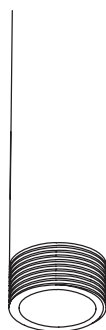

3

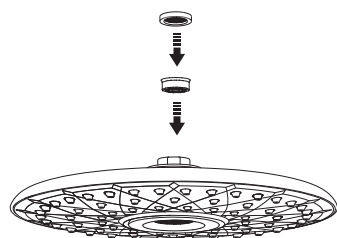


4

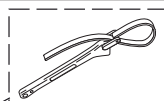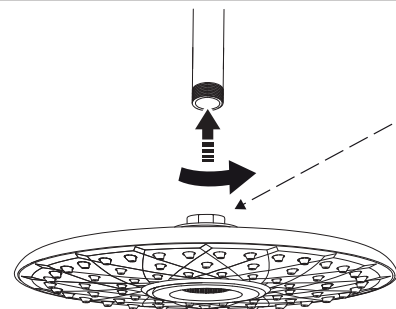


WASHER CLEANING AND SERVICING


1. Insert the provided spray plate tool into the core spray plate of the deluge showerhead.

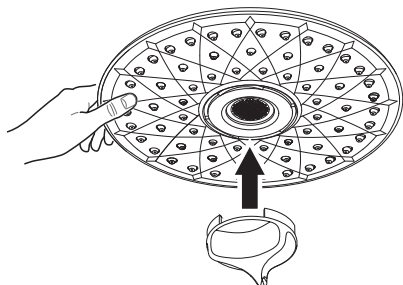


2. Hold the deluge showerhead and turn the spray plate tool counterclockwise to remove the core spray plate.

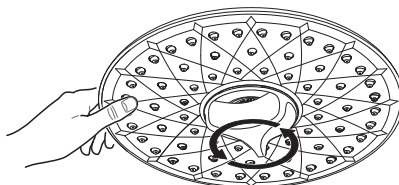

3. Clean the spray plate silver mesh with mild detergent, rinse under water and wipe using a soft cloth or brush.

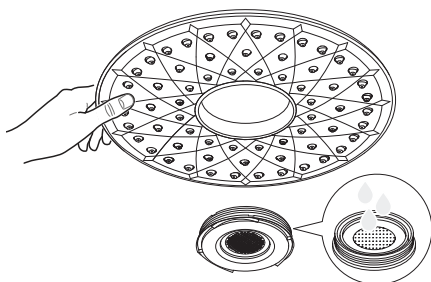


4. Insert the spray plate tool into the core spray plate and turn clockwise to tighten.

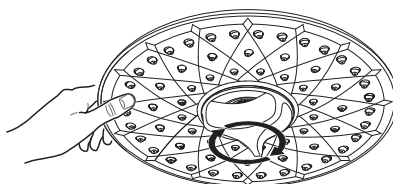

CLEANING INSTRUCTIONS



SERVICE PARTS

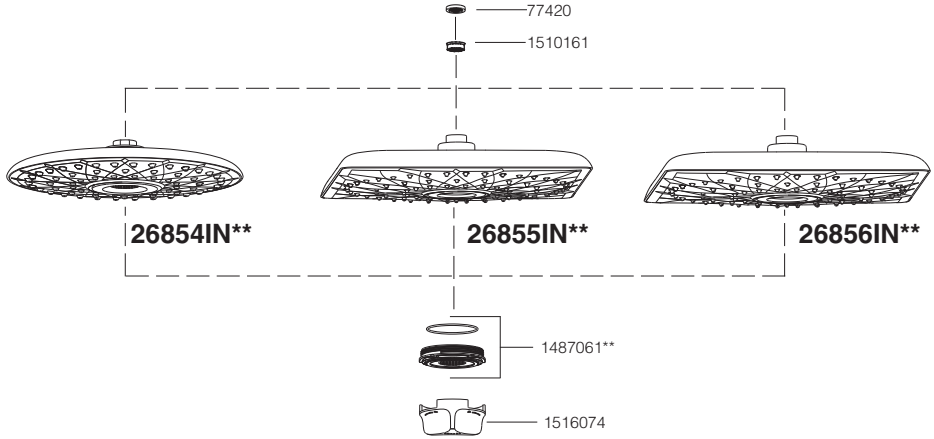

** Finish code must be specified when ordering.