

Installation Instructions

Medicine Cabinet

Record your model number: _____

KOHLER®

Thank You for Choosing KOHLER


Need help? Contact our Customer Care Center.

- Email: indiacustomercare@kohler.com
- Call: 1800-103-2244
- **Care and cleaning:** Please refer to the Care and Cleaning on the product detail page.

Warranty

This product is covered under the **KOHLER® India Warranty Policy**, found at kohler.co.in/warranty. For a hardcopy of warranty terms, contact the Customer Care Center.

Tools and Materials

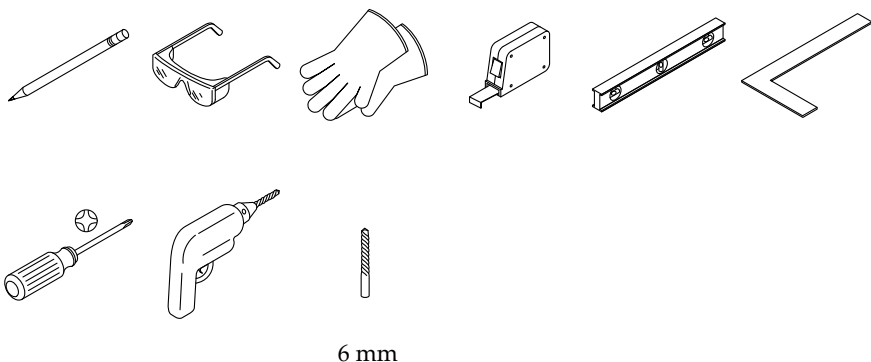

Plus:

- Anchors (as needed)

Before You Begin



CAUTION: Risk of electric shock. Electrical wiring may need to be relocated.



CAUTION: Risk of property damage. Use anchors (not provided) rated for the load weight of this product. Refer to the anchor manufacturer's instructions.




CAUTION: Risk of product damage. Do not leave the door supported with only one hinge during removal or reinstallation. Disengage the bottom hinge first during removal, and reattach the top hinge first during installation.

IMPORTANT! Reroute any electrical wires or water supply piping from the wall cavity. If you encounter drain or vent piping or if your wall is load-bearing, consult a professional before proceeding.

Follow all local plumbing, building, and electrical codes.


1. Verify Minimum Clearances

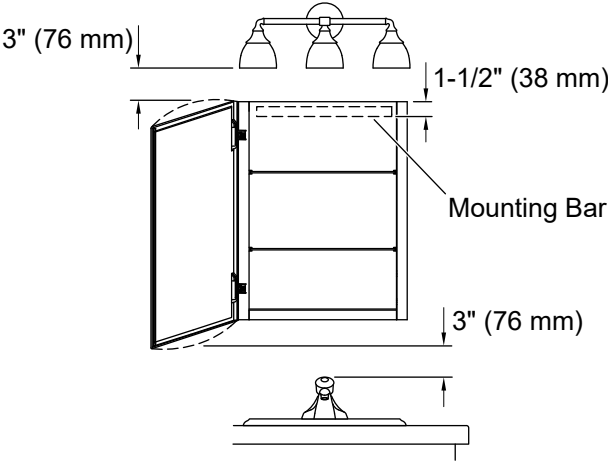

NOTE: The top of the cabinet to the bottom edge of the mounting bar is 1-1/2" (38 mm).


- ☐ Verify that the door will clear all obstacles, such as a faucet or light fixture.
- ☐ Provide a minimum distance of 3" (76 mm) between the door and other objects.
- ☐ **Surface-Mount:** Proceed with the "Surface-Mount - Install the Mounting Bar" section.

2. Surface-Mount - Install the Mounting Bar

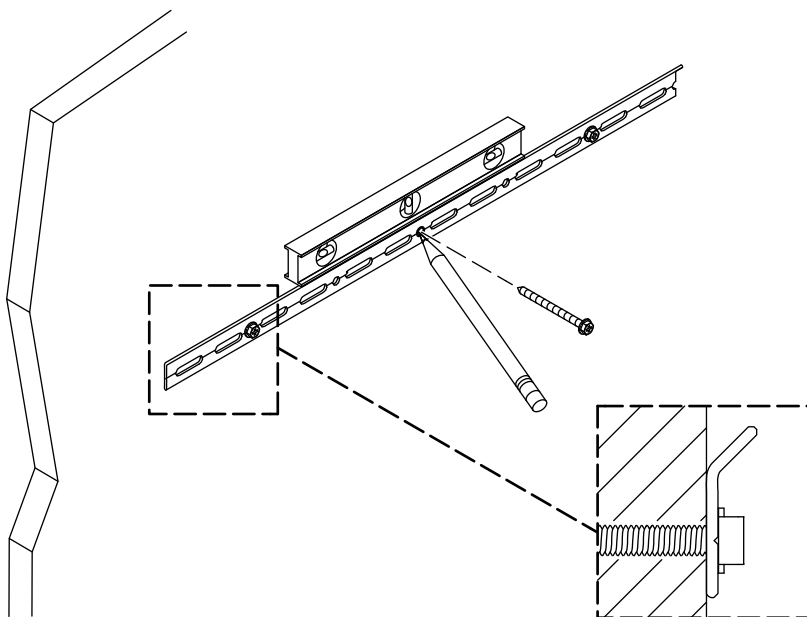


- ☐ Mark the stud locations at the desired mounting location.
- ☐ Position the mounting bar on the wall and mark the hole locations. One of the holes must align with a stud.
- ☐ Drill holes at the marked locations.
- ☐ Insert anchors (not provided) where needed.
- ☐ Secure the mounting bar with three 2" (51 mm) hex head screws (provided) or screws provided with the anchors.

3. Surface-Mount - Hang the Cabinet

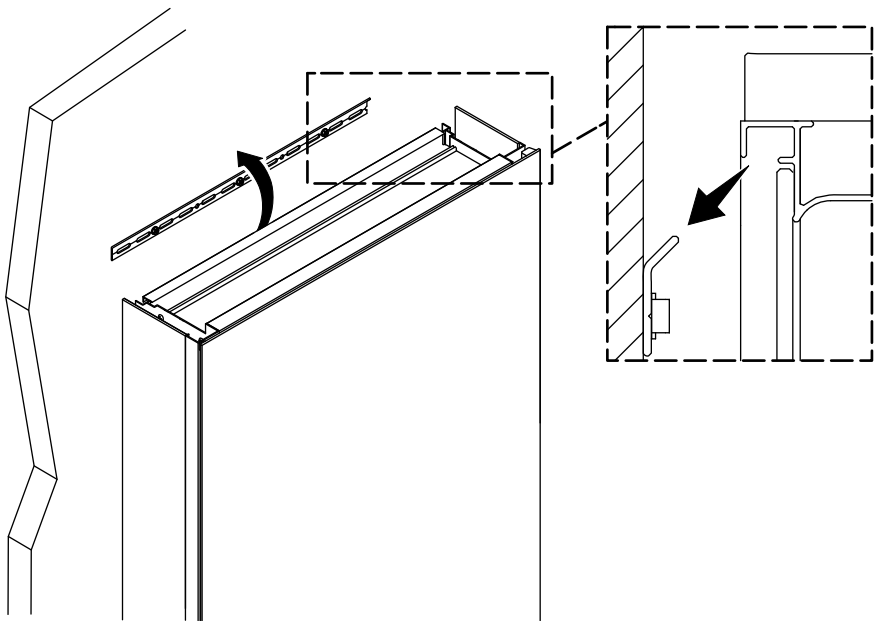


- ☐ Lift the cabinet onto the mounting bar.
- ☐ Verify that the back of the cabinet engages the mounting bar.

4. Surface-Mount - Secure the Cabinet

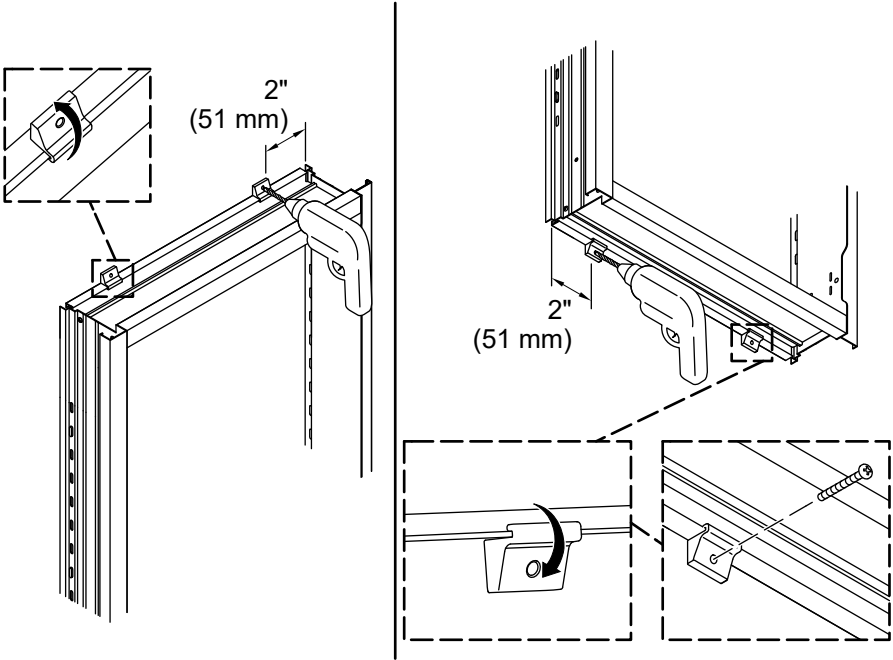


- ☐ Mount a clip onto each end of the top T-slot.
- ☐ Position each clip 2" (51 mm) from the ends of the cabinet.
- ☐ Verify that the cabinet is centered as desired.
- ☐ Drill pilot holes into the wall.
- ☐ If needed, insert anchors into the wall.
- ☐ Secure the clips with #8-15 X 1.5" (38 mm) panhead screws (provided).
- ☐ Mount a clip onto each end of the bottom T-slot.
- ☐ Position each clip 2" (51 mm) from the ends of the cabinet.
- ☐ Drill pilot holes and secure with #8-15 X 1.5" (38 mm) panhead screws (provided).

5. Surface-Mount - Install the Side Panel Brackets

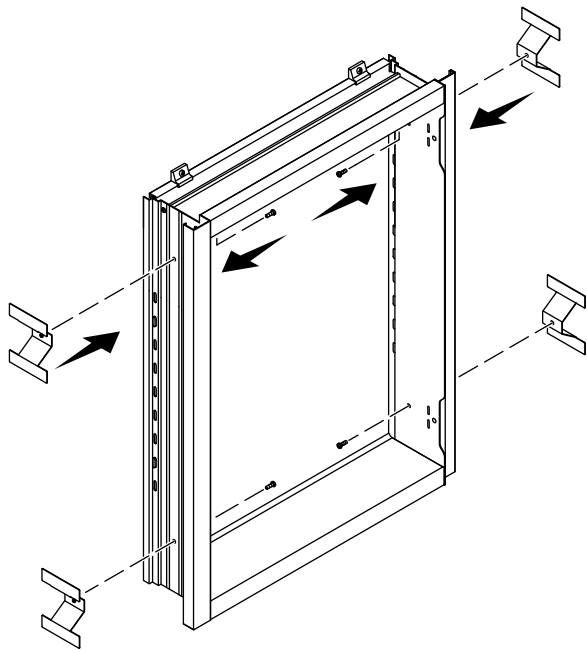


- ☐ Align the side panel brackets with the mounting holes.
- ☐ Secure each side panel bracket with a M4 x 12 screw (provided).

6. Surface-Mount - Install the Side Panels

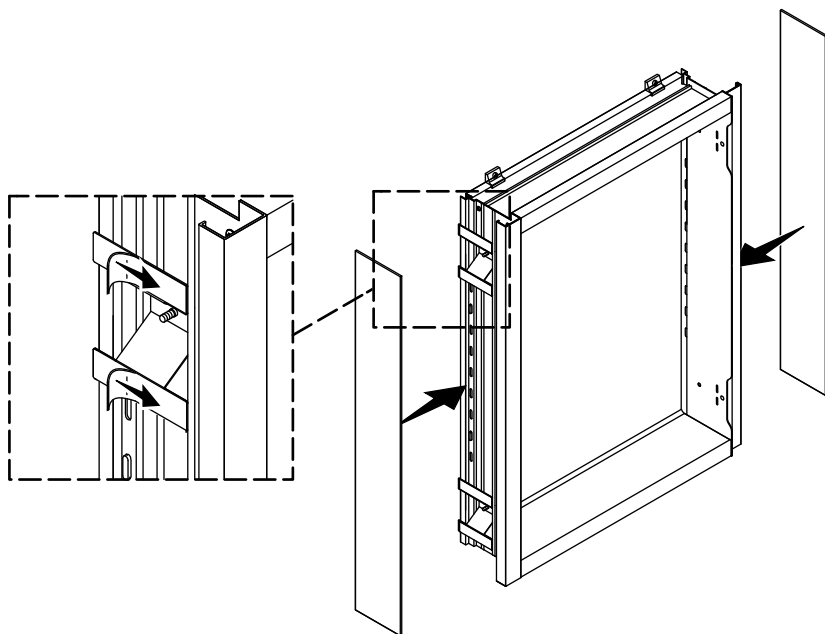


- ☐ Remove the backing from the adhesive strips on the side panel brackets.
- ☐ Verify that the side panel edges are aligned with the top and front edges of the cabinet.
- ☐ Press the side panels onto the adhesive strips and apply pressure for 20 seconds. Once the side panels are secured to the adhesive, the side panels will not be adjustable.
- ☐ To install the shelves, see the "Install the Shelves" section.

7. Install the Shelves

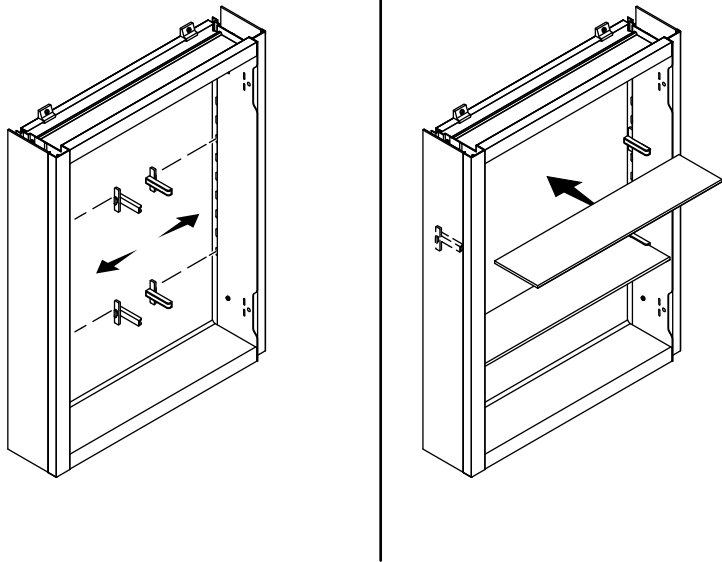

- ☐ Determine the shelf locations and insert the shelf holders into the slotted holes in the sides of the cabinet.
- ☐ Install the shelves between the slots of the shelf holders.

8. Adjust the Door

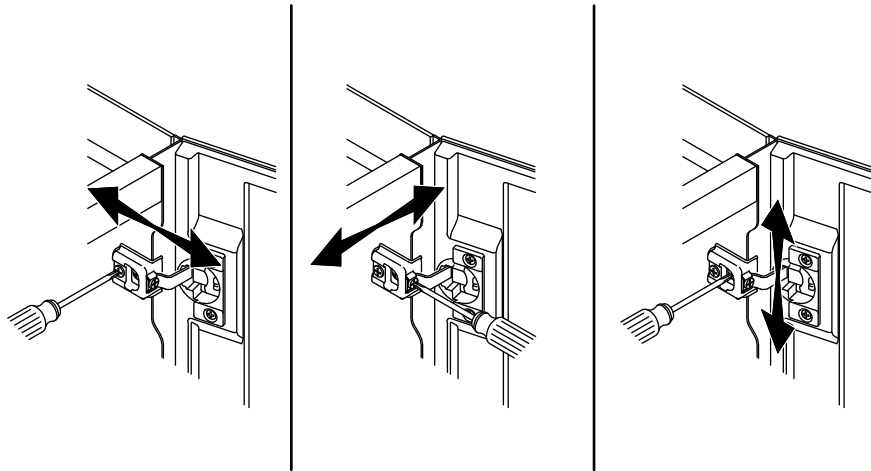

□ If needed, turn the adjustment screws to align the door.

kohler.co.in

THE BOLD LOOK
OF **KOHLER**®

©2026 Kohler Co.



1530411-IN2

1530411-IN2-B