

# KOHLER

## K-80231T-2KD ALEO 利奥

### BEFORE YOU BEGIN

- WARNING:** Risk of personal injury. Metal surfaces are sharp and can cause severe cuts. Use gloves and handle sink edges carefully.
- Observe all local plumbing and building codes.
  - Shut off the hot and cold water supplies.
  - Prior to installation, unpack the new sink and inspect it for damage. Return the sink to its protective carton until you are ready to install it.
  - Inspect the drain and supply tubing. Replace if necessary.
  - All information in these instructions is based on the latest product information available at the time of publication. Kohler China reserves the right to make changes at any time without notice.
  - This product complies with Q/KLCW 1-2014.


### RECOMMENDED TOOLS AND MATERIALS

- Safety Glasses
- Measuring Tape
- Pencil
- Drill
- Putty Knife
- Silicone Sealant
- Pipe Wrench
- Plumbers Putty

- Plus:**
- Level
  - Cross Screwdriver
  - Keyhole/Jigsaw
  - Gloves

### ROUGHING-IN

Reference Value  
参考值

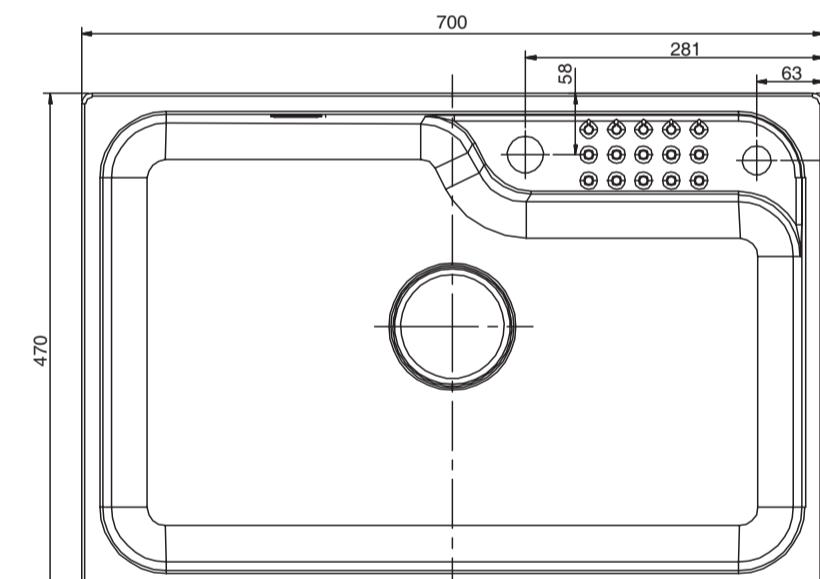

Kohler reserves the right to change marked dimensions without prior notice.  
科勒公司保留随时变更图中标示尺寸的权利，无需另行通知。

RIM OF SINK  
水槽边缘

### 安装之前


- WARNING:** 小心人身伤害。金属表面非常锋利，可能导致严重的划伤。请使用手套，并小心接触水槽边缘。
- 遵循当地所有的管道和建筑规范。
  - 关闭冷热水供应。
  - 在安装之前，请打开新水槽的包装，检查产品是否有损坏。将水槽放回其保护性的纸箱包装，直到您准备安装。
  - 检查供水和排水管道。如果需要，请更换管道。
  - 此手册中的所有资料按照出版时的最新产品资料编写。科勒公司保留在任何时候不需通知便可进行更改的权利。
  - 本产品符合Q/KLCW 1-2014。

### 推荐使用的工具和材料

- 安全眼镜
- 测量尺
- 铅笔
- 钻孔机
- 灰泥刀
- 硅胶
- 管道扳手
- 管道灰泥

- 其它：**
- 水平尺
  - 十字螺丝刀
  - 锁眼锯或剑齿锯
  - 手套

### 尺寸图

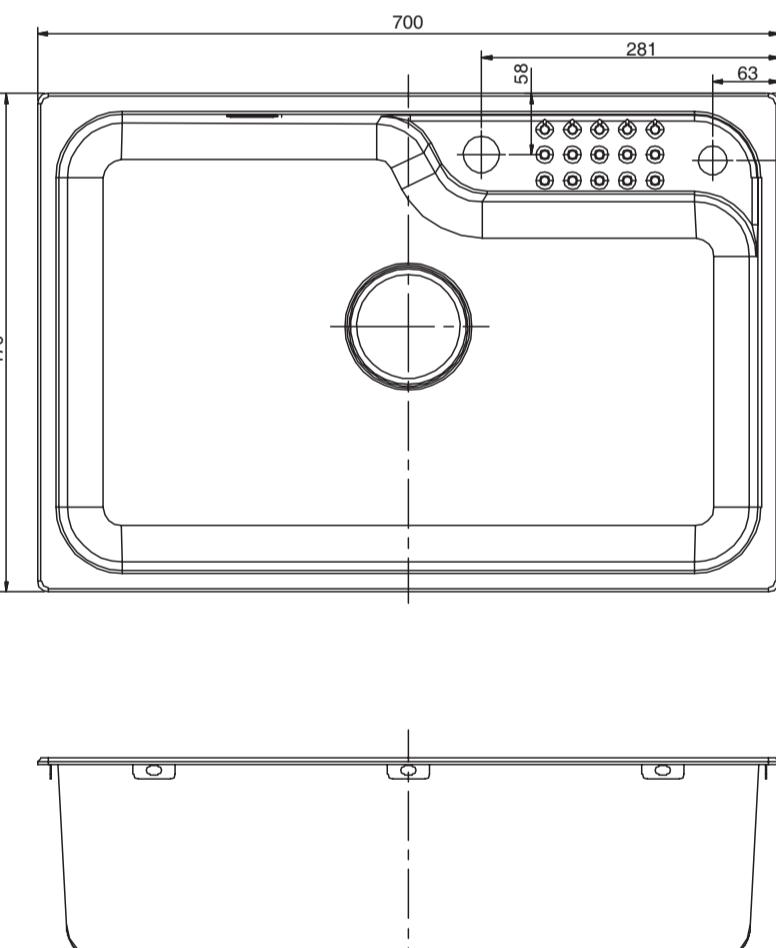


### INSTALL THE NEW SINK

#### 1. Preparation

- WARNING:** 小心人身伤害。金属表面非常锋利，可能导致严重的划伤。请使用手套，并小心接触水槽边缘。

##### For new installations:

- Cut along the line dedicated to the installation type as you desire.
- Carefully place the cutout template on the countertop in the desired position.
- Make sure the sink will not interfere with the cabinet.
- Trace the cutout template outline onto the countertop.
- Drill a pilot hole inside the cutting line. Using a jig or keyhole saw, cut along the outline to cut out the opening in the Countertop.

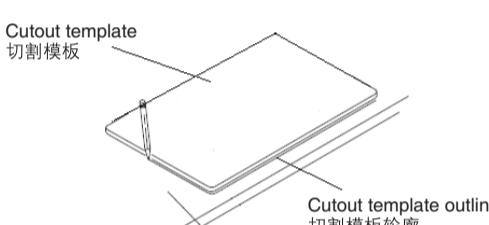

Trace the outline of the cutout template on the countertop with a pencil at the desired installation location.  
用铅笔在厨房工作台面上您希望安装水槽的位置画下切割模板的轮廓。

- For existing installations:**
- Carefully lift the old sink out of the countertop.
  - Compare the existing cut-out to the required cut-out size.
  - If needed, enlarge the cut-out hole according to the directions for new installations.

#### 2. Install the Faucet Fitting and Drain


- Install the faucet overflow pipe and strainer according to the manufacturer's instructions.

**NOTE:** If you are reusing fittings from an old sink, use plumbers putty under the faucet base and top flange of the strainer.

#### 3. Install the Sink

- A. Self-Rimming Installation**
- Push the sink onto the back rim of the sink.
  - Apply a bead of quality sealant on the sealing tape to maximize sealing effect.
  - Position the sink onto the cut-out area.
  - Install the clips into hole of the hook.

**NOTE:** The clips may need to be repositioned to compensate for an uneven countertop.

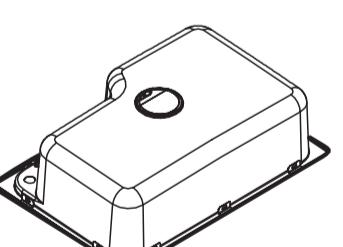


### 安装新水槽

#### 1. 准备安装

- WARNING:** 小心人身伤害。金属表面非常锋利，可能导致严重的划伤。请使用手套，并小心接触水槽边缘。

##### 对于新安装：


- 细心地将切割模板放在厨房工作台面上您希望安装水槽的位置。
- 确保水槽不会和橱柜互相干扰。
- 请在工作台上画下切割模板的轮廓。
- 在切割线内部钻一个导向孔。使用剑齿锯或锁眼锯，沿着轮廓线进行切割，在工作台上切割出水槽安装孔。

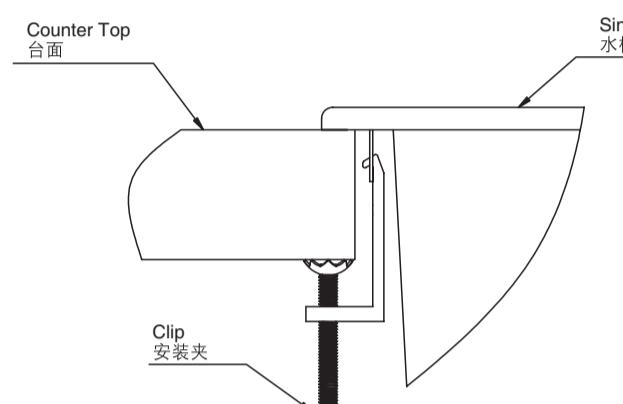


- Tighten the screws to lower the sink rim down onto the countertop. Do not overtighten.
- Use a dry cloth to wipe away any excess sealant.
- Verify that there are no gaps.
- Allow the sealant to cure for at least 30 minutes.

#### B. Undercounter Installation

- Apply a bead of silicone sealant or rubber sealant around the inner rim of the sink.
- Reverse the countertop and fix the sink to the countertop bottom with clips or other fastener.

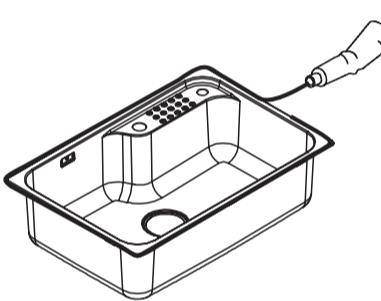

- B. 台下安装**
- 沿水槽边缘靠近内处涂抹硅胶或橡胶密封胶。
  - 将台面倒置，使用安装夹或其它固定件将水槽固定于台面底部。

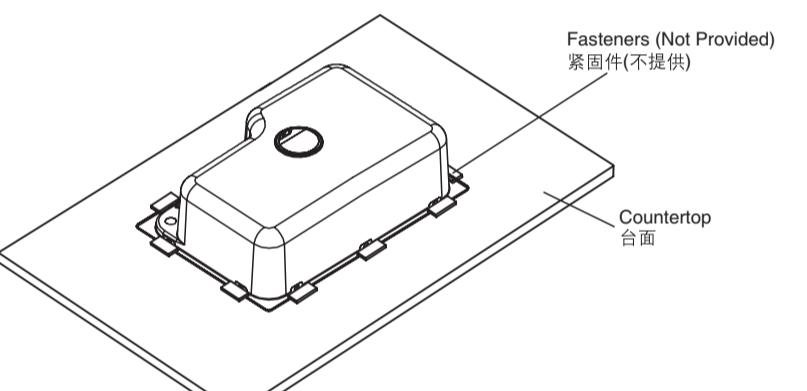

#### 2. 安装龙头和排水装置


- 根据生产商的指示安装龙头溢水管和下水管。

**注意：**如果您采用旧水槽的有关装置，在龙头底部基础部位和下水管的顶部法兰处使用管道密封剂。

#### 3. 安装水槽

- A. 台上安装**
- 水槽边缘背面贴上密封条。
  - 之后于密封条上再涂上一层优质密封剂，以加强密封防水效果。
  - 将水槽置入切割区域。
  - 将夹子按图示挂在小槽背面的安装孔上。

**注意：**对于不平滑的厨房工作台面，可能需要重新确定夹子的位置，以弥补台面的不平。

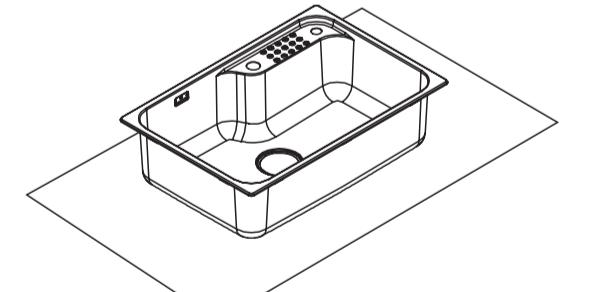

#### 4. Connect Water Supply and Test

- Use a dry cloth to wipe away any excess sealant.
- Verify that there are no gaps.
- Allow the sealant to cure for at least 30 minutes.
- Reverse the countertop back and fix into the cabinet.

#### 4. 连接供水及测试

- 如果使用垃圾处理器的话，根据生产商指示，安装垃圾处理器。
- 连接并拧紧下水管和下水管。根据龙头所附的指示完成通往龙头的供水连接。
- 将水注入水槽，检查是否漏水。

R5mm  
R59mm

428mm  
454mm

### 700 SGL SR/UC SINK, 2KD 单槽台上台下双用厨盆(700mm) CUT-OUT TEMPLATE / INSTALLATION INSTRUCTIONS 切割图/安装说明书

### CARE AND CLEANING

#### Stainless Steel

Rinse your stainless steel sink thoroughly after each use, and use a dabbing action to dry with a clean, soft cloth. Clean stainless steel once a week.

Always apply stainless steel cleaner/polish with a nonabrasive cloth or sponge, working with, not across the grain. Do not use steel wool, wire brushes or abrasive pads to clean your sink.

If you use cleaners containing chlorides, be sure to rinse the surface immediately after you clean it to avoid corrosion. Do not allow cleaners to remain in contact with the sink surface for long periods of time.

Kohler kitchen sink accessories, including bottom basin racks, wire rinse baskets, cutting boards and colanders will help protect the surface of your sink.

If the surface becomes excessively dirty, consider using baking soda, or a general purpose cleaner.

#### 保养和清洁指南

##### 不锈钢

每次使用后，请彻底冲洗您的不锈钢水槽，并使用清洁的软布将其擦干。对于不锈钢用品，请每周清洗一次。

请使用非磨损性的布或海绵，并用不锈钢专用清洁剂/光亮剂进行清洗，而不要使用带颗粒的清洁剂。请不要使用钢丝球、钢丝刷或研磨性的抹布清洁不锈钢水槽。

如果您使用含有氯化物的清洁剂，在您清洁水槽之后，确保立即对水槽表面进行冲洗，以防止腐蚀。不要让清洁剂在您的水槽表面停留过长时间。

科勒厨房水槽附件，包括底部盆架、金属丝冲水篮、砧板和沥水篮均有助于保护您的水槽表面。

如果水槽表面很脏，使用碳酸氢钠、或普通的清洁剂进行清洗。

WHEN PLOTTING TEMPLATE FULL SIZE:  
Make sure horizontal and vertical dimensions match the dimensions labeled on the template.

当在台面上一比一描绘切割线时，  
务必确保模板的水平和竖直尺寸与模板上标注的一致。

658mm

684mm

FOR SELF-RIMMING INSTALLATION  
CUT ALONG THIS LINE  
专用于台上安装  
沿线切割

FOR UNDERCOUNTER INSTALLATION  
CUT ALONG THIS LINE  
专用于台下安装  
沿线切割

1272316-T01-A

© Copyright Kohler China Investment Co., Ltd. 2015  
© 版权为科勒(中国)投资有限公司所有 2015