
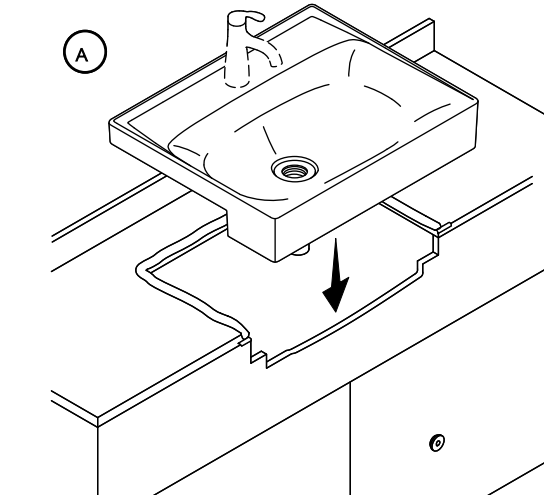




6A. Position the sink in the cutout. Adjust the cutout to accommodate the sink as needed.

7A. Trace a pencil line around the outside of the sink. Remove the sink.

8A. Install the drain and faucet following the manufacturer's instructions.

9A. Apply 100% silicone sealant to the countertop between the pencil line and cutout opening. Spread the 100% silicone sealant evenly with a putty knife.

10A. Carefully position the sink in the cutout and press down firmly.

11A. From underneath the countertop, install the mounting frame to the bathroom sink.

11B. Thread bolt B into the mounting frame. **Do not tighten at this time.**

12A. Thread bolt A into the mounting frame and level the mounting frame as much as possible with bolt A.

12B. Tighten bolt B to lock the mounting frame. **Do not overtighten!**

13A. Apply 100% silicone sealant around the countertop cutout hole.

14A. Immediately wipe away excess 100% silicone sealant. Allow the 100% silicone sealant to cure following the manufacturer's instructions.

15A. Complete the drain and water supply connections.

16A. Run water and check for leaks.

**Need help?** Contact our Customer Care Center.

- Philippines: [kohlerPhilippines@kohler.com](mailto:kohlerPhilippines@kohler.com), +(86) 21-2606-2572
- Thailand: [callcenterthailand@kohler.com](mailto:callcenterthailand@kohler.com), +(66) 2204-6222
- **Care and cleaning:** [kohlerasiapacific.com/careandclean](http://kohlerasiapacific.com/careandclean)

This product is covered under the **Three-Year Limited Warranty for KOHLER® Plumbing Products**, found in the packed Compliance Certification.

