

1616700-PH2

Record your model number: _____

CAUTION: Risk of personal injury or product damage. Product can break, chip, or cause injury if handled carelessly. Get help lifting the product.

IMPORTANT! Provide your countertop manufacturer with your bathroom sink model number. Use the cut-out template provided with your bathroom sink or contact Customer Service with your model number for the latest cut-out template.

Use the fasteners and the clamps provided with the bathroom sink. **DO NOT** use adhesives or adhesive sealants to install the product.

This bathroom sink can be installed on a marble countertop or on a wooden countertop. For installation on a wooden countertop with thickness more than 1" (25 mm), order fastener and clamp accessory pack 52047. Wooden countertop with thickness less than 1" (25 mm) is not recommended to use with this bathroom sink.

Your product may appear different than the one illustrated. The installation procedure is the same.

Follow all local plumbing and building codes.

1A. 100% Silicone Sealant (not supplied)

1B. Epoxy Resin Adhesive A and B (not supplied)

2A. Verify the faucet and bathroom sink clearance.

2B. Verify the bathroom sink and cabinet clearance.

2C. Verify the drain and cabinet clearance.

3A. Cut the template along the cut-out hole of the template.

4A. Position the template on the countertop and trace the cut-out hole with a pencil. Verify that the clearance is as specified between the outer rim of the bathroom sink and the finished wall. Remove the template.

5A. Drill a pilot hole on the inside of the traced line.

5B. Cut the countertop along the inside edge of the traced line.

6A. Install the drain and faucet following the manufacturer's instructions.

7A. Clean the bathroom sink rim and the underside of the countertop.

NOTE: If installing the bathroom sink on a wooden countertop with thickness more than 1" (25 mm), proceed to Step 12.

8A. Take an equal quantity of epoxy resin adhesive A and B and mix thoroughly.

9A. Insert the screws into the center hole of the blocks.

9B. Apply the mixed sealant onto the blocks.

10A. From underneath the countertop, install the blocks on the bottom of the countertop.

10B. Immediately wipe away excess epoxy resin adhesive. Allow the epoxy resin adhesive to cure following the manufacturer's instructions.

11A. Loosely install the clamps with the provided screws, washers, and nuts.

12A. For installation on a wooden countertop with thickness more than 1" (25 mm): Loosely install the clamps with the screws and washers.

13A. Apply the 100% silicone sealant on the bathroom sink.

14A. For installation on a marble countertop: Hold the bathroom sink under the cut-out. Rotate each clamp over the rim. Tighten the clamps with the screws, washers, and nuts. **Do not overtighten.**

15A. For installation on a wooden countertop with thickness more than 1" (25 mm): Hold the bathroom sink under the cut-out. Rotate each clamp over the rim. Tighten the clamps with the screws. **Do not overtighten.**

16A. Immediately wipe away excess 100% silicone sealant. Allow the 100% silicone sealant to cure following the manufacturer's instructions.


18A. Run water and check for leaks.

Need help? Contact our Customer Care Center.


• **Care and cleaning:** [kohlerasiapacific.com/careandclean](https://www.kohler.com/careandclean)

• Philippines: kohlerPhilippines@kohler.com, +(86) 21-2606-2572


This product is covered under the **Three-Year Limited Warranty for KOHLER® Plumbing Products**, found in the packed Compliance Certification.

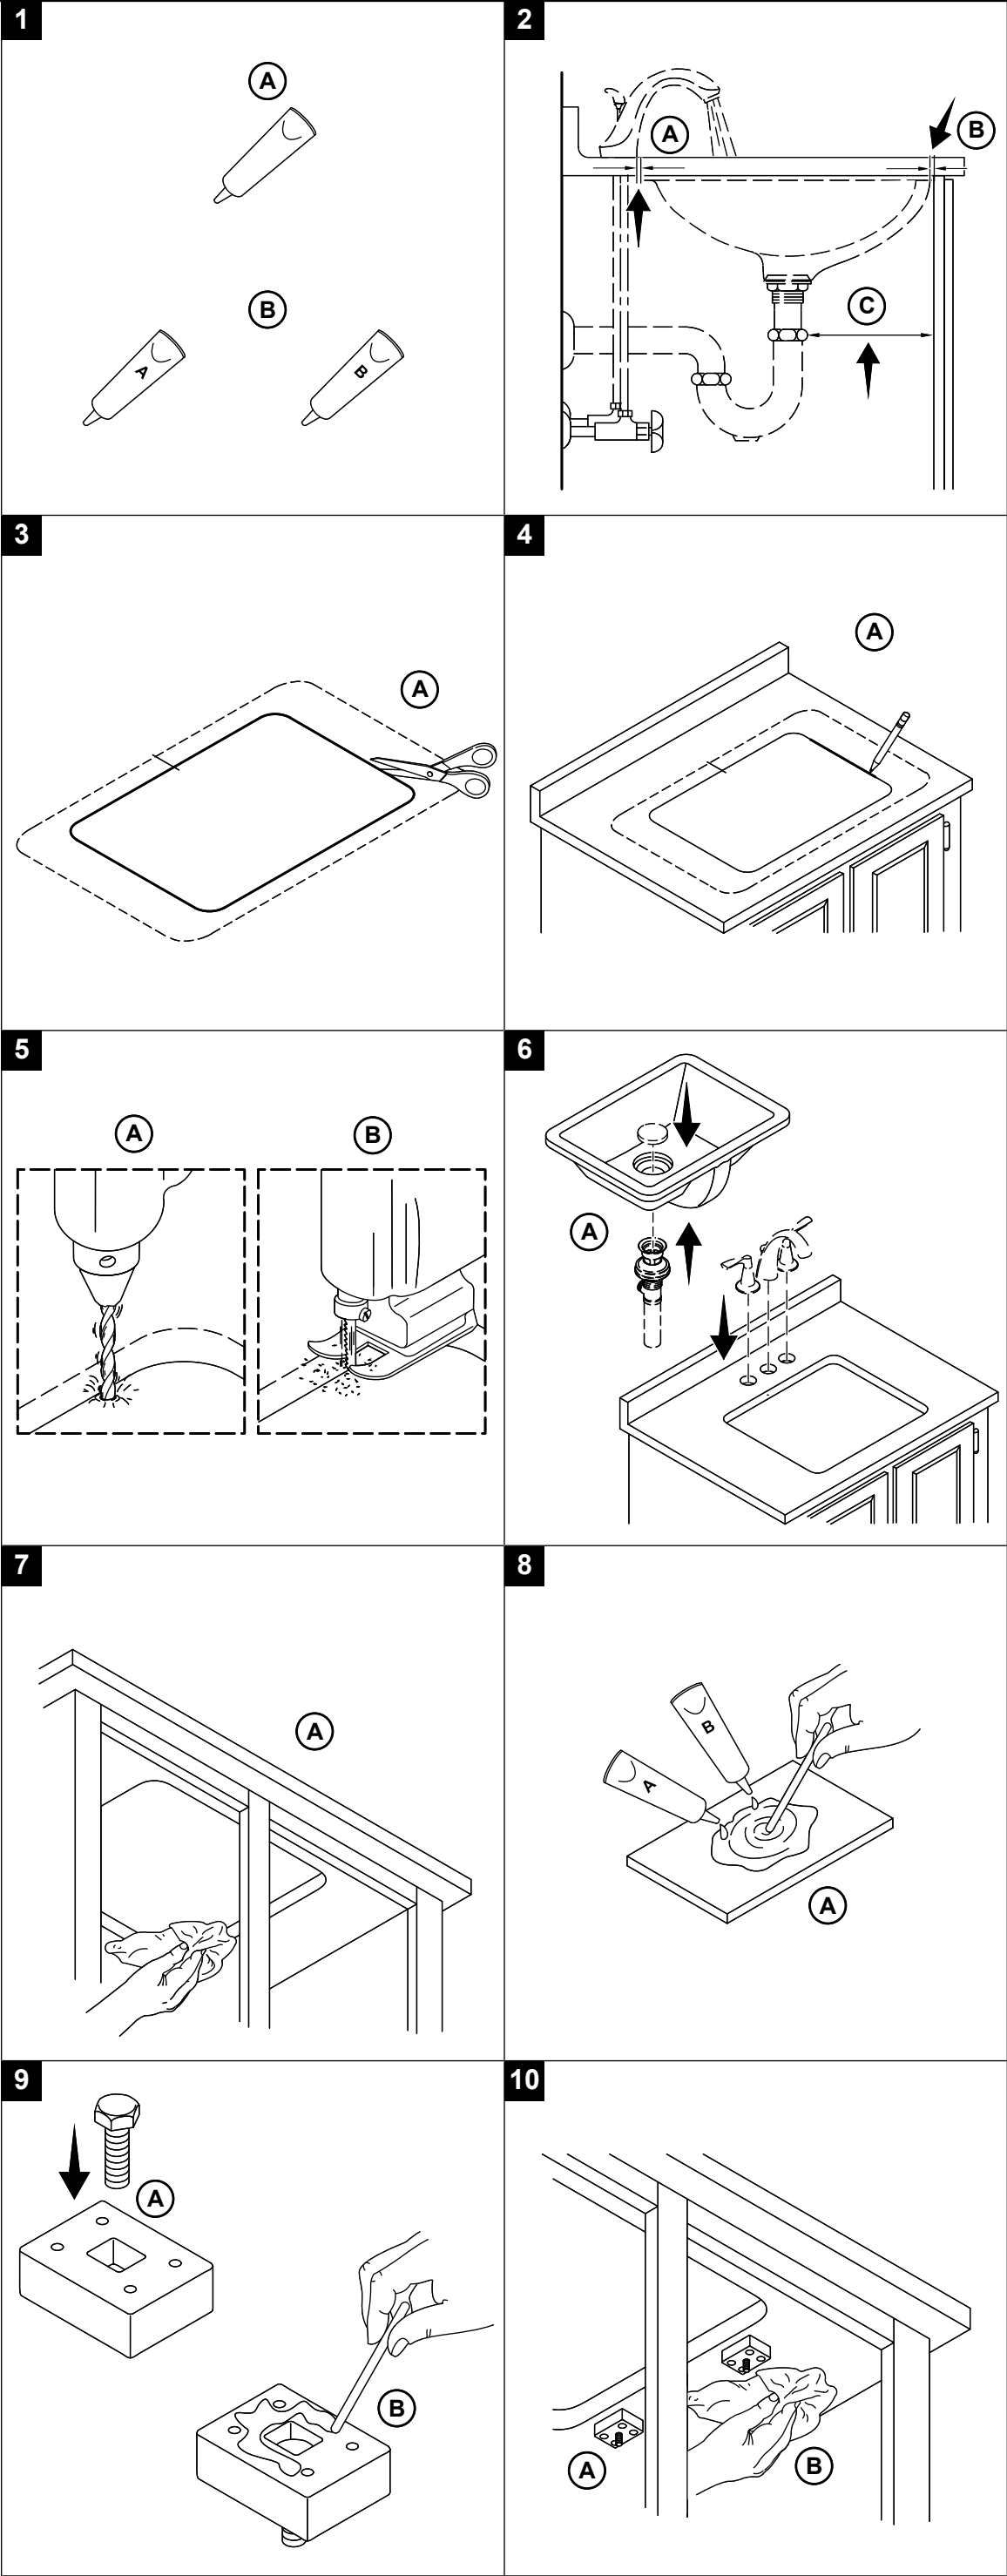


11

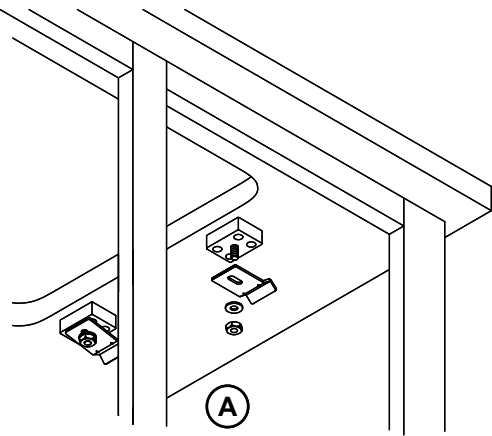


12

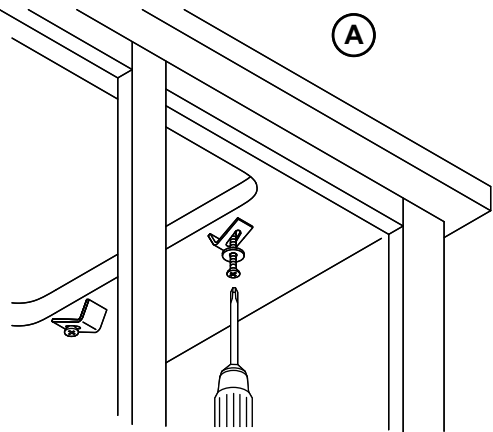


13

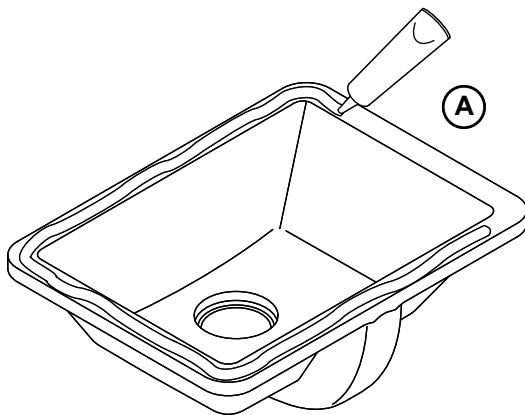


14

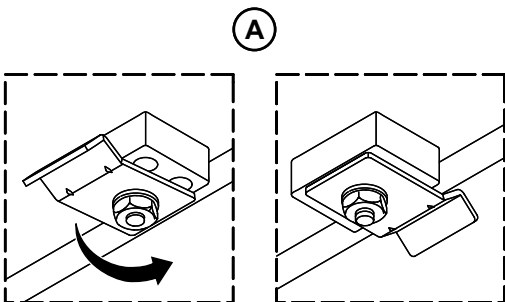


15

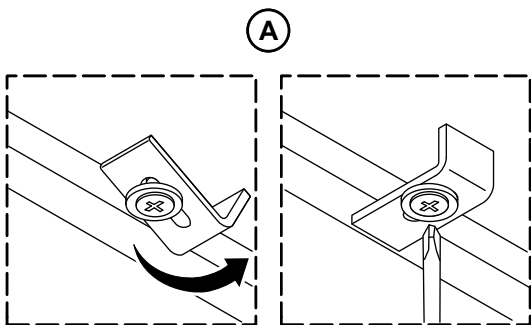

16

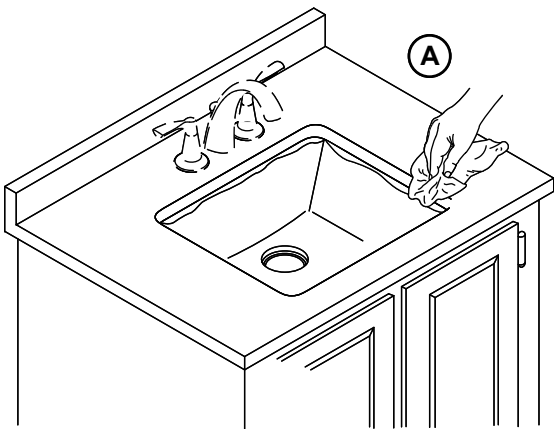

17

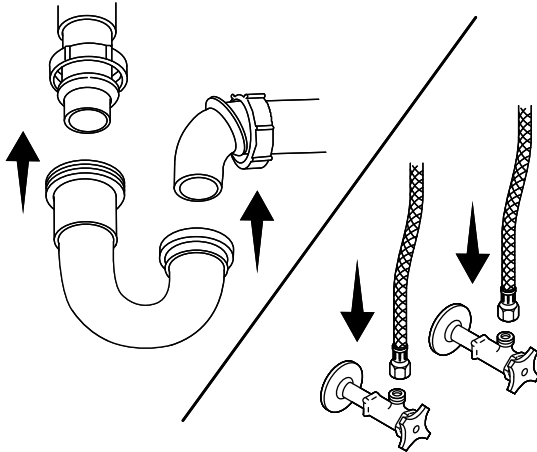

18

