

BEFORE YOU BEGIN

Thank you. You have just purchased the best bath drain your money can buy. Kohler drains work smoothly and reliably, and keep their gleaming finishes. For easy installation, follow these step-by-step instructions.

Carefully read these instructions before you attempt to remove your old drain or install your new one. Make sure you have the proper tools and materials listed on the following page to complete the job. This will help you avoid unnecessary expense resulting from improper installation.

Your new Kohler drain has been designed for easy installation using common household tools.

PARTS IDENTIFICATION


安装之前

感谢您购买品质卓越的浴缸排水。科勒排水工作通畅、可靠，光洁持久。请遵循以下安装步骤，完成便捷安装。

在拆除旧排水准备安装新排水时请仔细阅读以下说明。请使用以下列出的工具和材料完成安装，以免安装失误造成不必要的损失。

只要使用普通家用工具即可安装科勒浴缸排水。

零件识别

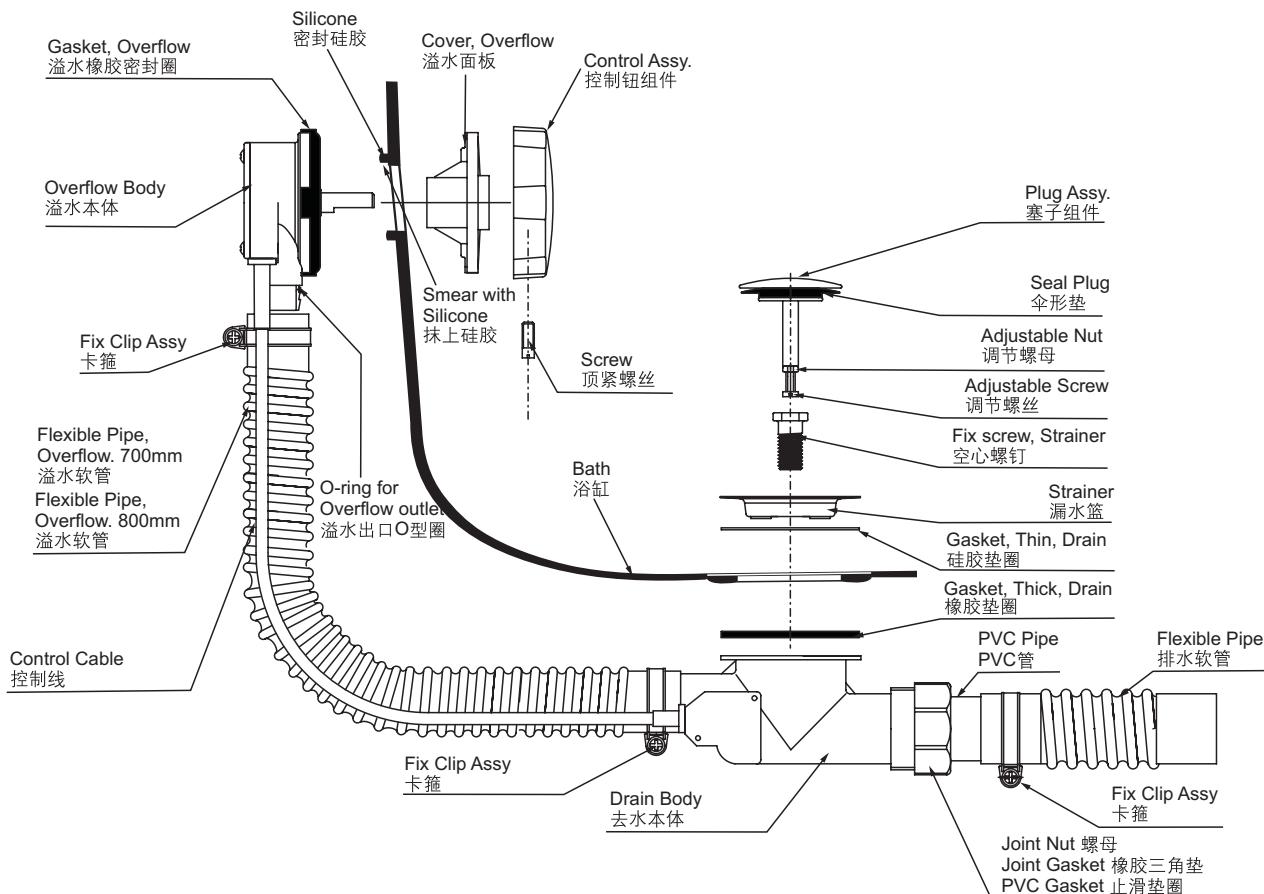

BATH INSTALLATION INSTRUCTION

浴缸排水安装说明

Unpack drain and ensure that the Control Cable is not twisted or awkwardly bent.

Please ensure that the bath is placed on wooden blocks or bricks to protect the waste body under the bath.

Installation steps:

- 1) Fit Drain Gasket Thin to Strainer.
- 2) Insert Strainer into hole in bath from upper side.
- 3) Fit Drain Gasket Thick to Drain Body and Drain Body to underside of bath.
- 4) Strainer to Drain Body by means of Fix Screw Strainer. **Do not tighten firmly at this stage.**
- 5) Apply a bead of silicone around the overflow hole, on the outside of the bath. Smear with silicone the inside wall of overflow hole (As shown).
- 6) Fit Gasket Overflow to Overflow Body and offer this assembly to back of overflow opening, ensuring they are centrally positioned and then screw Overflow Cover on to central spindle.
- Ensure Control Cable is not twisted before fully tightening Overflow Cover . In the event that the Control Cable is twisted or jammed, the pop-up mechanism will not operate.
- 7) Centralise Strainer with Drain Body by lining up ribs of each directly in line and tighten Fix Screw with a coin or suitable screwdriver.
Do not overtighten - handtight plus 1/4 turn should be sufficient.
- 8) Adjust Plug Body by twisting Handle to the 'up' position and then fix Plug height by use of Adjustable Screw.
- 9) Secure Flexible Pipe by tightening Fix Clip Assy.
- 10) Set drain pipe:

Insert PVC Pipe to Drain Body Assy, put on Joint Gasket and PVC Gasket, tighten Joint Nut, then put Flexible Pipe on the other end of PVC Pipe, tighten Fix Clip Assy.

Check if the pop-up mechanism is operating correctly. If the plug can not be pulled to the desired height, please adjust the control cable to see if it is twisted. Proceed with bath installation only after you've ensured that the drain functions normally.

打开排水包装，确保控制线没有扭曲打结。

为保护浴缸下方的排水件，请确保浴缸被放置在木架或砖块之上。

安装步骤:

- 1) 将硅胶垫圈垫于漏水篮处。
- 2) 从浴缸的上方将漏水篮插入排水口。
- 3) 将橡胶垫圈垫于去水本体上并置于浴缸底部，排水口下端。
- 4) 用空心螺钉固定漏水篮和去水本体，注意在此时不要将螺钉旋得太紧。
- 5) 从浴缸的外面朝溢水口处涂一圈密封硅胶。再在溢水口内壁处涂上硅胶。(如图)
- 6) 将溢水橡胶密封圈套在溢水本体上，然后放在浴缸溢水口的背面并确保它们置中放置，然后将溢水面板旋到溢水本体的中心轴上。

在拧紧溢面板前请确保控制线没有扭曲打结。控制线打结或扭曲会造成提拉式去水工作失灵。

- 7) 将漏水篮和排水本体置中排列并排成一线后用硬币或合适的螺丝刀拧紧空心螺钉。

不要过分拧紧----用手拧紧后再拧1/4圈时拧紧力就已足够。

- 8) 通过旋转把手将止水塞提升到高位排水状态，然后用调节螺丝调整止水塞高度。

- 9) 旋紧卡箍组件来调节和固定溢水软管。


10) 安装排水软管:

先将PVC短管插入排水本体，套上橡胶三角垫和止滑垫圈，旋紧螺母，再将排水软管套在PVC短管的另一端，旋紧卡箍组件。

检查提拉式排水是否正常工作。如果不能，需要调节止水塞高度或者控制线可能扭曲打结。在您检查并确认浴缸排水工作正常后才可进行浴缸的下步安装。

KOHLER®

浴缸排水件
BATH DRAIN
维修零件图
SERVICE PARTS PAGE
K-17188T/K-18417T

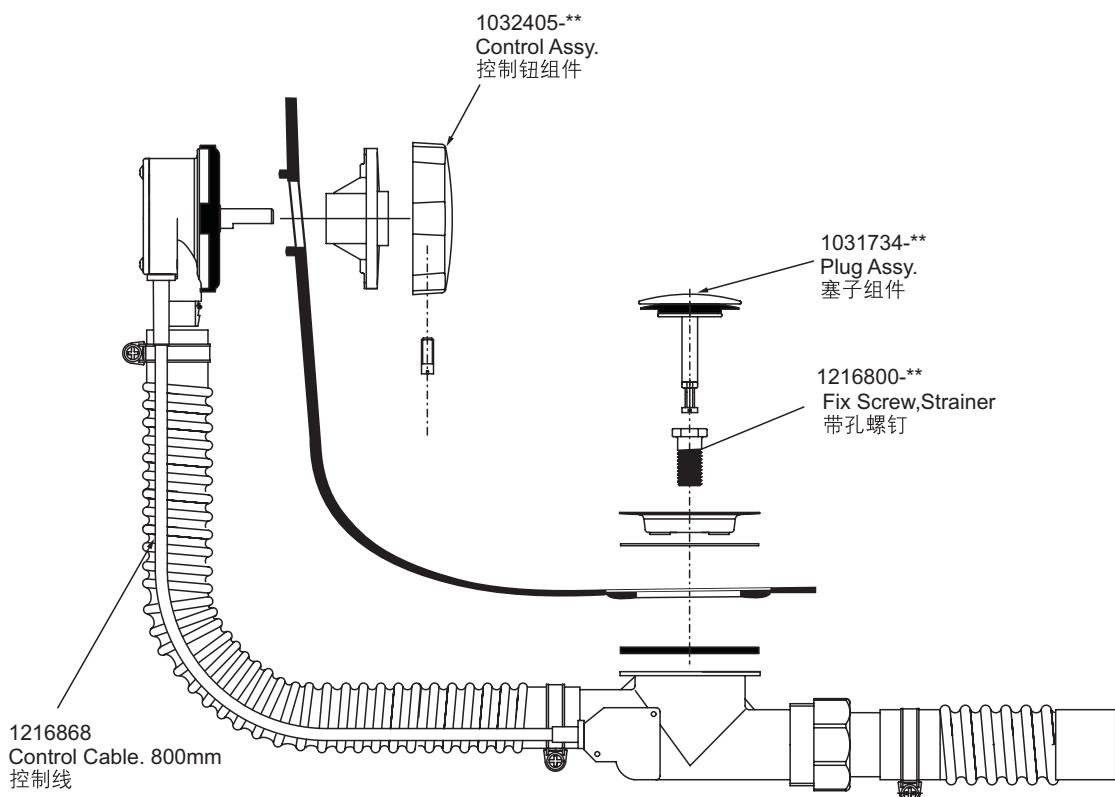

-** include: -**包括:		
-CP-Polished Chrome -抛光镀铬	-AF-French Gold -法金表面	-BN-Brushed Nickel -拉丝镀镍
-BV-Brushed Bronze -拉丝镀铜	-SN-Polished Nickel -抛光镀镍	

订购时请说明颜色代码(*)或表面处理(**)
Color code (*) or finish (**) must be specified when ordering.