




3-Way Shower Column - Direct

1

ROUGH-IN DIMENSIONS



安装步骤

INSTALLATION



如何安装水龙头

为安装顺利，G1/2"内螺纹管道配件(1)应已装好，预留150mm的间距，保持水平。管道配件要垂直且不能突出装修好的墙面。热供水管装在左边。

彻底冲洗供水管以清除管路中的杂质。在两个接头(2)涂上螺纹密封胶或缠绕足以密封的密封胶带，旋入冷热水管中。

调节两个接头使其中心距离为150mm并保持同一水平线，凸出墙面27~32mm。把装饰罩(3)旋在接头上使其紧贴墙面。

把垫片(4)放入水龙头螺母(5)内，把螺母旋到接头上并拧紧。**注意：**在锁紧螺母时须用带状扳手或用软布垫在普通扳手和螺母之间，以保护镀层表面。

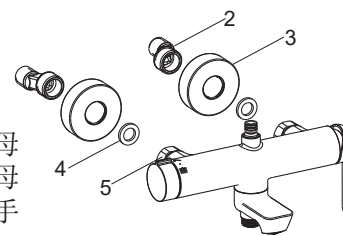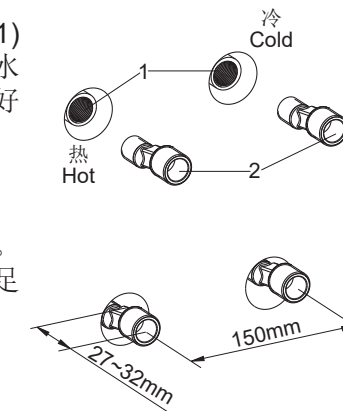

How to Install the Faucet

To perform installation, installer must provide G1/2" female supply fittings(1), spaced 150mm apart and horizontally. The supply fittings should be vertical and not beyond the finished wall. Hot supply pipe must be located on the left.

Flush the water supply pipes thoroughly to remove debris. Install the two offset connectors(2) into the hot and cold supply pipes. Use appropriate thread sealants or thread tape on pipe threads.

Adjust the center-to-center distance between the connectors to 150mm horizontally. They should extend 27~32mm beyond the finished wall. Thread the escutcheons(3) onto the connectors until they are against the wall.

Put the washers(4) into the nuts(5). Thread and tighten the nuts to the connectors. **NOTE:** When tighten the nuts, use strap wrench or soft cloth between product and regular wrench to protect the finish.


如何安装花洒淋浴柱

试装滑杆组件(6)，以确定底座(7)的安装位置。将底座(7)插入到接头(8)上。将滑杆组件(6)插在本体连接头(9)上，需要插到底。确保滑杆组件竖直，用铅笔在墙壁上标出底座安装孔位。分别拆下滑杆组件和底座。

根据胀塞(10)直径在墙面上标记处打孔。放入胀塞，用自攻螺钉(11)固定底座(7)。

将接头(8)插入到底座(7)中。将滑杆组件(6)插在本体连接头(9)上，需要插到底。用2.5mm六角扳手(12)锁紧三个固定螺钉(13)。

将弯管组件(14)装入滑杆组件(6)，然后用带状扳手或用软布垫在普通扳手和螺母之间，将螺母(15)旋紧到滑杆组件上，保持弯管出水口朝前。

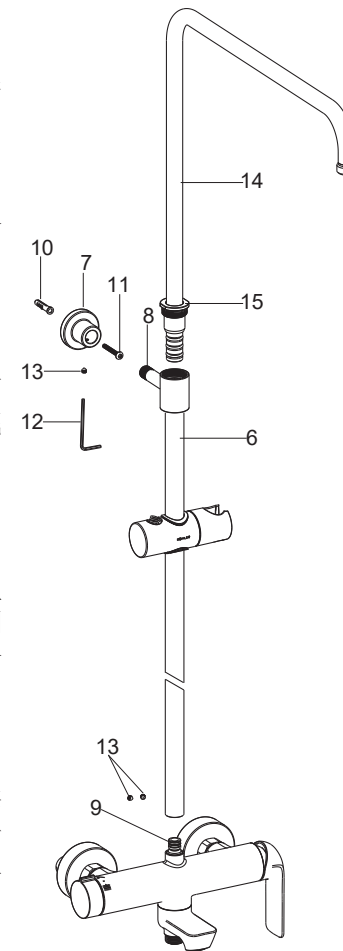

How to Install the Shower Column

Rehearse slide bar kit(6) installation for the base(7) mounting location determination. Insert the base(7) onto the supporter(8). Put the slide bar kit(6) onto the connector(9) firmly to the end. Make sure the slide bar kit is vertical. Mark the location of the base with a pencil. Uninstall the slide bar kit and base.

Drill hole in the finished wall according to the diameter of the anchor(10). Insert the anchor into the hole. Secure the base(7) by self-tapping screw(11).

Insert the supporter(8) into the base(7). Install the slide bar kit(6) onto the connector (9) firmly to the end. Tighten three screws (13) with 2.5mm hex wrench(12).


Install the tube kit(14) into the slide bar kit (6). Then screw the nut(15) onto the slide bar kit with strap wrench or soft cloth between the nut and regular wrench. Make sure the outlet of the tube kit faces front.

如何安装手持花洒

安装手持花洒(16)前，旋转左把手至手持花洒出水状态，打开冷热水源冲掉管路中的杂质。

根据需要将单向阀(17)塞入手持花洒进水口，将滤网垫片(18)放入软管(19)接头内，用软管连接接头(20)和手持花洒。锁紧所有衔接螺母。

将花洒挂在花洒挂架(21)上。

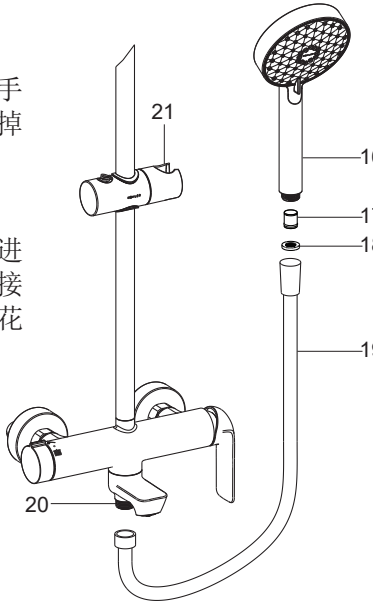

How to Install the Handshower

Ensure it is in the position for handshower (16). Flush hot and cold water supplies to remove any debris before the handshower is installed.


Put the check valve(17) into the handshower if needed. Put the screen washer(18) into the hose(19). Connect the connector(20) and handshower with hose. Tighten all the connectors.

Hang the handshower on the bracket(21).

如何安装头顶花洒

安装头顶花洒(22)前，旋转左把手至头顶花洒出水状态，打开冷热水源冲掉管路中的杂质。

根据需要安装限流器(23)。先取出垫片(24)，按图示方向放入限流器，再装回垫片。将头顶花洒旋到弯管组件出水口(25)上，用带状扳手锁紧。

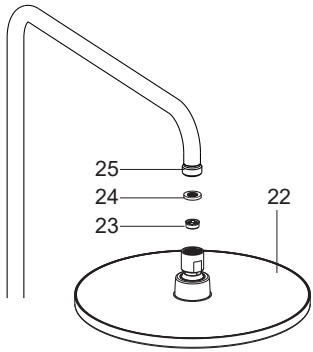

How to Install the Showerhead


Ensure that it is in the position for showerhead(22). Flush hot and cold water supplies to remove any debris before the showerhead is installed.

Before installation, put the regulator(23) into the showerhead if needed. Take out the washer(24) and install the regulator as shown, reinstall the washer. Tighten the showerhead onto the tube kit outlet(25) with strap wrench.

安装结果检查

检查并确保所有衔接螺母都已拧紧。确保把手在关闭位置。打开主供水源，检查是否有漏水。如有漏水，修理之。

仅对于35783T，用硬币拆下起泡器(26)冲洗起泡器，关闭水龙头，重新装回起泡器。

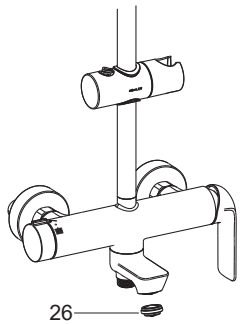

INSTALLATION CHECKOUT

Ensure all connections are tight. Ensure the handles are in the off position. Turn on the main water supply, and check for leaks. Repair as needed.

Only for 35783T, remove the aerator(26) with coin. Remove any debris from the aerator. Shut off the faucet. Reinstall the aerator.

清洗说明

适用于所有加工处理过的表面：以中性肥皂水清洗镀层表面，再以干净的软布彻底擦干整个表面，许多清洁剂，比如氨水、去污粉及洁厕灵等，会对电镀表面造成伤害，切忌使用。

有磨损性的清洁用具或清洁剂也不可使用于科勒牌的水龙头及其配件上。

CLEANING INSTRUCTIONS


All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.

KOHLER®
SERVICE PARTS
零件图

芙芮·凌
FORE LINE^(OL)
3-Way Shower Column - Direct

35771T-4 三出水淋浴柱 – 硬管连接 OL

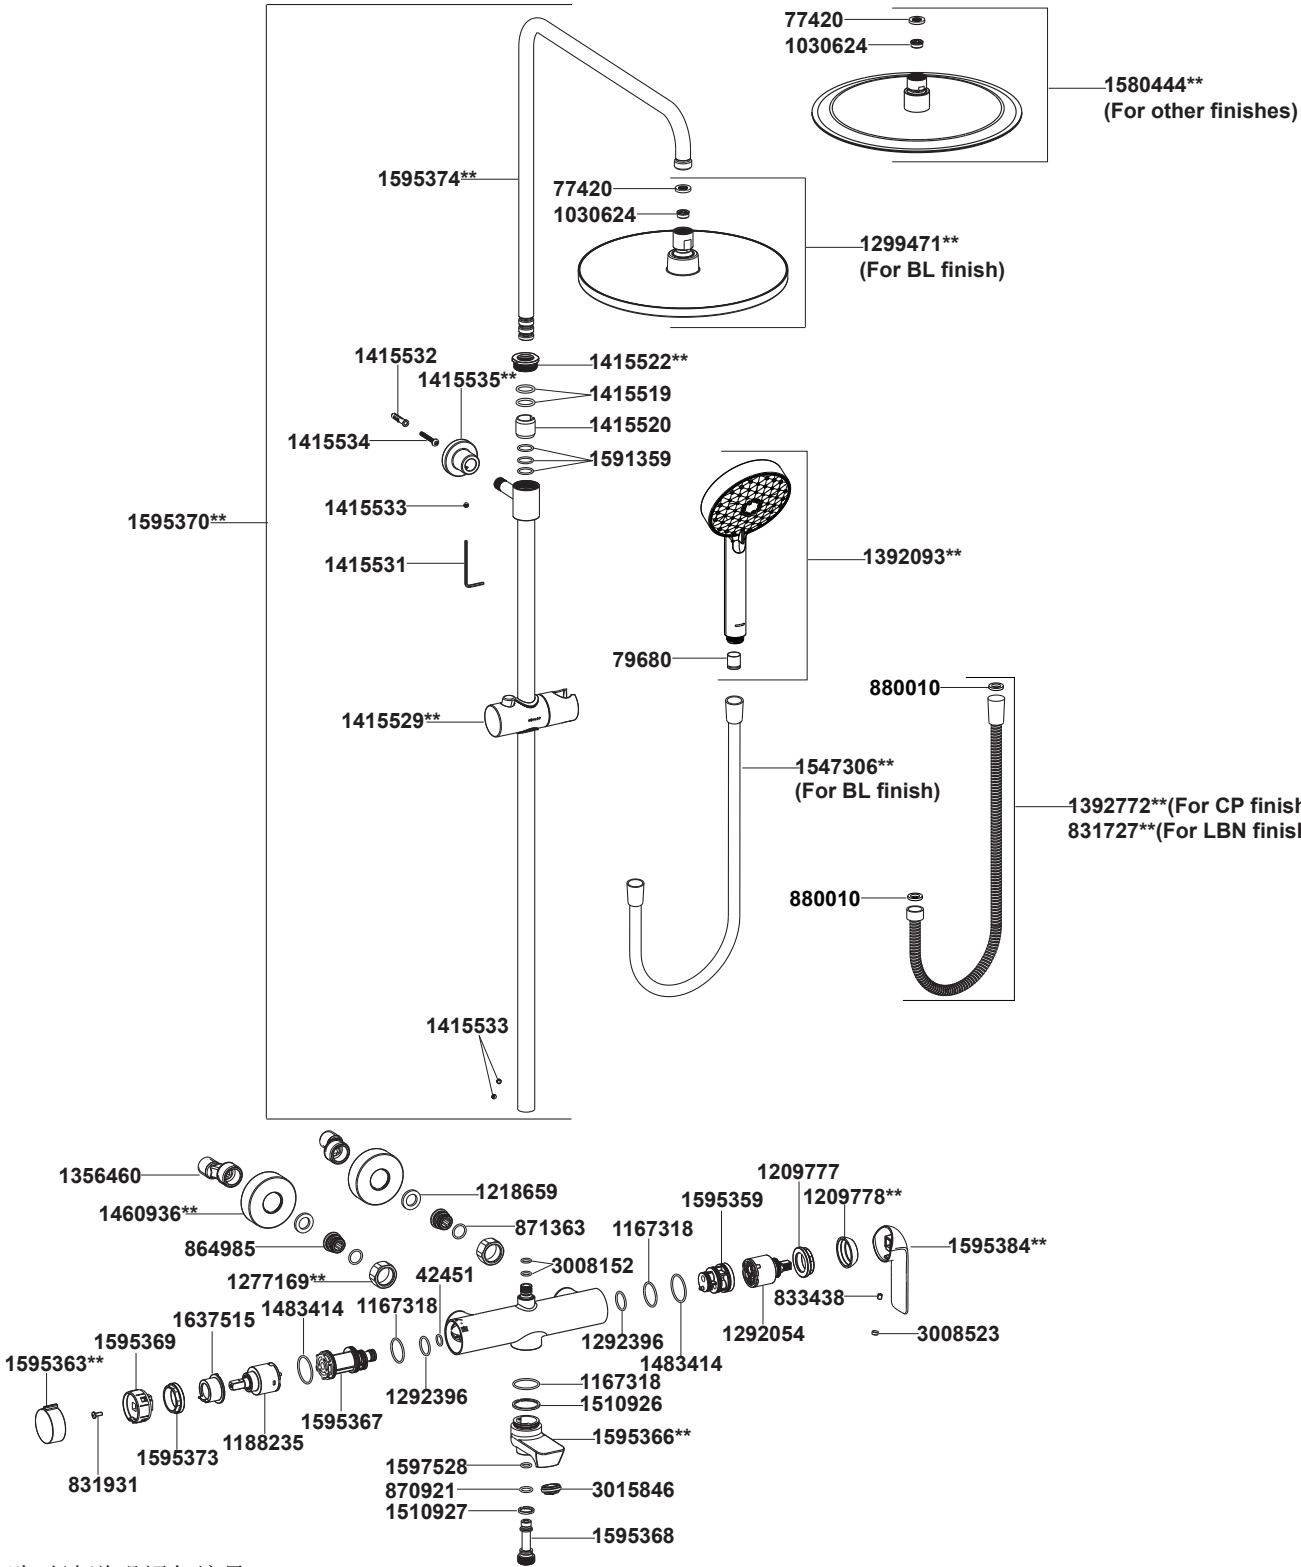

**订购时请说明颜色编号
**Color code must be specified when ordering