



Install the Anti-splash Cover assembly 705225ID-0 (To be purchased separately)

Install the assembly as shown below

Step 1: Cut off the tap from the roots at both ends.

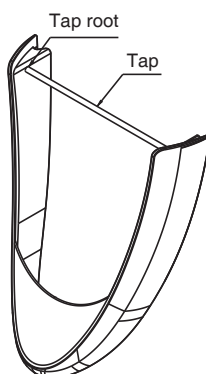

Step 2: Peel off the 3M tape from both ends.

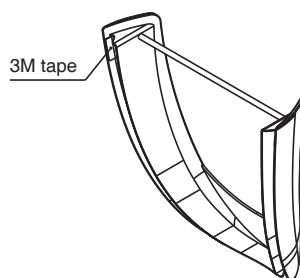

Step 3: Roughly align the silicone gasket of the urinal lid to the center of the urinal and press it on the rim. After the pee cover end is pressed against the rim, adhere the sides with 3M tape onto the vitreous china face. Now, the urinal is completely installed.

