


**订购时请说明颜色编号
**Color code must be specified when ordering

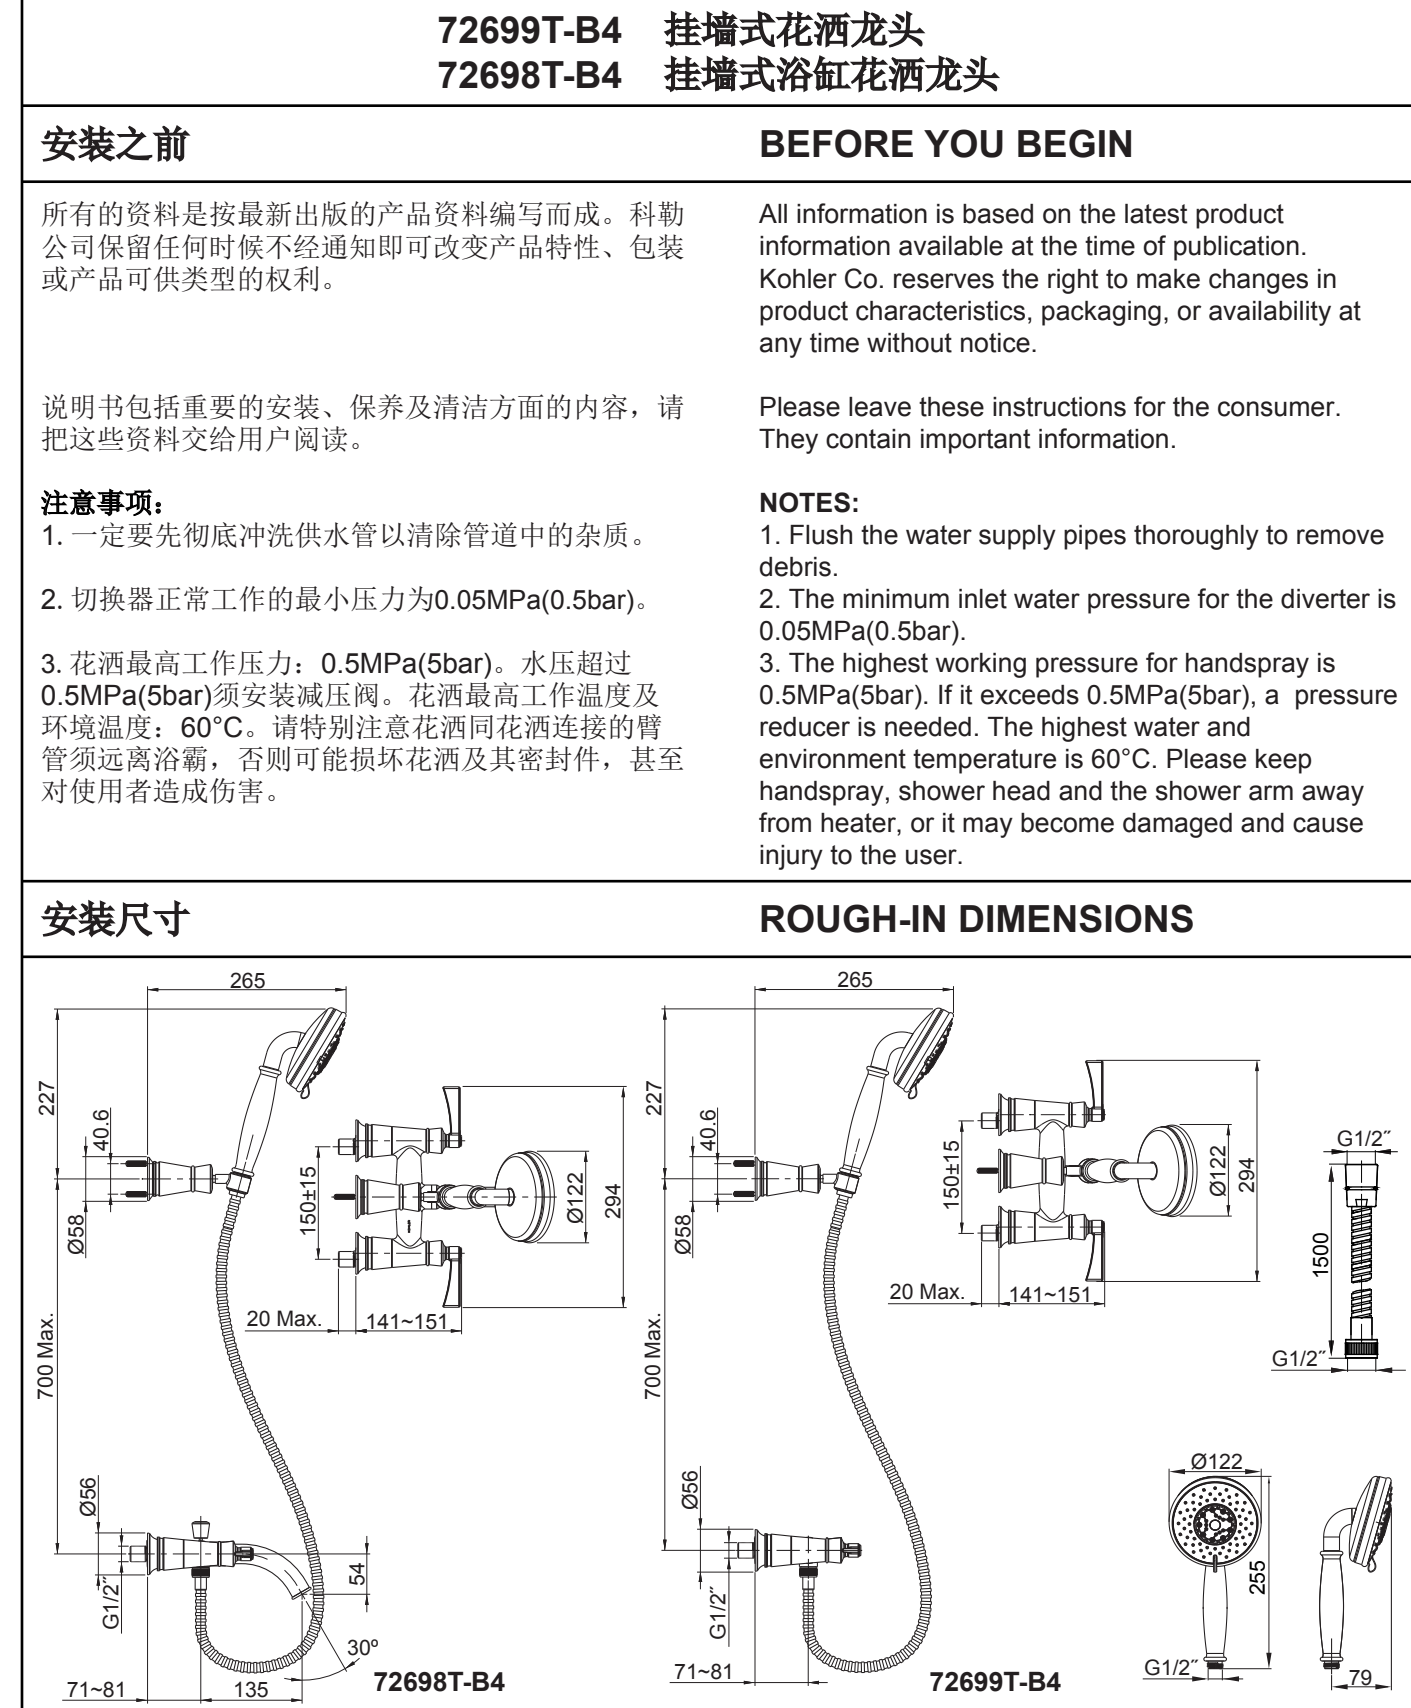

使用说明	HANDLE OPERATION
逆时针旋转左把手为开，顺时针旋转右把手为开。	Left handle opens with turning counter-clockwise, and right handle opens with turning clockwise.
对于72698T-B4，将切换器轻轻提起，切换至手持花洒出水。	For 72698T-B4, lift the diverter gently, handspray works.
安装步骤	INSTALLATION
<div>如何安装水龙头</div> <p>为使安装顺利，G1/2”内螺纹管道配件(1)应已装好。预留150mm的间距，保持水平。管道配件要垂直且不能凸出装修好的墙面。热供水管装在左边。</p> <p>在两个接头(2)涂上螺纹密封胶或缠绕足以密封的密封胶带，旋入冷热水管中。</p> <p>调节两个接头，使其中心距离为150mm并保持同一水平。它们凸出墙面的尺寸应该在40到50mm之间。</p> <p>将装饰罩组件(3)旋紧到接头上且与墙面接触。将垫片(4)放入水龙头螺母(5)中，将螺母旋到接头上。用扳手(6)锁紧螺母。旋松装饰罩(7)使其完全盖住螺母。</p> <p>根据需要将限流器(12)装入花洒(11)进水端，将垫片(8)装入软管(9)的两端，用软管连接出水口(10)和花洒。</p>	<div>How To Install The Faucet</div> <p>To perform installation, installer must provide G1/2” female supply fittings(1), spaced 150mm apart and horizontal. The supply fittings should be vertical and not beyond the finished wall. Hot supply pipe must be located on the left.</p> <p>Install the two offset connectors(2) into the hot and cold supply pipes. Use appropriate thread sealants or thread tape on pipe threads.</p> <p>Adjust the center-to-center distance between the connectors to 150mm and horizontal. They should extend 40mm to 50mm beyond the finished wall.</p> <p>Thread the escutcheon kits(3) onto the connectors until they are against the finished wall. Put the washers(4) into the nuts(5), thread the nuts to connectors. Tighten the nuts with the wrench(6). Loosen the escutcheons(7) so that they cover the nuts.</p> <p>Install the water flow restrictor(12) to the handspray(11) inlet if needed, put the washers(8) into the both ends of the hose(9). Connect faucet outlet(10) and handspray with hose.</p>
<div>如何安装花洒托架</div> <p>在墙面选一合适的位置来安装托架。</p> <p>根据安装尺寸在墙壁上标出底座(13)安装孔位。根据胀塞(14)直径钻孔，安装胀塞。旋紧螺钉(15)，固定底座。安装托架(16)之前，检查托架的花洒托环(17)是否松动，如果松动，用9.5mm六角扳手(客户自备)锁紧托架底部的螺母(18)。</p>	<div>How To Install The bracket</div> <p>Determine a suitable location on the finished wall to install the bracket.</p> <p>Mark bracket support(13) mounting hole locations on the wall according to the dimension. Drill two holes on the finished wall, the holes should match the anchors(14). Install the anchors. Tighten screws(15) to secure bracket support. Before installing the bracket (16), check if the ring(17) of the bracket loosen. If yes, tighten the nut(18) on the bottom of the bracket with 9.5mm hex wrench(not provided).</p>

在托架底部边缘涂一圈油灰或密封胶， 安装托架，使其紧贴墙壁且螺孔朝上。用六角扳手(19)旋紧螺钉(20)以固定托架。去除多余油灰或密封胶。	Apply a ring of plumbers putty or sealant around the back surface of the bracket. Install the bracket onto the bracket support until it contacts the finished wall, and keep screw hole up. Tighten the screw(20) with the hex wrench(19) to secure the bracket. Remove any excess putty or sealant.
将花洒挂到花洒托架上。	Hang the handspray on the shower bracket.
安装结果检查	INSTALLATION CHECKOUT
检查并确保所有的衔接处都已拧紧， 确保把手在关的位置。	Ensure that all connections are tight. Ensure that the handles are in the off position.
打开排水系统和主要供水源， 检查并修理有漏水的接口。	Turn on the drain and main water supply, and check for leaks. Repair as needed.
将花洒拆下。打开龙头的冷热水，让水流出约一分钟以清除杂质， 检查渗漏。关闭水龙头，重新装回花洒。	Remove the handspray, Turn on the faucet. Run the water about one minute to remove any debris. Check for leaks. Shut off the faucet. Reinstall the handspray.
清洗说明	CLEANING INSTRUCTIONS
适用于所有加工处理过的表面：以中性肥皂水清洗镀层表面，再以干净的软布彻底擦干整个表面，许多清洁剂，比如氨水、去污粉及洁厕灵等，会对电镀表面造成伤害，切忌使用。	All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning.
有磨损性的清洁用具或清洁剂也不可使用于科勒牌的水龙头及其配件上。	Do not use abrasive cleaners or solvents on Kohler faucets and fittings.