




Loure® | K-97343

Mounting-block for Loure® bath filler

Features

- For use with Loure® freestanding bath filler
- Can be installed without required freestanding bath filler

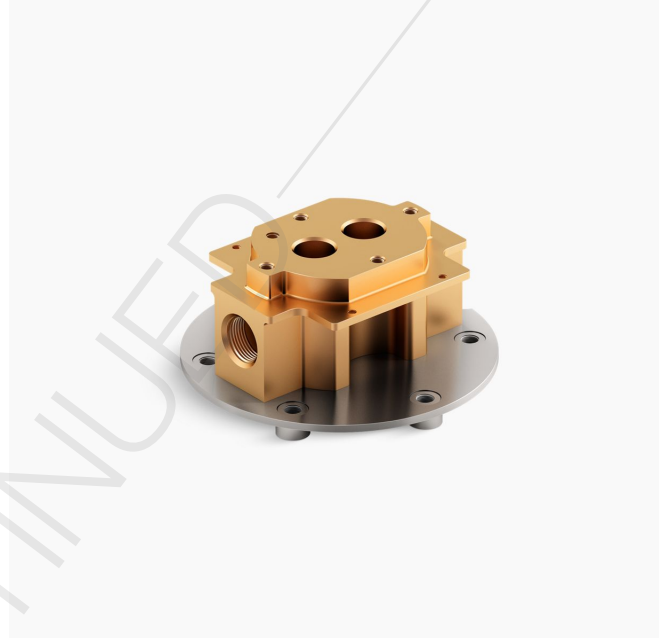

DISCONTINUED



Codes/Standards

ASME A112.18.1/CSA B125.1

Recommended Products/Accessories

K-23723 Faucet cleaner


Warranty

See website for detailed warranty information.

KOHLER® Faucet Lifetime Limited Warranty

DISCONTINUED



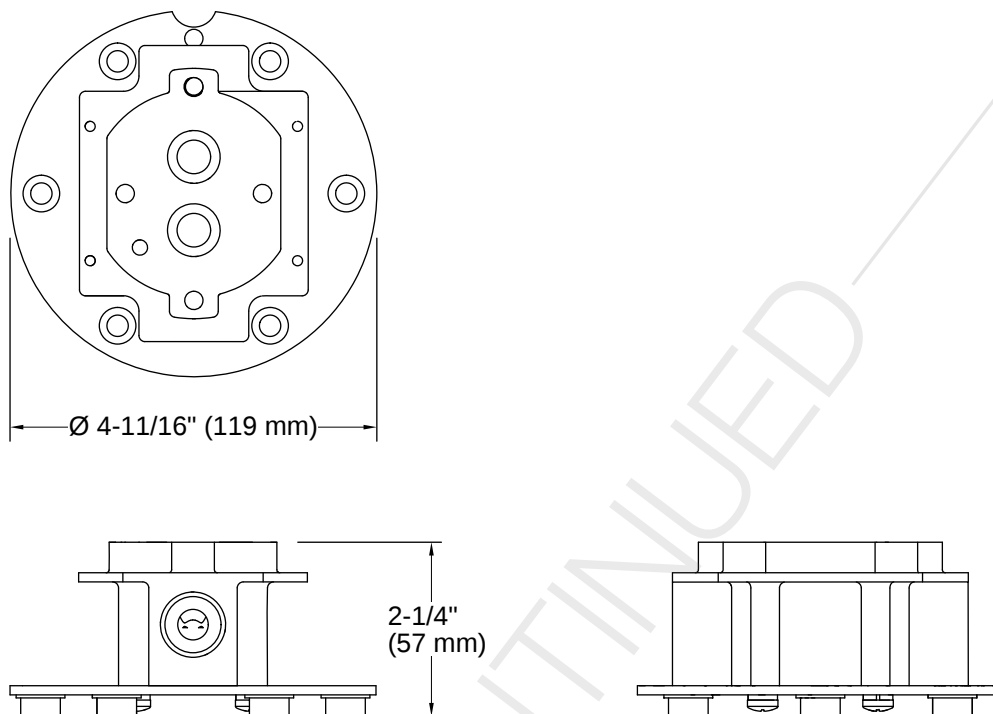

Installation Notes

Install this product according to the installation instructions.

Adequate floor support is required. The wood support must be a minimum of 2" (51 mm) thick by 6" (152 mm) wide. 2x6 lumber is NOT adequate for this application.

Concrete can be used as the floor support. Requires 3/16" masonry drill bit and six 1/4" x 1-3/4" concrete screws, not included.

