


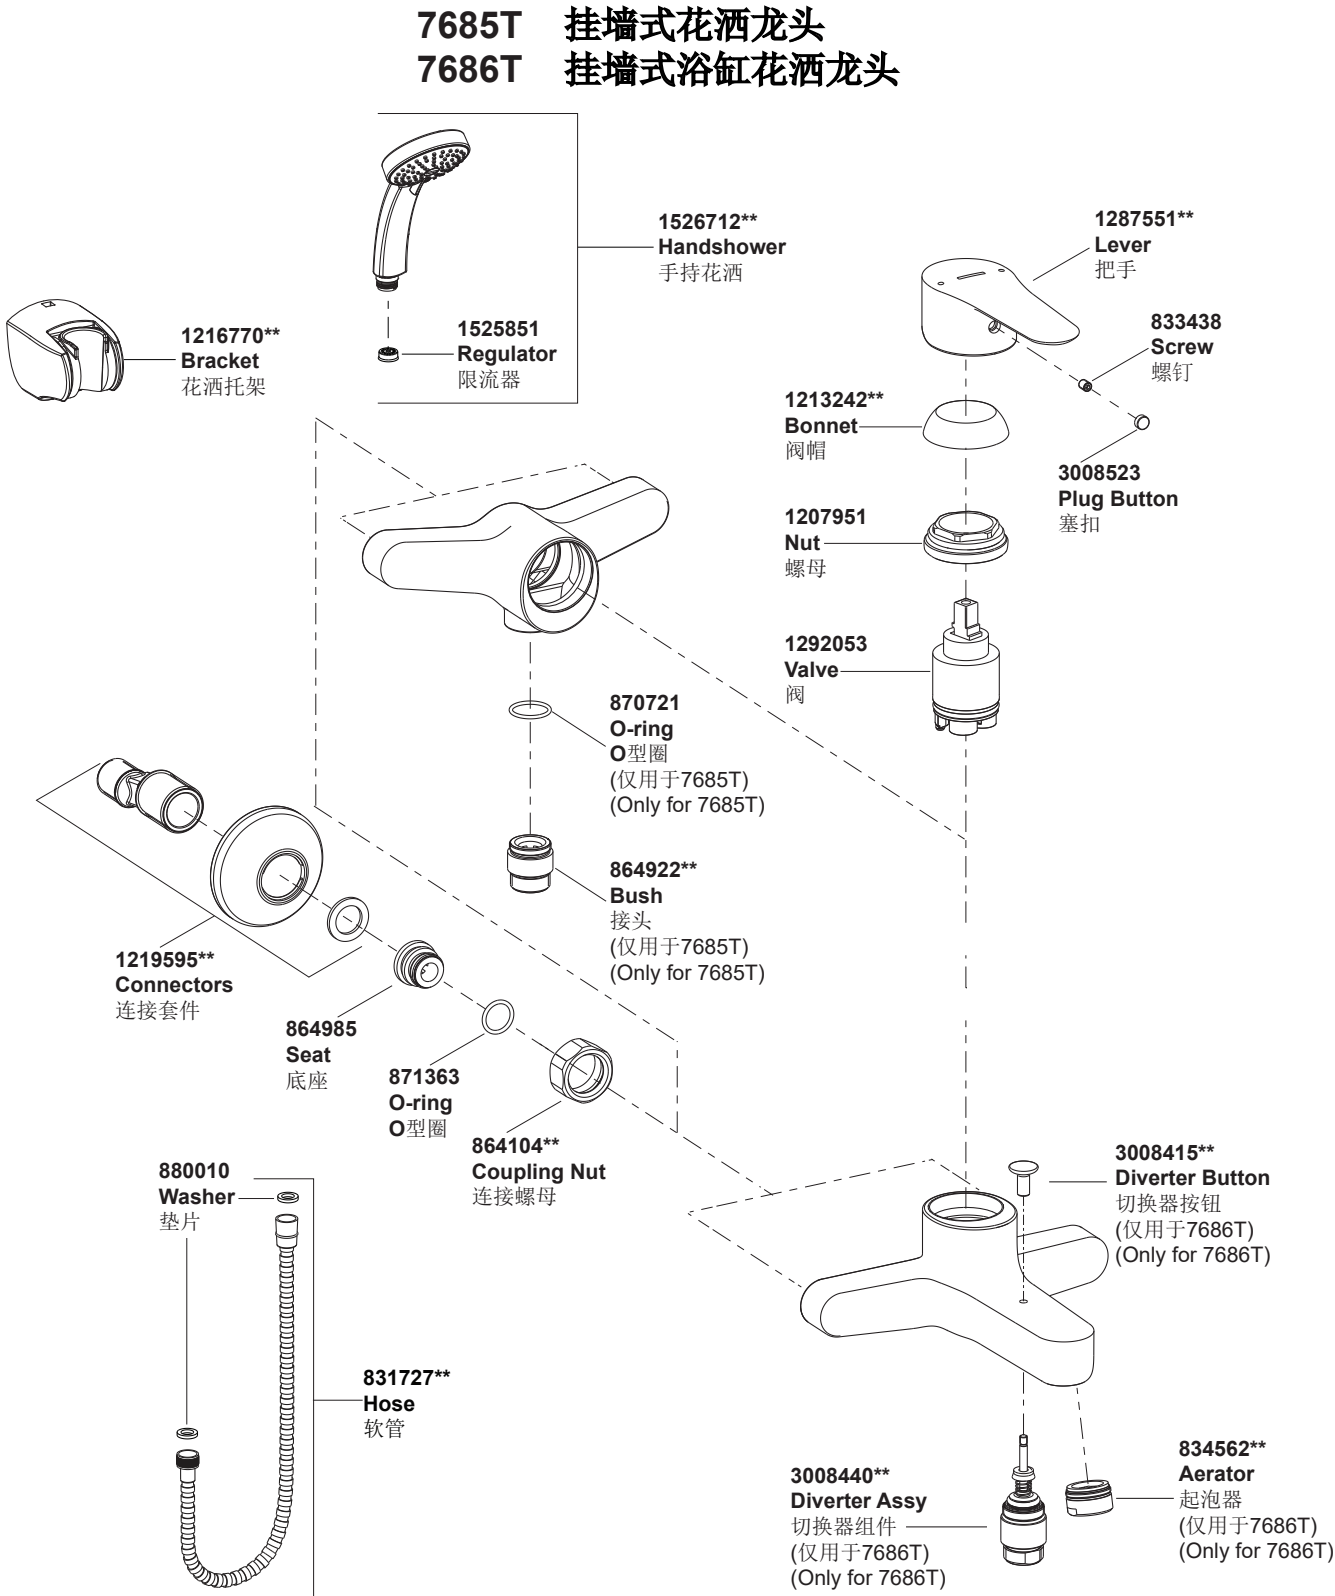

**订购时请说明颜色编号
**Color code must be specified when ordering

7685T 挂墙式花洒龙头 7686T 挂墙式浴缸花洒龙头	7685T 挂墙式花洒龙头 7686T 挂墙式浴缸花洒龙头
安装之前	BEFORE YOU BEGIN
所有的资料是按最新出版的产品资料编写而成。科勒公司保留任何时候不经通知即可改变产品特性、包装或产品可供类型的权利。 说明书包括重要的安装、保养及清洁方面的内容，请把这些资料交给用户阅读。 注意事项： - 遵守当地管路安装条例。检查供水管有无损坏。如需要，进行替换。 - 切换器正常工作的最小压力为0.05MPa(0.5bar)。 - 花洒最高工作压力：0.5MPa(5bar)。水压超过0.5MPa(5bar)须安装减压阀。花洒最高工作温度及环境温度：60℃。请特别注意花洒同花洒连接的臂管须远离浴霸，否则可能损坏花洒及其密封件，甚至对使用者造成伤害。 - 淋浴器加施的水效标识表明本产品的水效等级等性能符合GB 28378-2019《淋浴器水效限定值及水效等级》的要求，是产品符合性的一种标识。	All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice. Please leave these instructions for the consumer. They contain important information. NOTES: - Observe local plumbing codes. Inspect the supply tubing for damage. Replace if necessary. - The minimum inlet water pressure for diverter is 0.05MPa(0.5bar). - The highest working pressure for handshower & showerhead is 0.5MPa(5bar). If it exceeds 0.5MPa (5bar), a pressure reducer is needed. The highest water and environment temperature is 60°C. Please keep the handshower, showerhead and shower arm away from heater, or it may become damaged and cause injury to the user. - The water efficiency label applied to the shower indicates that the water efficiency grade and other performance of the product meet the requirements of GB 28378-2019 "Minimum Allowable Values of Water Efficiency and Water Efficiency Grades for Showers" which is a marking of product conformity.
安装尺寸	ROUGH-IN DIMENSIONS
7686T	7685T

安装说明

如何安装水龙头

为使安装顺利，G1/2"内螺纹管道配件(1)应已装好，预留150mm的间距，保持水平。管道配件要垂直并不能突出装修好的墙面。热供水管装在左边。

彻底冲洗供水管，以清除管路中的杂质。


使用合适的螺纹密封膏，安装两个接头(2)到冷热供水管。

调节两个接头，使其中心距离为150mm，并保持同一水平线，凸出墙面29mm。

把装饰罩(3)旋入接头，紧贴墙壁。把密封垫片(5)放入水龙头螺母内。把螺母(4)旋到接头上，并旋紧。

注意：在锁紧螺母时，须用带状扳手或用软布垫在普通扳手和螺母之间，以保护镀层表面。

根据需要将限流器(9)塞入花洒(10)进水口。用软管(8)带垫片(6)连接花洒与龙头接头(7)。

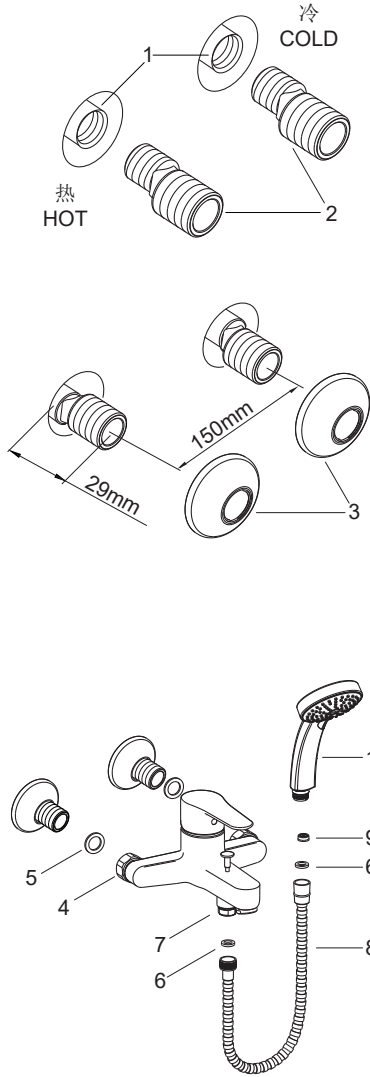

INSTALLATION

How to Install the Faucet

To perform installation, installer must provide G1/2" female supply fittings(1), spaced 150mm apart and horizontal. The supply fittings should be vertical and not beyond the finished wall. Hot supply pipe must be located on the left.

Flush the water supply pipes thoroughly to remove debris.

Use appropriate thread sealants on pipe threads. Install the two offset connectors (2) into the HOT and COLD supply pipes.

Adjust the center-to-center distance between the connectors to 150mm horizontally. They should be extend 29mm beyond the finished wall.

Thread the escutcheons(3) onto the connectors until they are against the finished wall. Put washers(5) into nuts(4) of the faucet. Thread the nuts to connectors.


NOTE: When tighten the nuts, use strap wrench or soft cloth between product and regular wrench to protect the finish.

Insert the water flow regulator(9) into the handshower(10) if needed. Connect the faucet outlet(7) and the handshower with hose(8) and washers(6).

如何安装托架

在墙面选一合适的位置来安装托架。根据孔距在墙面标记钻孔的位置，依据胀塞(11)直径打孔，安装胀塞。

旋紧螺钉(12)使底座(13，平面朝上)固定紧贴墙壁。将托架(14)扣在底座上，使凸台嵌入豁口。

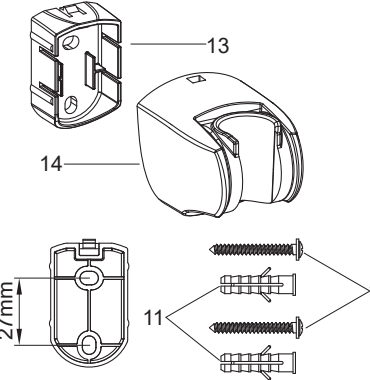

How to Install the Bracket

Determine a suitable location on the finished wall to install the bracket. Mark bracket base mounting hole locations on the wall according to the dimension. Drill two holes on the finished wall, the holes should match the anchors(11). Install the anchors.


Tighten screws(12) to secure bracket base(13, flat side upward). Put the bracket(14) onto the bracket base and lock by stopper.

安装结果检查

确定所有衔接螺母都已锁紧。确定手柄在关闭位置。

开启主水源，检查是否有漏水。如有漏水，修理之。

取下起泡器(15)和花洒(10)，打开冷热水，让水流出约一分钟以清除杂质。检查渗漏，清洗起泡器。然后关闭水龙头，并装回起泡器组件和花洒。

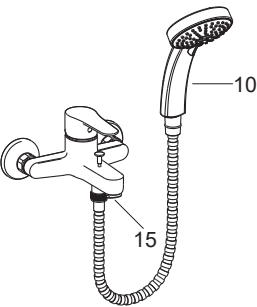

INSTALLATION CHECKOUT

Ensure that all coupling nuts are tight. Ensure that the lever handle is in the close position.

Turn on the main water supply, and check for leaks. Repair as needed.

Remove the aerator(15) and handshower (10). Run hot and cold water through the faucet for about one minute to remove any debris. Check for leaks. Remove any debris from the aerator assembly. Shut the faucet off, and reinstall the aerator assembly and handshower.

使用说明

将手柄轻轻提起，顺时针转为热水，逆时针转为冷水。对于7686T，龙头切换器处于正常位置时出水口出水；将切换器轻轻提起，顺时针旋转切换器，花洒出水；关闭龙头，逆时针旋转切换器到停止位置。

HANDLE OPERATION

Lift the handle gently. Turn clockwise for hot water, counter-clockwise for cold water. For 7686T, water flows out from spout when faucet diverter is in the normal position. Lift the diverter gently, turn clockwise for shower; shut off the faucet, turn counter-clockwise until it stops.

清理说明

适用于所有加工处理过的表面：以中性肥皂水清洗镀层表面，再以干净的软布彻底擦干整个表面，许多清洁剂，比如氨水、去污粉及洁厕灵等，会对电镀表面造成伤害，切忌使用。

CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning.

有磨损性的清洁用具或清洁剂也不可使用时科勒牌的水龙头及其配件上。

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.