

73158K-4

Single Handle Lavatory Faucet - Joystick Handle

73053K-4

Tall Single Handle Lavatory Faucet - Joystick Handle

BEFORE YOU BEGIN

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.


Please leave these instructions for the consumer. They contain important information.

- NOTES:
- 1. Flush the water supply pipes thoroughly to remove debris.
 - 2. If possible, install this faucet before installing the lavatory.
 - 3. Inspect the supply tubing for damage and leakage. Replace and maintain as necessary.
 - 4. Observe local plumbing codes.
 - 5. Shut off the water supplies to the fitting.


HANDLE OPERATION

Pull the handle gently. Turn clockwise for hot water, turn counter-clockwise for cold water.

ROUGH-IN DIMENSIONS

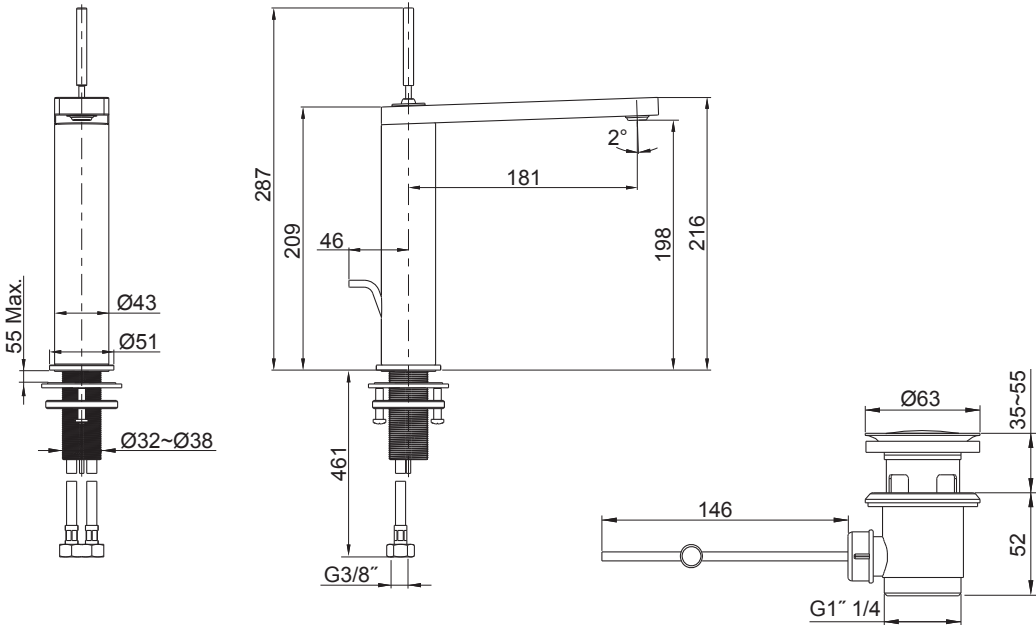


73053K-4

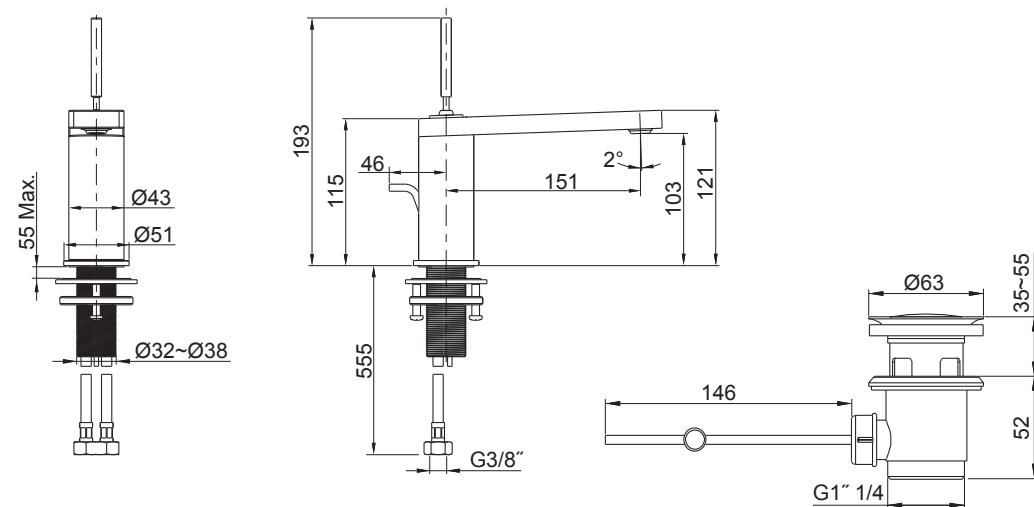

73158K-4

INSTALLATION

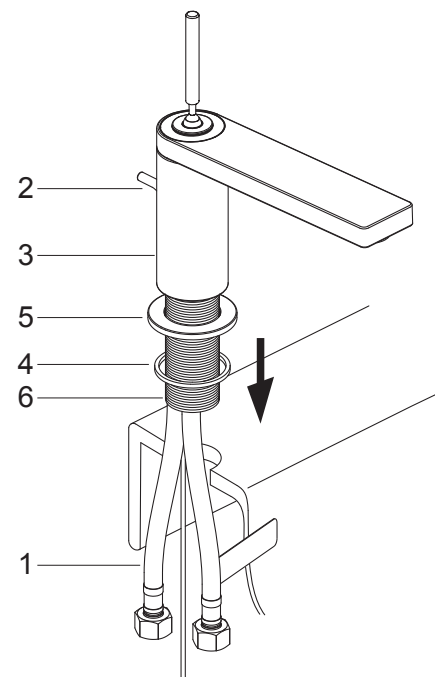

How to Install the Spout


If needed to take off the hoses(1) to repair, reinstall and tighten them by hand.

Insert lift rod(2) to the hole at the rear of the body(3). Install the washer(4) into the groove at the bottom of the escutcheon(5). Slide the escutcheon and the washer over the hoses(1) and shank(6).


Insert the faucet assembly into the lavatory hole.

①

73158K-4 Single Handle Lavatory Faucet - Joystick Handle
73053K-4 Tall Single Handle Lavatory Faucet - Joystick Handle

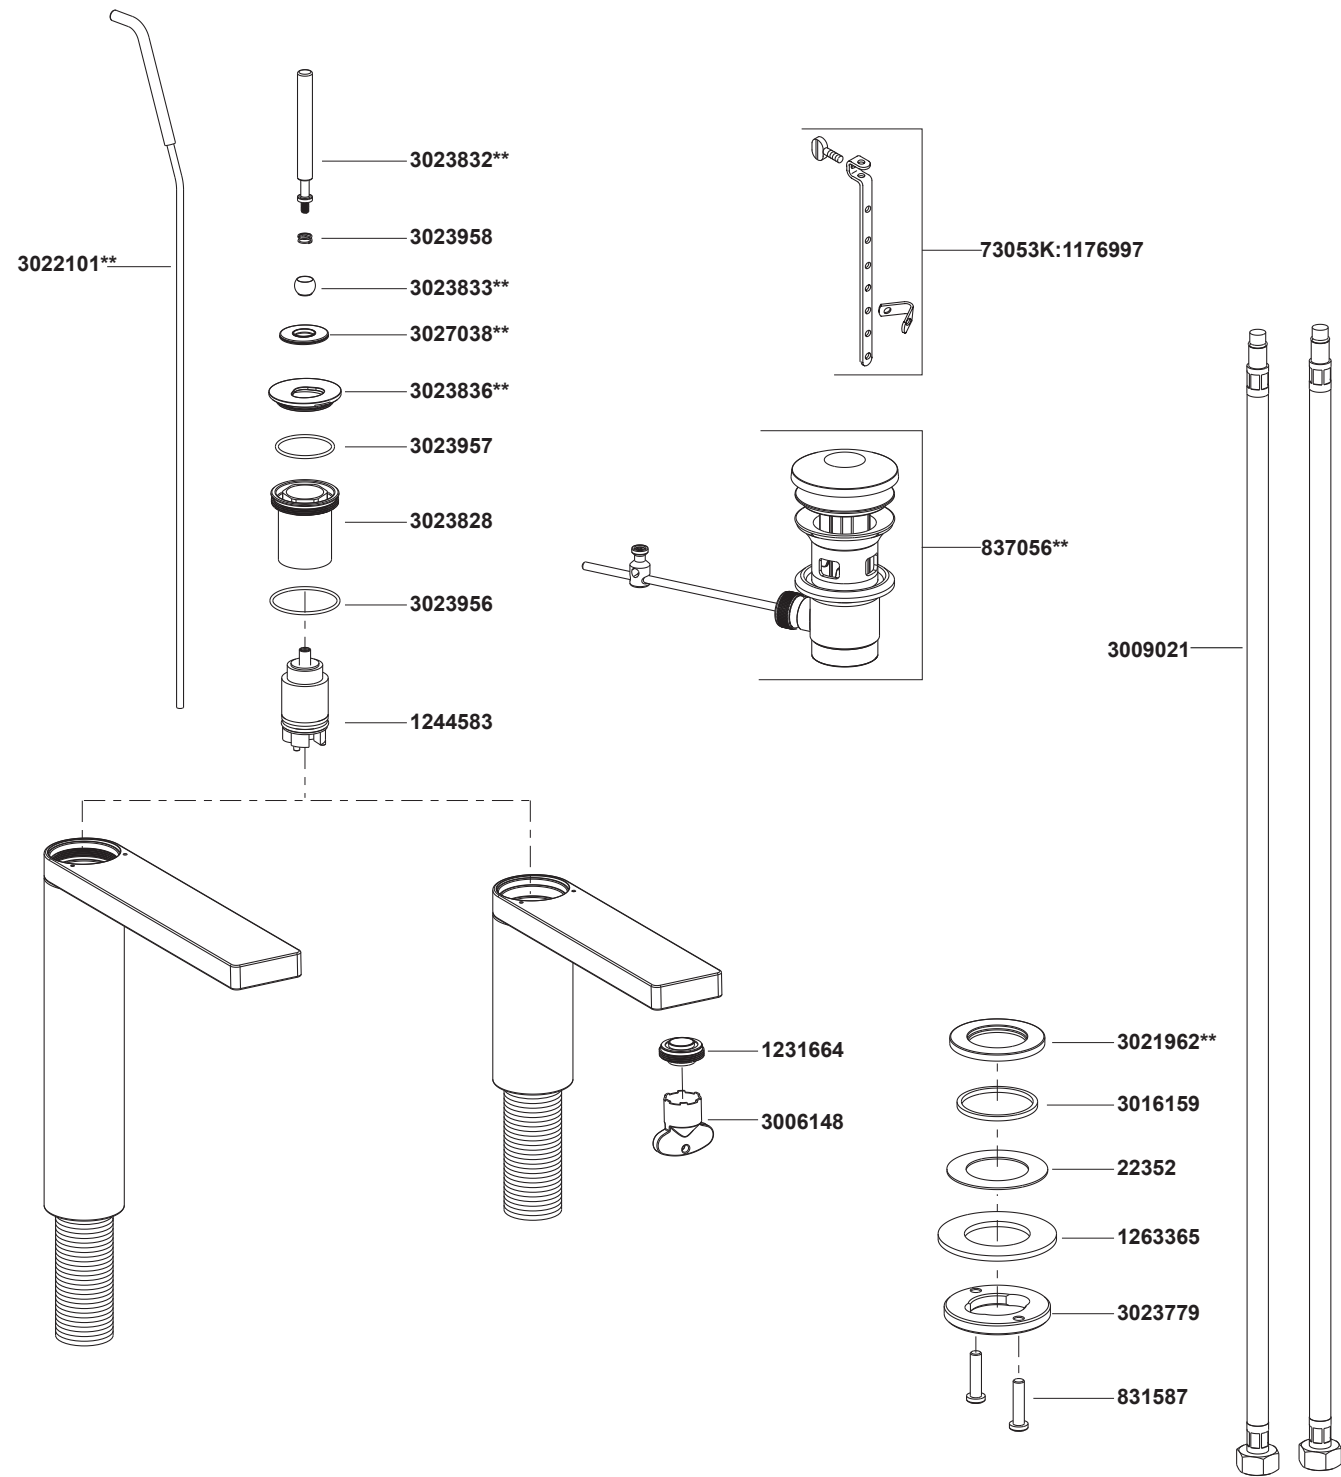


****Color code must be specified when ordering.**

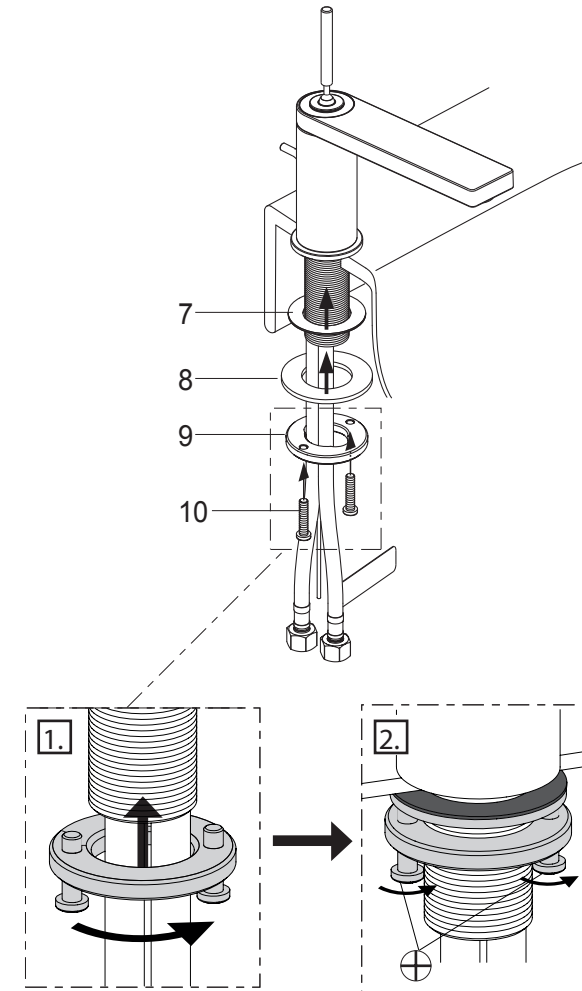


Position the faucet, install the screws (10) into the mounting nut(9). From underside of the lavatory, place the washers(7, 8) onto the shank. Tighten the mounting nut to secure the faucet. Tighten the screws.

Attach the hoses to water supplies.
The hose with "COLD" label connects
to cold water.

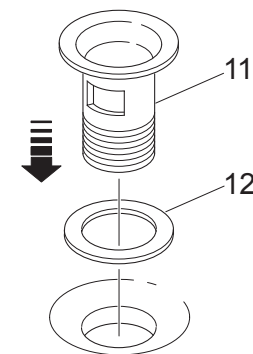


How to Install the Drain

Install the waste(11) with foam ring(12) into the drain hole.

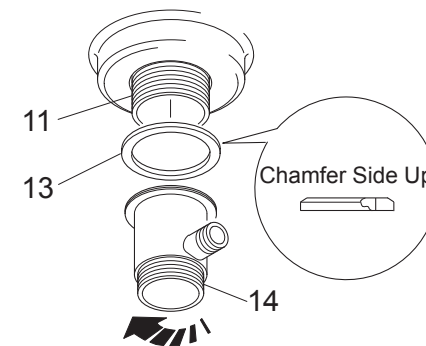

Install the seal(13), secure and tighten the drain body(14) to the waste by hand.

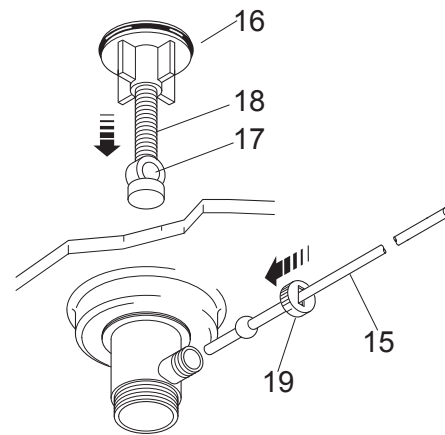

⑤


Adjust the drain body to enable the ball lever(15) and lift rod(2) to engage.

Insert the waste stopper kit(16) into the waste.

Insert the ball lever into the drain body and through the stopper hole(17).

Make sure that the ball lever engages with the waste stopper kit and adjust the waste stopper screw(18) if required.

Tighten the ball lever retaining nut(19) by hand.

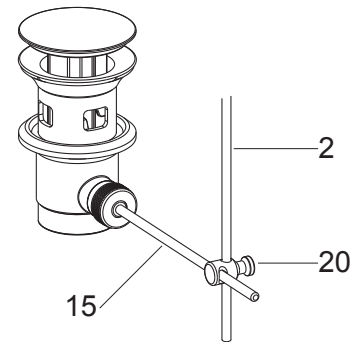

⑥

How to Install the Lift Rod Kit


For 73053K, select the connection of the drain and the lift rod according to the dimension of lavatory.

For 73158K, 73053K

Way 1: Select the connector(20)

Attach the connector(20) onto the ball lever(15) and lift rod(2). Tighten the connector retaining screw with a suitable screwdriver.

Connect the drain body to the drain outlet.

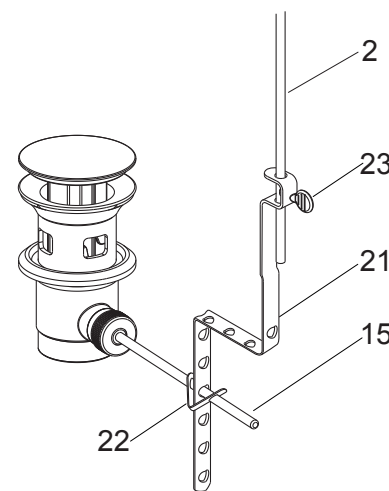

⑦


For 73053K

Way 2: Select the link kit(23, 21 & 22).

According to the lift rod length, bend the link(21). Connect the link onto the lever(15) with "V" clip(22). Slide the lift rod(2) into the hole on link. Push the lever down to the open position. Tighten thumb screw(23).

Connect the drain body to the drain outlet.

INSTALLATION CHECKOUT

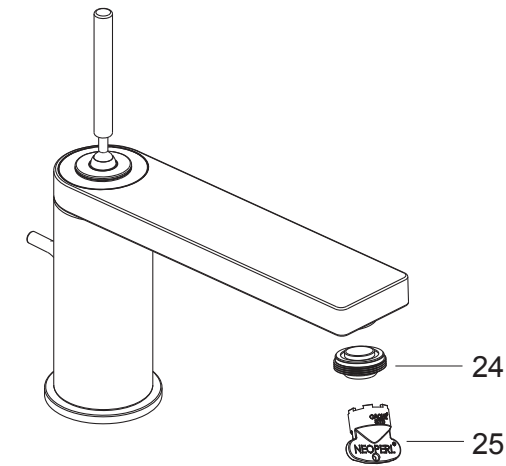

Ensure that all connections are tight. Ensure that the handle is in the off position.

Open the drain. Turn on main water supply and check for leaks. Repair as required.

Remove aerator(24) by key(25). Turn the faucet handle on and run hot and cold water through spout for about one minute to remove any debris. Remove any debris from aerator. Shut faucet off and reinstall aerator.

CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc, which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.