KOHLER®

梅玛

INSTALLATION INSTRUCTIONS

MEMOIRS

安装说明书

Widespread Lavatory Faucet (Tall Spout)

22555T-4V　8″ 脸盆龙头(高出水口)-一字把手
22555T-3S　8″ 脸盆龙头(高出水口)-十字把手

安装之前

所有的资料是按最新出版的产品资料编写而成。科勒公司保留任何时候不经通知即可改变产品特性、包装或产品可供类型的权利。

说明书包括重要的安装、保养及清洁方面的内容，请把这些资料交给用户阅读。

注意事项：
1.一定要先彻底冲洗供水管以清除管道中的杂质。

2.尽可能在安装脸盆之前安装水龙头。

3.检查供水管有无损坏和漏水。如需要，进行替换和维修。
4.遵守当地管路安装条例。
5.切断主供水源。
6.水嘴加施的水效标识表明本产品的水效等级等性能符合GB25501-2019《水嘴水效限定值及水效等级》的要求，是产品符合性的一种标识。

BEFORE YOU BEGIN


All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please leave these instructions for the consumer. They contain important information.


NOTES:
1. Flush the water supply pipes thoroughly to remove debris.
2. If possible, install this faucet before installing the lavatory.
3. Inspect the supply tubing for damage and leakage. Replace and maintain as necessary.
4. Observe local plumbing codes.
5. Shut off the water supplies to the fitting.
6. The water efficiency label applied to the faucet indicates that the water efficiency grade and other performance of the product meet the requirements of GB 25501-2019 "Minimum Allowable Values of Water Efficiency and Water Efficiency Grades for Faucets" which is a marking of product conformity.


安装尺寸

ROUGH-IN DIMENSIONS

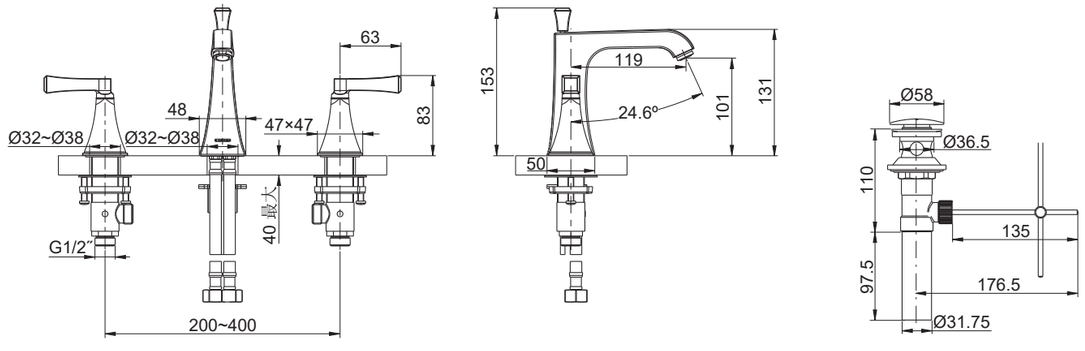


22555T-4V

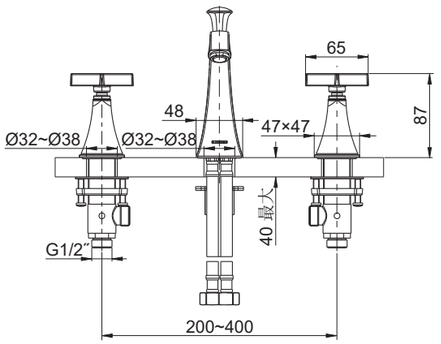

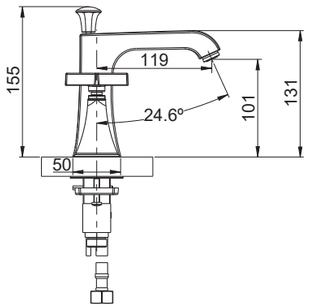

22555T-3S

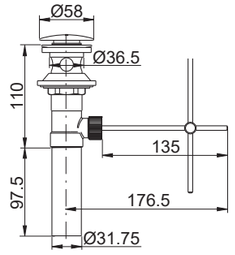

安装步骤


INSTALLATION

如何安装出水口

将提拉杆(1)插入出水口(2)顶部小孔中。

将垫片(3)通过软管(4)、提拉杆和固定螺杆(5)放入出水口底部槽中，将软管、提拉杆和固定螺杆插入脸盆中孔。调整出水口位置，使出水口朝向正前方。

从脸盆下方把垫片(6，橡胶垫片放在上面)套在固定螺杆上，将螺母(7)旋到螺杆上，用扳手(8)锁紧螺母以固定出水口组件。

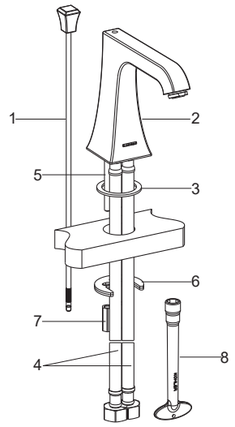

How to Install the Spout

Insert the lift rod(1) into the top hole of the spout(2).

Put the washer(3) into the bottom groove of the spout through the hoses(4), lift rod and studs(5). Insert the hoses, lift rod and studs into the central hole of the lavatory. Position the spout and keep it frontwards.

From underside of the lavatory, fit the washers(6, rubber washer is on the top) onto the studs. Screw the nuts(7) onto the studs. Tighten the nuts with tool(8) to secure the spout.

如何安装阀体和把手


确保垫片(9)、钢垫(10)和安装环(11)依次装在阀体组件(12)上。

确保阀芯处于关闭状态，从脸盆下方将阀体组件装入脸盆安装孔。**注意：**面向龙头时，有红色标记的阀体组件装在左侧。

根据软管安装需要，适当调整阀体出水口朝向。从脸盆上方将把手组件(13)旋紧在阀体组件上。**注意：**带有红色垫片的把手装在左侧。拧紧螺钉(14)以固定阀体组件。

将软管(4)连接到阀体出水口。将阀体组件分别与冷热水源连接。

阀处于关闭位置把手的状态如安装结果图示。

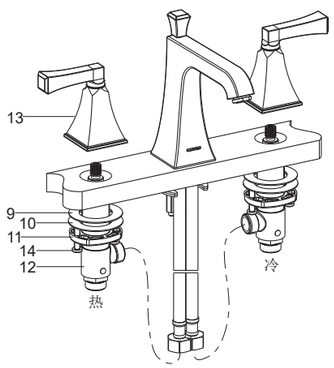

How to Install the Valve Bodies and Handles

Ensure the washer(9), steel washer(10) and threaded ring(11) on each valve body(12).

Ensure the valves are in the off position. From the underside of the lavatory, install the valve bodies into the mounting holes. **NOTE:** The valve body with red mark should be installed on the left side.

Adjust the outlets of the valve bodies to connect hoses easily. Tighten the handle kits(13) onto the valve bodies from the upside of the lavatory. **NOTE:** The handle kit with red washer should be installed on the left side. Secure the valve bodies by tightening screws(14).

Attach the hoses(4) to the valve bodies. Connect the valve bodies to the hot and cold water supplies.


The illustration in installation checkout shows the correct position of the handles in the off position.

如何安装提拉排水组件

将止水塞(15)、法兰盘(16)、垫片(17)及尾管(18)从排水本体(19)上取下。在尾管螺纹处须缠绕足以密封的密封胶带或涂合适的密封胶，装回排水本体。把排水本体组件从脸盆下方插到脸盆中，排水杆口(20)朝后方。把法兰盘带垫片旋入到排水本体中，从下方用手拧紧锁紧螺母(21)。

注意：如果需要，可直接在法兰盘(16)底面沿周围涂一圈密封油灰，或其他密封剂，而不使用垫片(17)。

把止水塞(15)放入排水本体中，调整止水塞末端的洞口(22)使其靠近并对正排水杆的洞口。

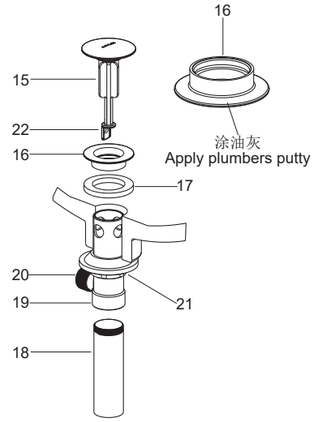

How to Install the Drain

Remove the stopper(15), flange(16), washer(17) and tailpiece(18) from drain body(19). Supply enough tape or sealant to tailpiece thread. Reinstall the tailpiece. Insert drain body kit into the lavatory from underside, and make sure the drain lever hole(20) facing to the back of the lavatory. Screw the flange with washer into the drain body. Tighten the locknut(21) by hand from the underside of the lavatory.


NOTE: If needed, apply a ring of plumbers putty around the underside of the drain flange(16), instead of using washer(17).

Place the stopper(15) into drain body aligning the flat side of stopper hole(22) with the drain lever hole.

将连接头(23)及固定螺母(24)取下，把塑料垫圈(25)及固定螺母装在球杆(26)上，把球杆组件插入排水杆的洞口中并穿过止水塞，拧紧固定螺母。

确保球杆(26)指向脸盆后方，用扳手拧紧排水本体上的锁紧螺母(21)

注意：在锁紧螺母拧紧后，如法兰盘使用密封油灰，则不可以调整排水本体的位置，否则会破坏油灰密封的密封性。同时去除多余油灰。

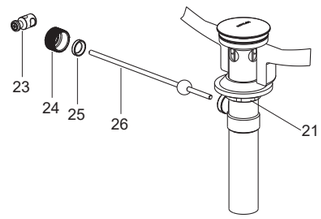

Remove the latch(23) and retaining nut(24). Fit the plastic washer(25) and retaining nut onto the ball lever(26). Insert the ball lever assembly into the drain lever hole and through the stopper hole. Tighten the retaining nut.

Be sure that the ball lever(26) points to the back of the lavatory, tighten the locknut(21) on the drain body with wrench.

NOTE: Do not reposition the drain if plumbers putty applied after the locknut is tightened, or you may break the putty seal. Wipe away excess plumbers putty.


如何安装提拉杆组件

根据所选脸盆尺寸，选择排水器与水龙头提拉杆的连接方式。

方式一：选用连接头(23)

连接头(23)大孔(27)套到球杆(26)上，将提拉杆(1)下部插入连接头小孔中。

将球杆(26)下推到排水器全开位置。锁紧连接头上的螺钉(28)。

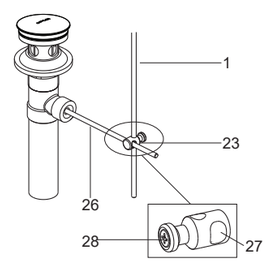

How to Install the Lift Rod Kit

Select the connection of the drain and lift rod according the dimension of the lavatory.

Way 1: Select the latch(23)

Insert the ball lever(26) into the bigger hole(27) of the latch(23). Insert the lift rod(1) into the other hole of the latch.


Push the ball lever(26) down to the open position. Tighten the screw(28) on the latch.

方式二：选用联动组件(29, 30 & 31)

根据提拉杆的长度，折弯联杆(29)。

用V形夹(30)将联杆连到球杆(26)上，将提拉杆(1)插到联杆的孔中。

将球杆(26)下推到排水器全开位置。拧紧手捻螺丝(31)。

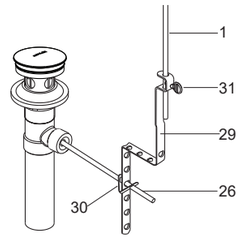

Way 2: Select the link kit(29, 30 & 31).

According to the lift rod length, bend the link(29).

Connect the link onto ball lever(26) with “V” clip(30). Slide the lift rod(1) into the hole of the link.

Push the ball lever(26) down to the open position. Tighten thumb screw(31).


安装结果检查 INSTALLATION CHECKOUT

检查并确保所有的衔接处都已拧紧。

确保手柄处于关闭位置。

打开排水系统和主要供水源，检查并修理有漏水的接口。

将起泡器(32)取下。打开水龙头，让水流过出水口约一分钟以清除杂质。冲洗起泡器，关闭水龙头，重新装回起泡器。

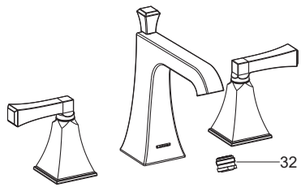

Ensure that all coupling nuts are tight.

Ensure that the handles are in the off position.

Turn on the main water supply and drain, and check for leaks. Repair as needed.

Remove the aerator kit(32). Run hot and cold water through faucet for about one minute to remove any debris. Remove any debris from the aerator. Shut off the faucet. Reinstall the aerator.

使用说明 HANDLE OPERATION

对于22555T-4V，逆时针旋转左把手为开，顺时针旋转右把手为开。

对于22555T-3S，顺时针旋转左把手为开，逆时针旋转右把手为开。

For 22555T-4V, left handle opens with turning counter-clockwise, right handle opens with turning clockwise.

For 22555T-3S, left handle opens with turning clockwise, right handle opens with turning counter-clockwise.

清洗说明 CLEANING INSTRUCTIONS

适用于所有加工处理过的表面：以中性肥皂水清洗镀层表面，再以干净的软布彻底擦干整个表面，许多清洁　剂，比如氨水、去污粉及洁厕灵等，会对电镀表面造成伤害，切忌使用。

有磨损性的清洁用具或清洁剂也不可使用于科勒牌的水龙头及其配件上。


All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.

KOHLER®
SERVICE PARTS
零 件 图

梅玛
MEMOIRS
Widespread Lavatory Faucet (Tall Spout)

22555T-4V 8″ 脸盆龙头(高出水口)-一字把手
22555T-3S 8″ 脸盆龙头(高出水口)-十字把手

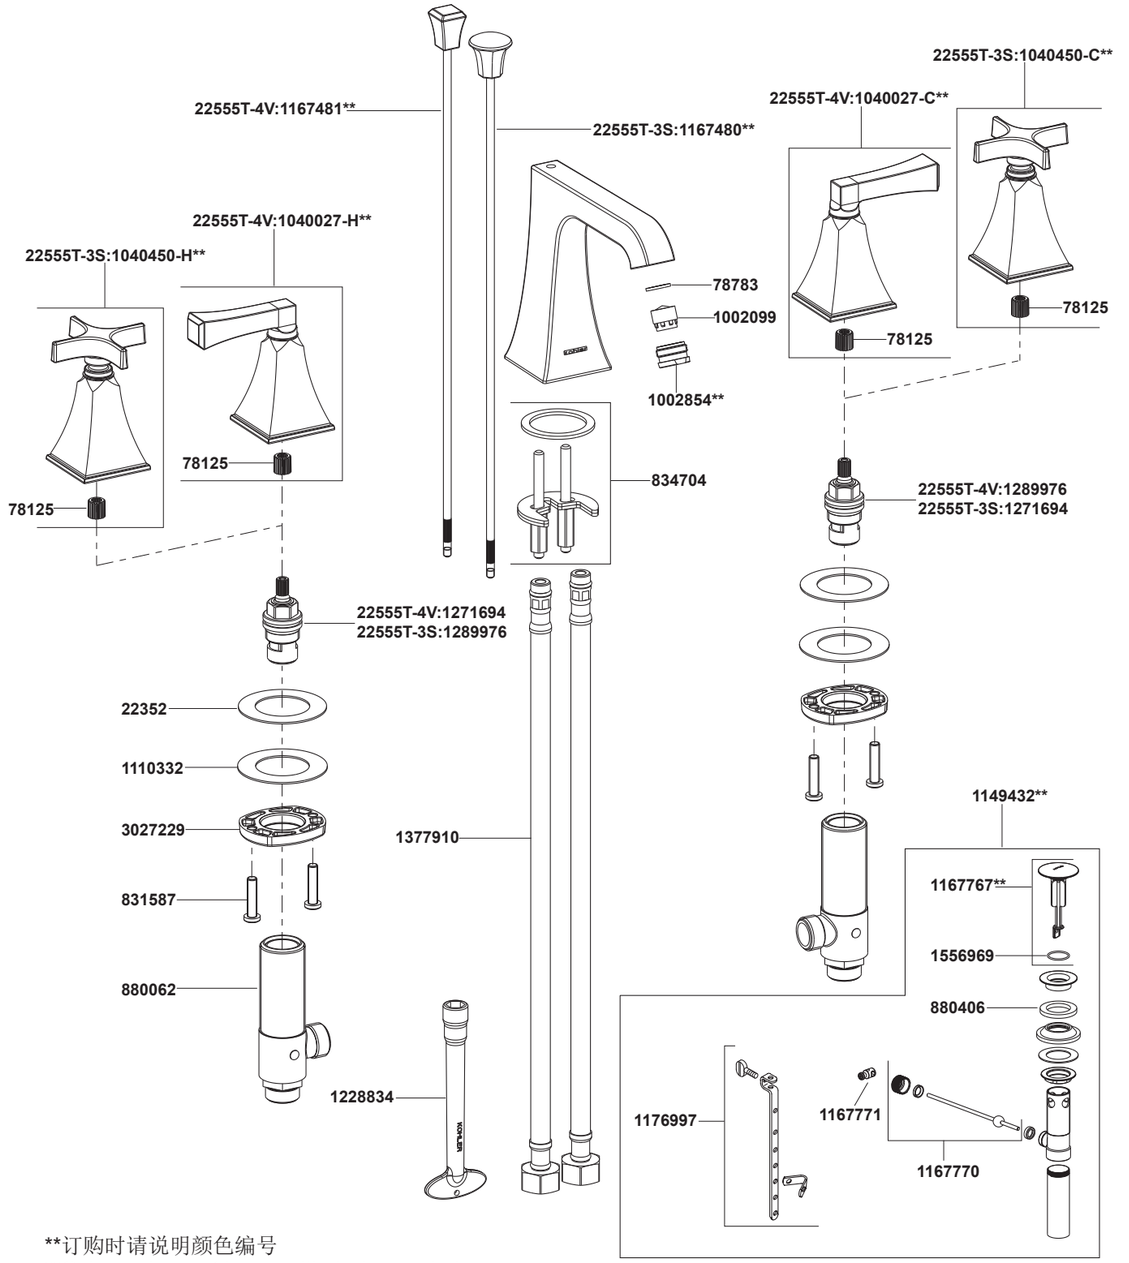

**订购时请说明颜色编号
**Color code must be specified when ordering