


EX28094T-8 单把碗盆龙头_柱型把手
EX28095T-8 单把碗盆龙头(高出水口)_柱型把手

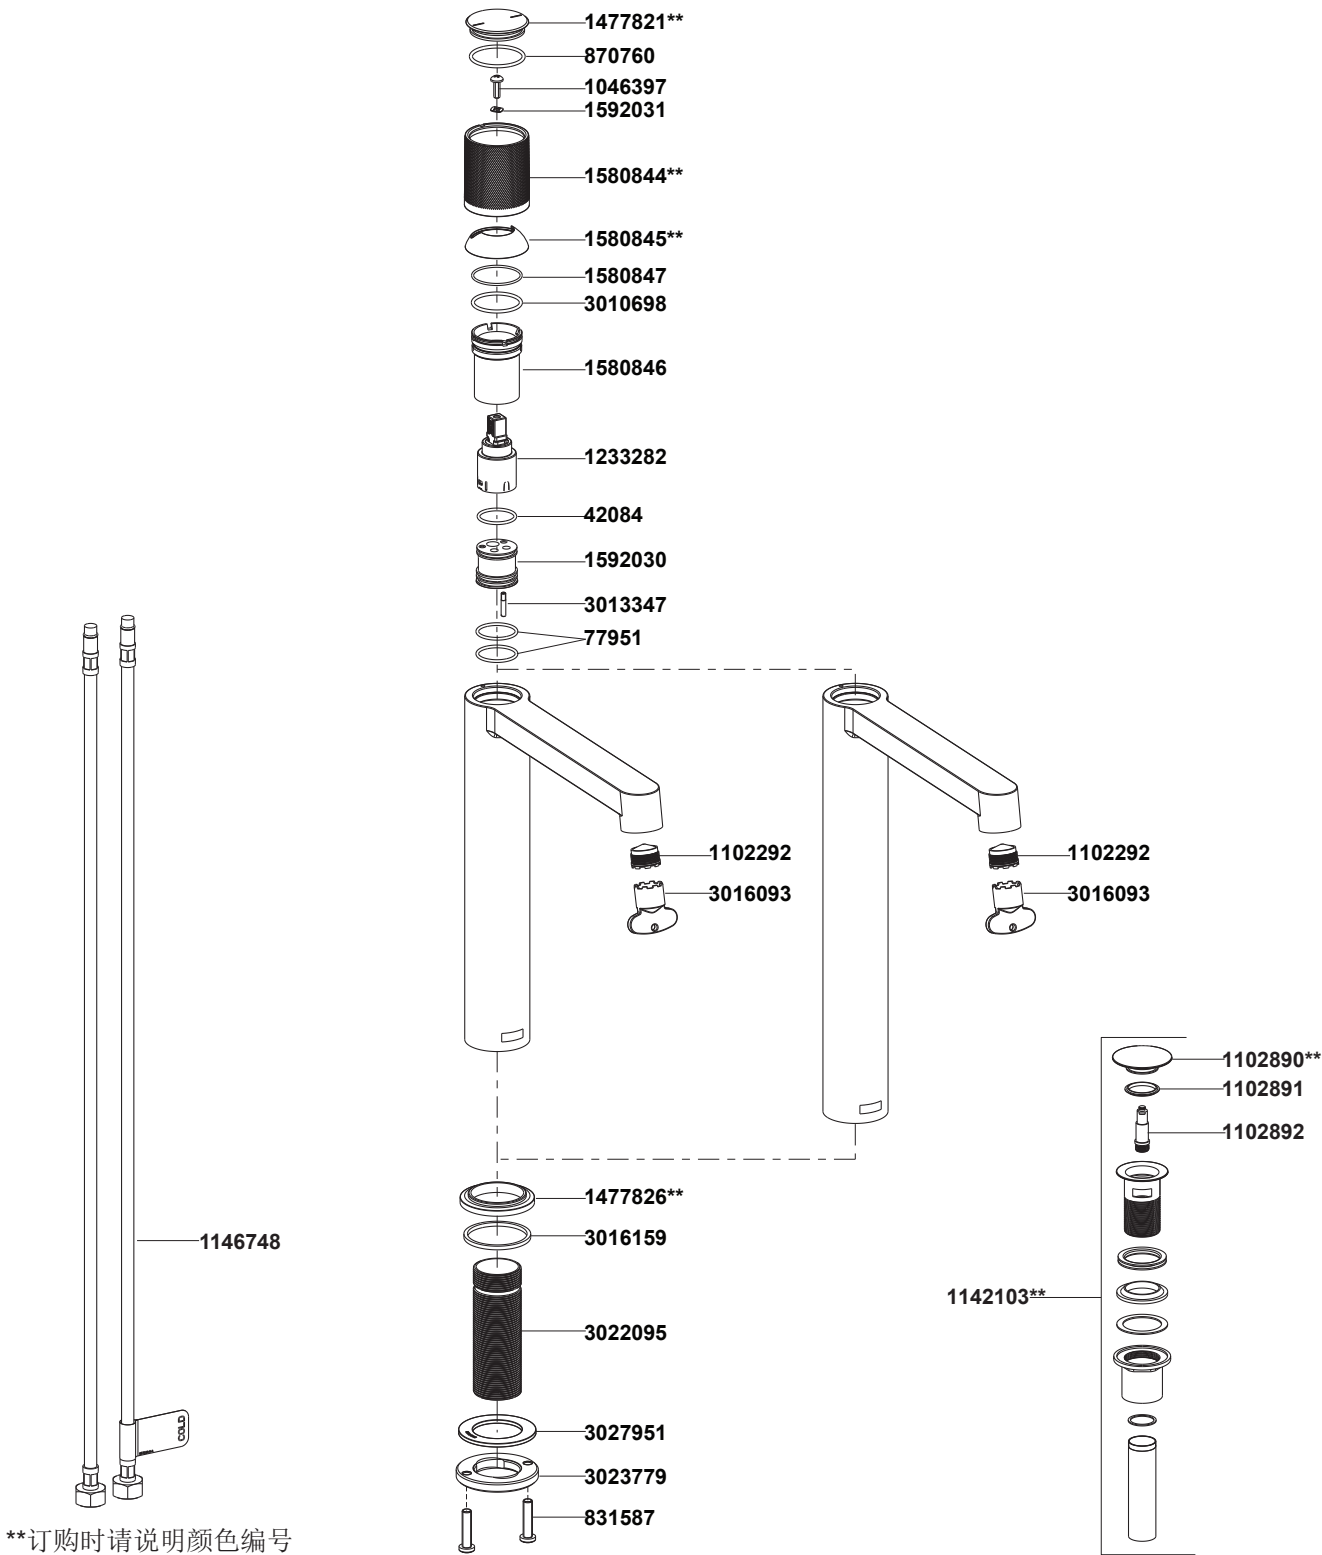

**订购时请说明颜色编号
**Color code must be specified when ordering

EX28094T-8 单把碗盆龙头_柱型把手
EX28095T-8 单把碗盆龙头(高出水口)_柱型把手

安装之前

所有的资料是按最新出版的产品资料编写而成。科勒公司保留任何时候不经通知即可改变产品特性、包装或产品可供类型的权利。

说明书包括重要的安装、保养及清洁方面的内容，请把这些资料交给用户阅读。

注意事项：

- 1.一定要先彻底冲洗供水管以清除管道中的杂质。
- 2.尽可能在安装脸盆之前安装水龙头。
- 3.检查供水管有无损坏和漏水。如需要，进行替换和维修。
- 4.遵守当地管路安装条例。
- 5.切断供水管路。
- 6.水嘴加施的水效标识表明本产品的水效等级等性能符合GB25501-2019《水嘴水效限定值及水效等级》的要求，是产品符合性的一种标识。

BEFORE YOU BEGIN


All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice. Please leave these instructions for the consumer. They contain important information.

NOTES:

1. Flush the water supply pipes thoroughly to remove debris.
2. If possible, install this faucet before installing the lavatory.
3. Inspect the supply tubing for damage and leakage. Replace and maintain as necessary.
4. Observe local plumbing codes.
5. Shut off the water supplies to the fitting.
6. The water efficiency label applied to the faucet indicates that the water efficiency grade and other performance of the product meet the requirements of GB 25501-2019 "Minimum Allowable Values of Water Efficiency and Water Efficiency Grades for Faucets" which is a marking of product conformity.

安装尺寸

ROUGH-IN DIMENSIONS

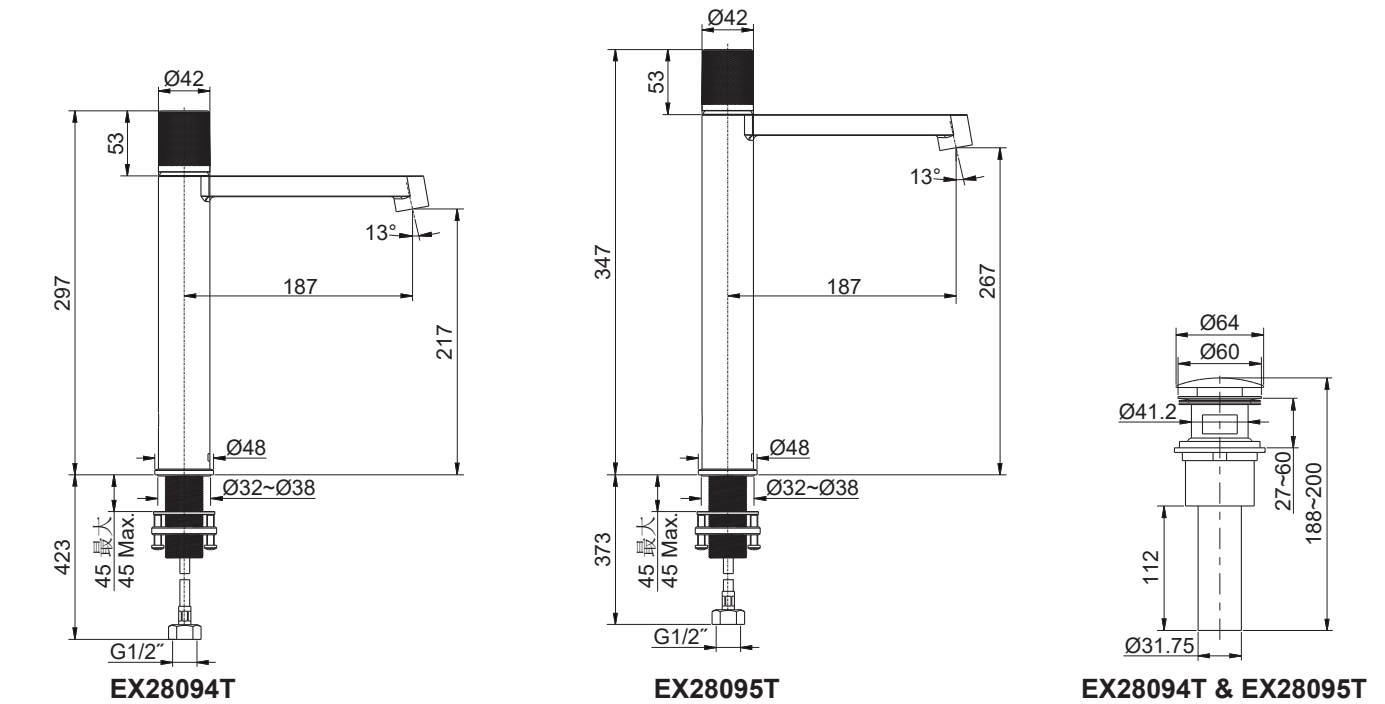

安装步骤		INSTALLATION	
<h3>如何安装出水口</h3> <p>若因维修或其它原因拆下软管(1)，装回时手动拧紧即可。</p> <p>将装饰盖(2)穿过软管和牙管(3)嵌入到水龙头(4)底部。</p> <p>将水龙头组件插入脸盆安装孔中，使装饰盖接触台面。</p> <p>确保两个螺钉(5)部分旋入安装环(6)。从脸盆下方依次把垫片(7)及装有两个螺钉的安装环安装到牙管上。调整水龙头使出水口朝前。旋紧安装环直至垫片紧贴脸盆底部，拧紧螺钉以固定水龙头。</p> <p>把软管接到冷热水源，冷水管贴有“COLD”标签。</p>		<h3>How to Install the Faucet</h3> <p>If need to take off the hoses(1) to repair, reinstall and tighten them by hand.</p> <p>Slide the escutcheon(2) over the hoses and shank(3) until it is put into the faucet (4) bottom.</p> <p>Insert the faucet assembly into the hole of the lavatory until the escutcheon contacts the deck.</p> <p>Partially thread two screws(5) into the threaded ring(6). From underside of the lavatory, place the washer(7) and threaded ring with two screws over the shank. Position the faucet. Tighten the threaded ring onto the shank until the washer contacts the underside of the lavatory. Tighten two screws to secure the faucet.</p> <p>Attach the hoses to water supplies. The hose with “COLD” label should be connected to cold water.</p>	
<h3>如何安装排水器</h3> <p>把锁紧螺母(8)、塑料垫片(9)、橡胶垫圈(10)和尾管(11)从排水本体依次取下。在尾管螺纹处须缠绕足以密封的密封胶带或涂合适的密封胶，并装回排水本体。把排水本体从脸盆上部孔插入。再依次将橡胶垫圈(小面朝上)、塑料垫片和锁紧螺母从脸盆下方装回到排水本体上。锁紧螺母。</p> <p>注意：如果需要，可直接在法兰盘(12)底面沿周围涂一圈密封油灰或其它密封剂，而不使用垫片(13)。</p> <p>在锁紧螺母拧紧后，如法兰盘使用密封油灰或其它密封剂，则不可以调整排水本体位置，否则会破坏油灰密封的密封性。同时去除多余油灰。</p>		<h3>How to Install the Drain</h3> <p>Remove the locknut(8), plastic washer(9), rubber gasket(10) and tailpiece(11) from the drain body. Supply enough tape or sealant to tailpiece thread. Reinstall the tailpiece. Insert the drain body into the lavatory. Install the rubber gasket (Tapered side up), plastic washer and locknut back to the drain body in turn. Tighten the locknut.</p> <p>NOTE: If needed, apply a ring of plumbers putty or other sealants around the underside of the flange(12), instead of using washer(13).</p> <p>Do not reposition the drain if plumbers putty or other sealants applied after the locknut is tightened, or you may break the putty seal. Wipe away excess plumbers putty.</p>	

<h3>如何更换止水垫及活塞组件</h3> <p>逆时针旋下止水塞(14)，然后取出止水垫(15)。更换新的止水垫。</p> <p>逆时针旋下活塞组件(16)，更换新的活塞组件。</p> <p>装回活塞组件、止水垫和止水塞。</p>		<h3>Replace Washer and Piston Kit</h3> <p>Turn counter-clockwise to remove the stopper(14). Take out the washer(15). Replace with a new one.</p> <p>Turn counter-clockwise to remove the piston kit(16). Replace with a new one.</p> <p>Reinstall piston kit, washer and stopper.</p>	
<h3>安装结果检查</h3> <p>检查并确保所有衔接螺母都已拧紧，确保把手在关闭位置。</p> <p>打开排水器和主要供水源，检查是否有漏水。如有漏水，修理之。</p> <p>用工具(17)拆下起泡器(18)。打开水龙头冷热水，让水流出约一分钟以清除杂质，检查渗漏。冲洗起泡器，关闭水龙头，重新装回起泡器。</p>		<h3>INSTALLATION CHECKOUT</h3> <p>Ensure all connections are tight. Ensure the handle is in the off position.</p> <p>Turn on the drain and main water supply, and check for leaks. Repair as needed.</p> <p>Remove the aerator(18) with tool(17). Turn on the faucet. Run hot and cold water through the spout for about one minute to remove any debris. Check for leaks. Remove any debris from the aerator. Shut off the faucet. Reinstall the aerator.</p>	
<h3>使用说明</h3> <p>面对水龙头，轻轻向前推动把手打开龙头，向红标方向推动为热水，向蓝标方向推动为冷水。</p>		<h3>HANDLE OPERATION</h3> <p>When facing front of the faucet, gently push the handle forward to open the faucet, the direction of the red line is for hot water and the blue line is for cold water.</p>	
<h3>清洗说明</h3> <p>适用于所有加工处理过的表面：以中性肥皂水清洗镀层表面，再以干净的软布彻底擦干整个表面，许多清洁剂，比如氨水、去污粉及洁厕灵等，会对电镀表面造成伤害，切忌使用。</p> <p>有磨损性的清洁用具或清洁剂也不可使用于科勒牌的水龙头及其配件上。</p>		<h3>CLEANING INSTRUCTIONS</h3> <p>All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning.</p> <p>Do not use abrasive cleaners or solvents on Kohler faucets and fittings.</p>	