

PURPOSE

Use these instructions to correctly install your replacement suction cover.

NOTE: Depending upon your installation, you may not need the metal brace included with the kit.

BEFORE YOU BEGIN

PREPARATION

Remove the existing plug button. Use a phillips screwdriver to remove the existing screw and suction cover.

Note the appearance of the suction flange. If it **does not** have any internal ribbing, follow Procedure A. If the suction flange **does** have internal ribbing, follow Procedure B.

TOOLS REQUIRED

- Phillips screwdriver


INSTALLATION

PROCEDURE A

For installations that use a metal brace, install the replacement metal brace and suction cover to the flange. Secure with the screw, but do not overtighten.

Make sure the suction cover rests flat against the bath wall.

Press the plug button in place.

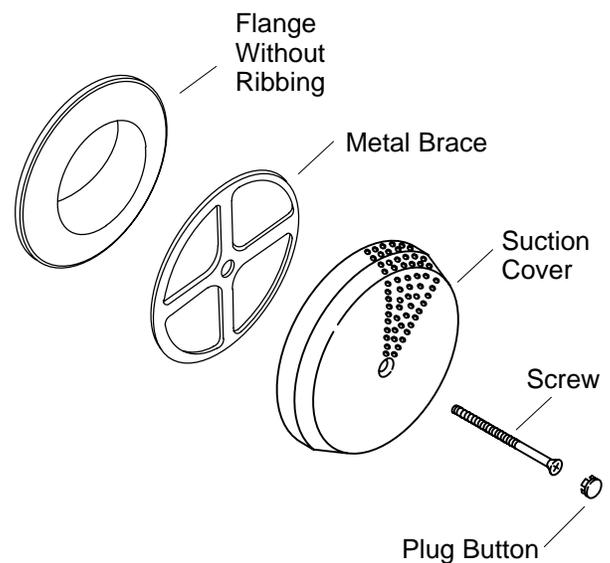

PROCEDURE B

For installations that do not use a metal brace, discard the metal brace. Install the suction cover to the flange. Secure with the screw, but do not overtighten.

Make sure the suction cover rests flat against the bath wall.

Press the plug button in place.

