


All information in these instructions is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

1. **Refer to illustration.** To install Pillow Talk toilet seat, slide hex head bolts through holes in the two hinge blocks. Slide bushings onto bolts.
2. Notice that the bushing and hinge block are serrated. This allows you to adjust the toilet seat to the correct position before tightening. Place toilet seat onto toilet by inserting the hinge block/bushing assemblies through the two holes on the toilet. Once the bushings are inserted into the holes the toilet seat can be adjusted. Adjust hinge block/bushing assembly forward or backward until seat is in correct position.

NOTE: The correct position of the seat is determined by the installer. Make sure the seat is placed squarely on the toilet.

3. Thread wing nuts onto hex head bolts from underside of toilet. An indentation on the hinge block will prevent the hex head bolt from turning when the wing nut is tightened.
4. Attach bolt covers as shown.

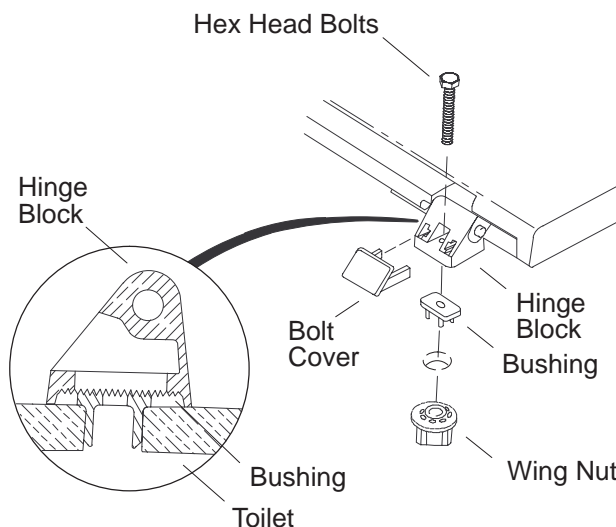

IMPORTANT CONSUMER INFORMATION

LIMITED ONE-YEAR WARRANTY

Kohler plumbing fixtures and fittings are warranted free of manufacturing defects.

Kohler Co. will at its election, repair, replace, or make appropriate adjustment where Kohler Co. inspection discloses any such defects occurring in normal usage within one year after installation. **Kohler Co. is not responsible for installation costs.**

To obtain warranty service, contact Kohler Co. either through your Dealer or Plumbing Contractor or by writing Kohler Co., Attn: Consumer Affairs Department, Kohler, Wisconsin 53044 U.S.A.

Implied warranties including that of merchantability are expressly limited in duration to the duration of this warranty. Kohler Co. disclaims any responsibility for consequential damages.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so this limitation and exclusion may not apply to you. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

This is our exclusive written warranty.

KOHLER CO. KOHLER, WISCONSIN 53044

CARE AND CLEANING INSTRUCTIONS

PLASTIC TOILET SEATS. Kohler toilet seats are color-matched to Kohler fixtures. Properly cared for, they will last for years. Use only a mild detergent such as dishwashing soap when cleaning the seat. When you clean your toilet, make sure you wipe off any cleaner that

may end up on the seat immediately. This is especially important around the hinge areas and bumpers of the toilet seat. An application of Lemon Pledge will restore the gloss to plastic toilet seats.