

INSTALLATION CHECKOUT

Ensure that all connections are tightened.

CLEANNING INSTRUCTIONS

All finishes: clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fitting.

Plastic products cannot use dishwasher to clean.

KOHLER®

ACCESSORY INSTALLATION INSTRUCTIONS

STAGES

27355T	Tray (300MM)	27365T	Container (150MM)
27356T	Tray (260MM)	27366T	Holder (300MM)
27357T	Tray (150MM)	27367T	Tissue Box
27358T	Tray (110MM)	27368T	Toilet Brush Holder
27359T	Toothbrush Holder(Square)	27369T	Mirror
27360T	Soap Dispenser	30079T	Tumbler (Round)
27364T	Container (75MM)	30490T	Holder (150MM)

BEFORE YOU BEGIN

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please leave these instructions for the consumer. They contain important information.


NOTE:


1. These products should be located and mounted to a wall. While it is possible to mount them to any surface, a stud or concrete mounted product will yield the best results.
2. The highest environment temperature for Tray, Holder, Container and Soap Dispenser is 60°C, products must be away from heater and cannot soaked in water for a long period, or it may become damaged.

DANGER: (Risk of personal injury)


These products are not designed or intended for use as a grab bar or support bar. Do not install where the product might be used as a grab or support bar.

ROUGH-IN DIMENSIONS

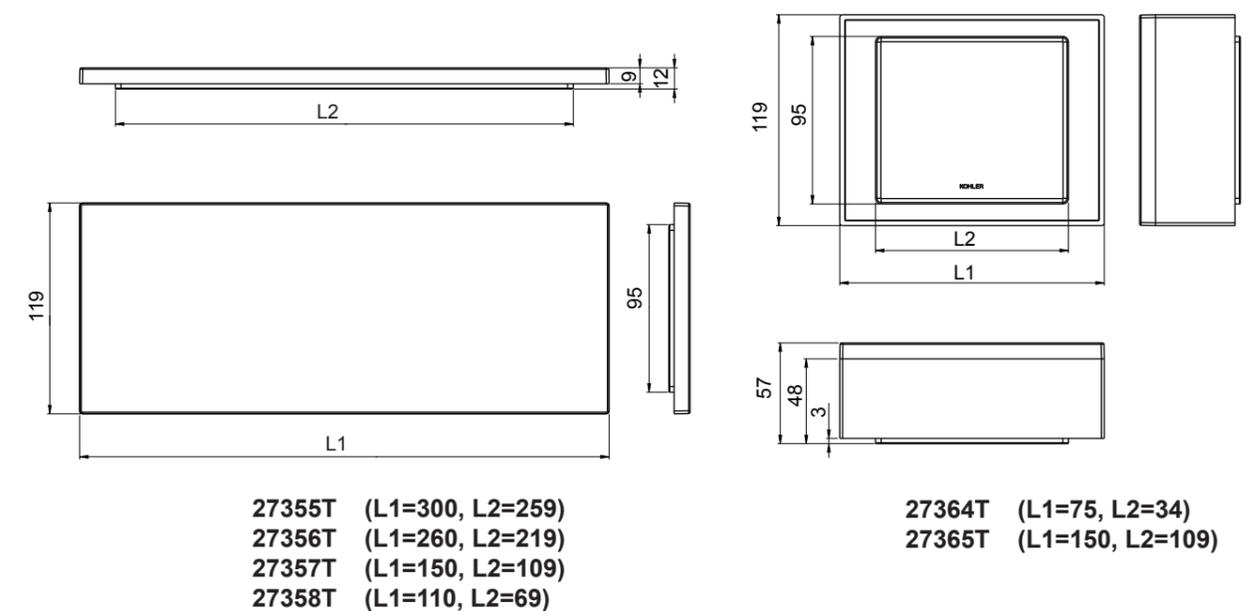


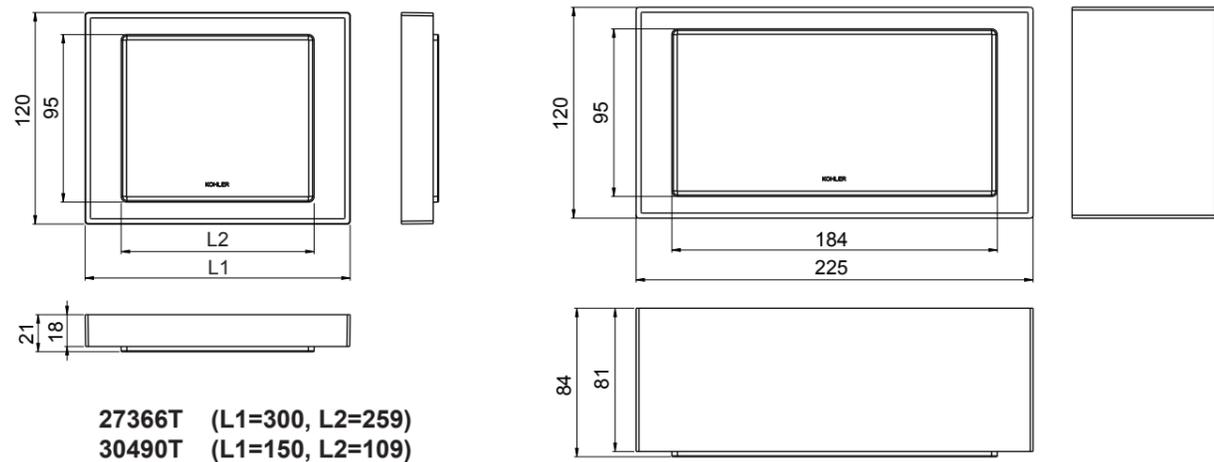


27366T (L1=300, L2=259)
30490T (L1=150, L2=109)

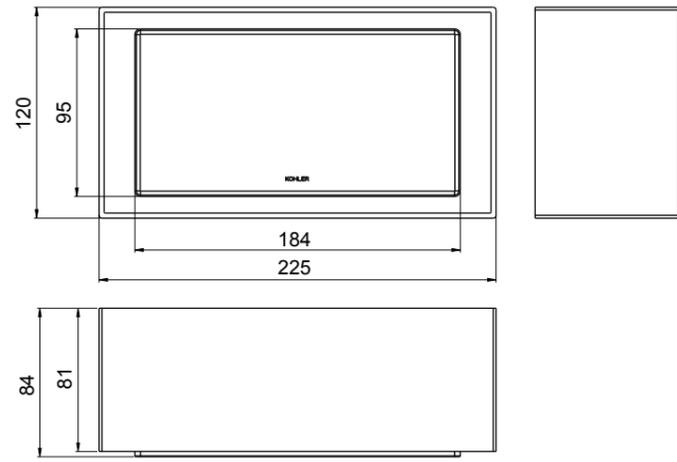


27367T

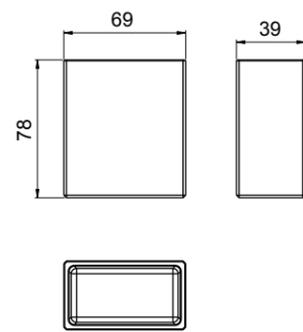


27359T

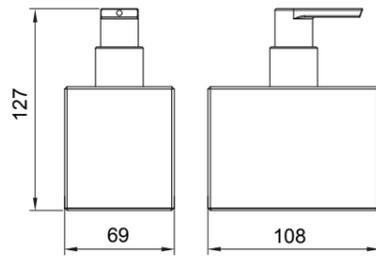


27360T

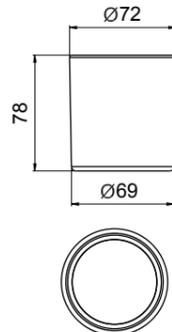


30079T

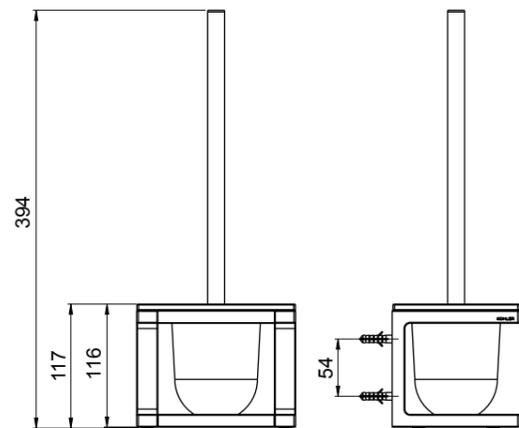

27368T

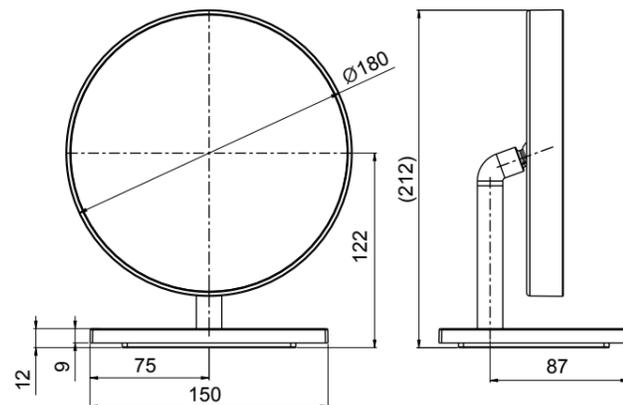

27369T

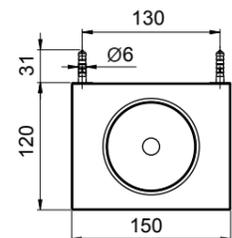

INSTALLATION

How To Install The Toilet Brush Holder

1. As Fig 1, select a location on the vertical wall to stick the templet, ensure the templet is horizontal. Drill hole in the finished wall as required.
2. As Fig 2, press the anchor(1) into the hole. Orienting the bracket(3) and ensure two screw holes of bracket are vertical. Secure the bracket with the self-tapping screw(2).
3. As Fig 3, Slide the extension of frame kit(6) onto the bracket, tighten the screw(4) with the hex wrench(5) to secure frame kit.
4. As Fig 4, Slide the brush holder kit(7) onto the frame.

Note: According to user's preference, this product can be placed directly on the floor or mounted on the wall.



Fig 1

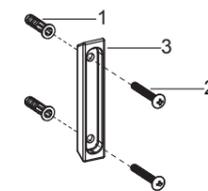


Fig 2

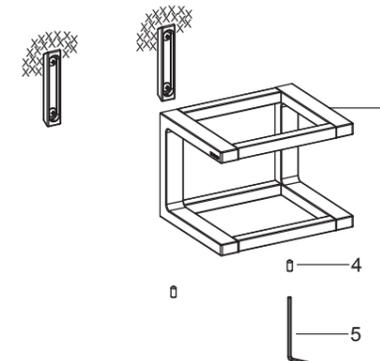


Fig 3


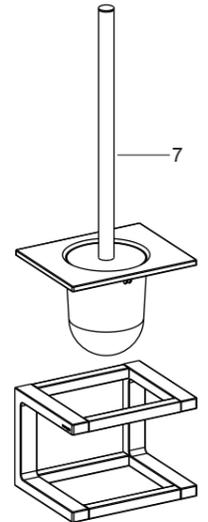


Fig 4


How To Use The Soap Dispenser

Remove the cap(8) after turning counterclockwise, fill the bottle(9) with lotion or hand sanitizer, then tighten the cap. Press the pump head(10) in use.

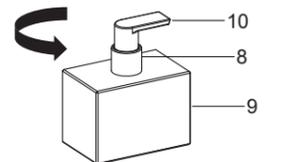


How To Use The Mirror

Rotate the frame up and down to adjust the angle of the mirror.


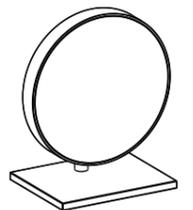


How To Use The Tissue Box

Take the cover(11) out, put the unpacked tissue paper into the box(12), then put the cover on the paper.

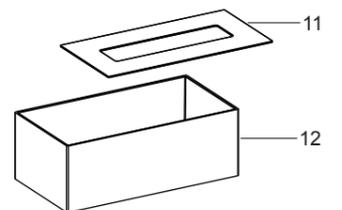

27360T Soap Dispenser
27368T Toilet Brush Holder

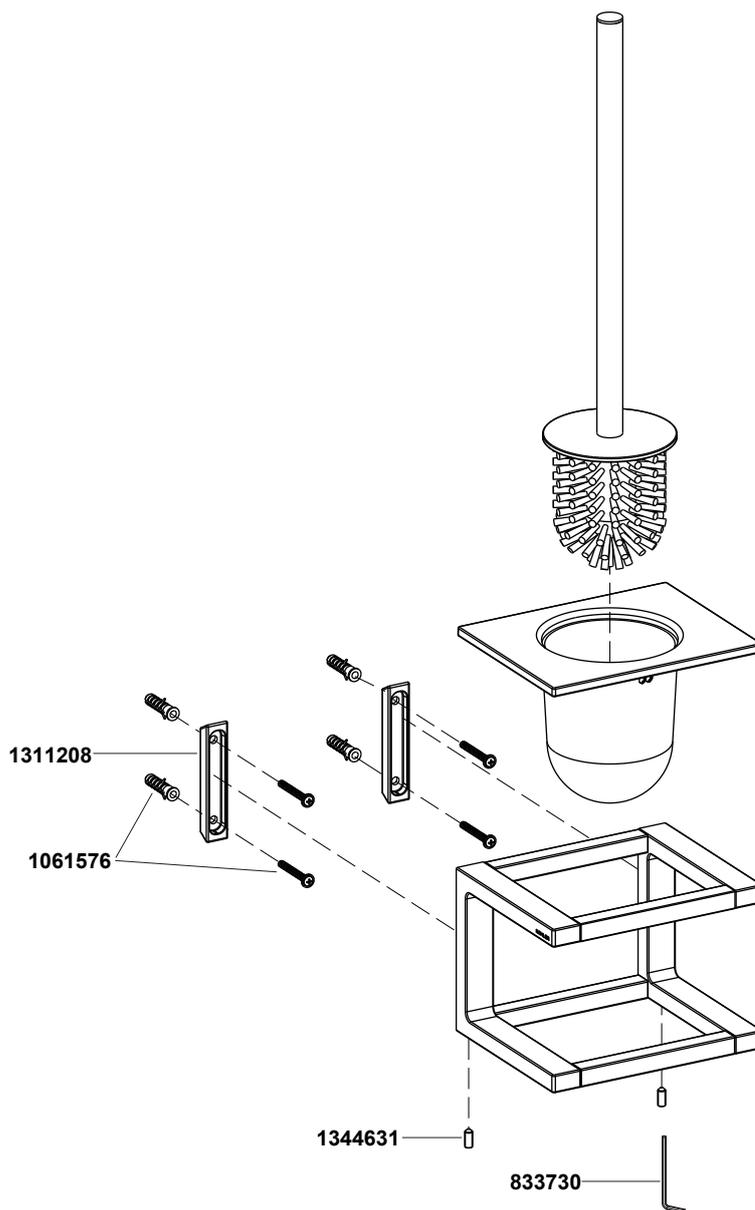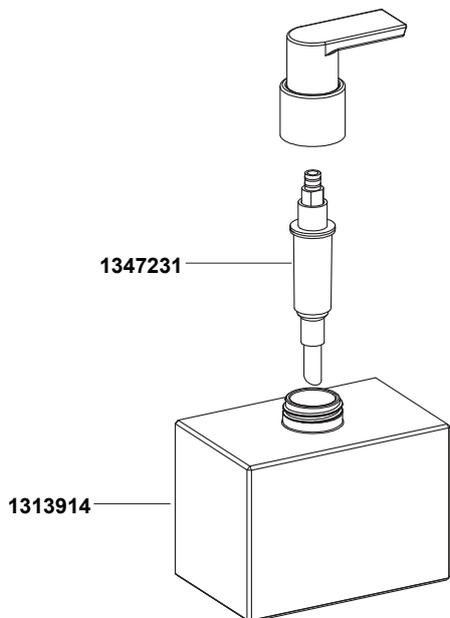


**Color code must be specified when ordering


NOTE: For all Asia pacific regions (excluding China) add SP (SPxxxxxx**) in front of the part number when ordering.

Product Combination

Alternative parts

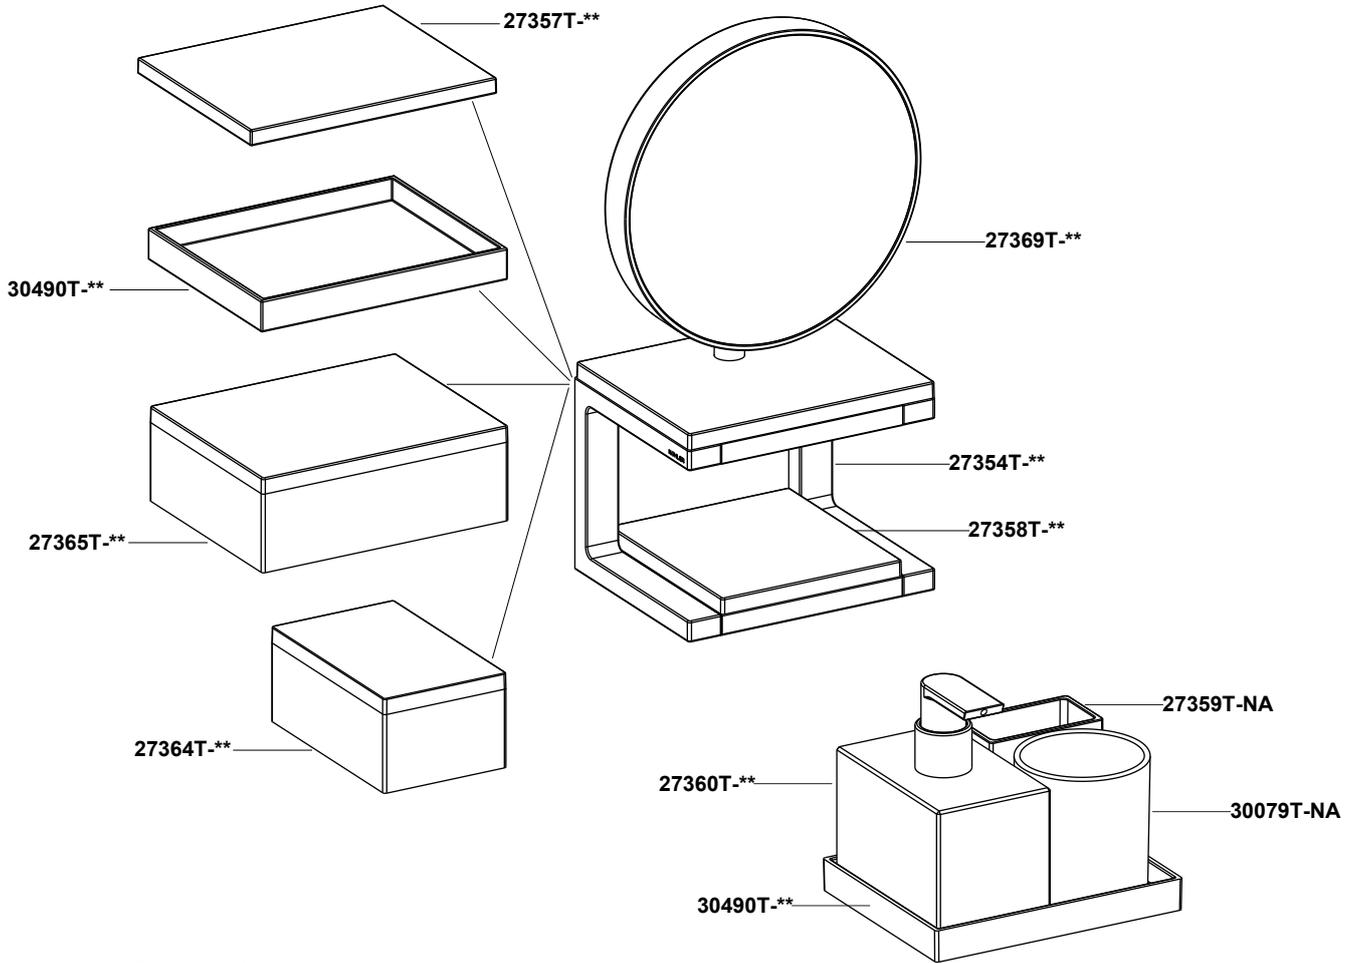

Alternative parts

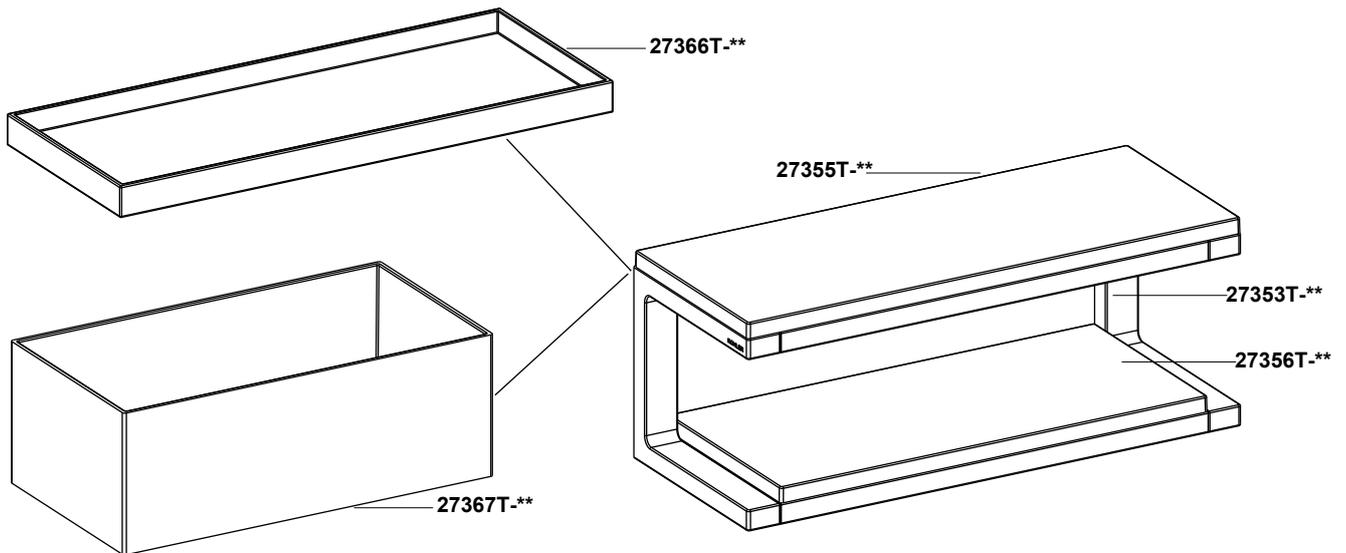

**Color code must be specified when ordering

NOTE: For all Asia pacific regions (excluding China) add SP (SPxxxxxx**) in front of the part number when ordering.