

BEFORE YOU BEGIN

- All information is based on the latest product information available at the time of publication. Kohler China Ltd. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.
- These instructions contain important care, cleaning, and warranty information-**please leave these instructions for the consumer.**
- Make sure that the bath and the finished wall material are completely and correctly installed prior to installing your shower door. Prepare waterproof layer to wall and floor of the showering area. It is not allowed for any presence of electric switches and sockets. Make sure the floor drain runs smoothly.
- Before starting the door installation, lay out and identify all the parts. Use the exploded view illustrated on page 2 for reference.
- For the installation method of customized shower with different dimensions, please refer to this instructions.
- The product complies with QB 2584-2007.

⚠ CAUTION: Risk of injury or product damage.
 Tempered glass cannot be cut, drilled or knocked by hard object. Make sure corner area of the glass refraining from knocking so as to cause personal injury due to broken glass.

ATTENTION: Please install this door on Kohler receptors or curbs(Not included). If the curb is not Kohler-branded, please note its top width should be more than 80mm.

IMPORTANT: The shower door requires a flat vertical finished wall. The squareness of the wall is recommended no more than 3 mm/m. KOHLER Company won't take responsibility of the installation quality.

Do not use the enclosure for at least 24 hours.
 安装后 24 小时内请勿使用淋浴房。



安装之前


- 说明书中所有的资料是按最新出版的产品资料编写而成。科勒中国有限公司保留任何时候无须通知即可改变产品特性、包装或产品可供类型的权利。
- 说明书包括重要的安装、清洁及保养方面的内容，**请把这些资料交给用户阅读，保管。**
- 确保在安装淋浴房之前已经完整正确地安装了浴室和完工墙面材料。淋浴区墙地面应做防水处理，并不得布置有电器开关、插座。确保地面排水通畅。
- 在进行淋浴房安装之前，请拿出、排列并确认所有的零部件。请参考第 2 页上所示的分解图。
- 对尺寸与本标准产品不同的定制淋浴房，参照本说明书进行安装。
- 本产品符合 QB 2584-2007。

⚠ 警告：可能有人伤害或者产品损坏的危险。
 钢化玻璃不能进行切割，钻孔或硬物敲击。搬移或安装过程中，小心确保玻璃边、角部位不受撞击，以防爆裂伤人。

建议：将本产品安装在科勒淋浴盆或挡水条上（需另行购买）。如自备挡水条，建议顶面宽度尺寸大于 80mm。

重要事项：淋浴房需要安装在平坦垂直的墙面上。墙面的垂直度推荐在正负 3mm/m 以内。如果超出此范围，科勒公司将不保证淋浴房的完美使用。


ROUGHING-IN 尺寸图

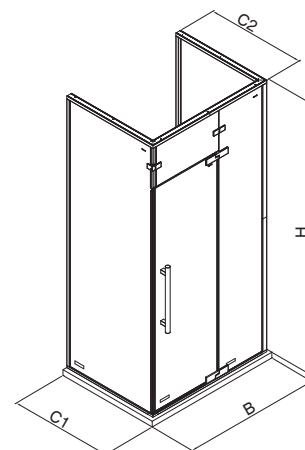

Unit: mm
 单位：毫米

SKU	B	C	H
K-704603T	950-1600	250-1100	2200-2600


ZHONGSHAN KOHLER SHOWER CO., LTD. NO13-1, XINGYE ROAD, ZHONGSHAN TORCH DEVELOPMENT ZONE, ZHONGSHAN, GUANGDONG, CHINA POST CODE: 528437
 中山科勒卫浴有限公司 广东省中山市中山火炬开发区兴业路 13-1 号 邮编：528437

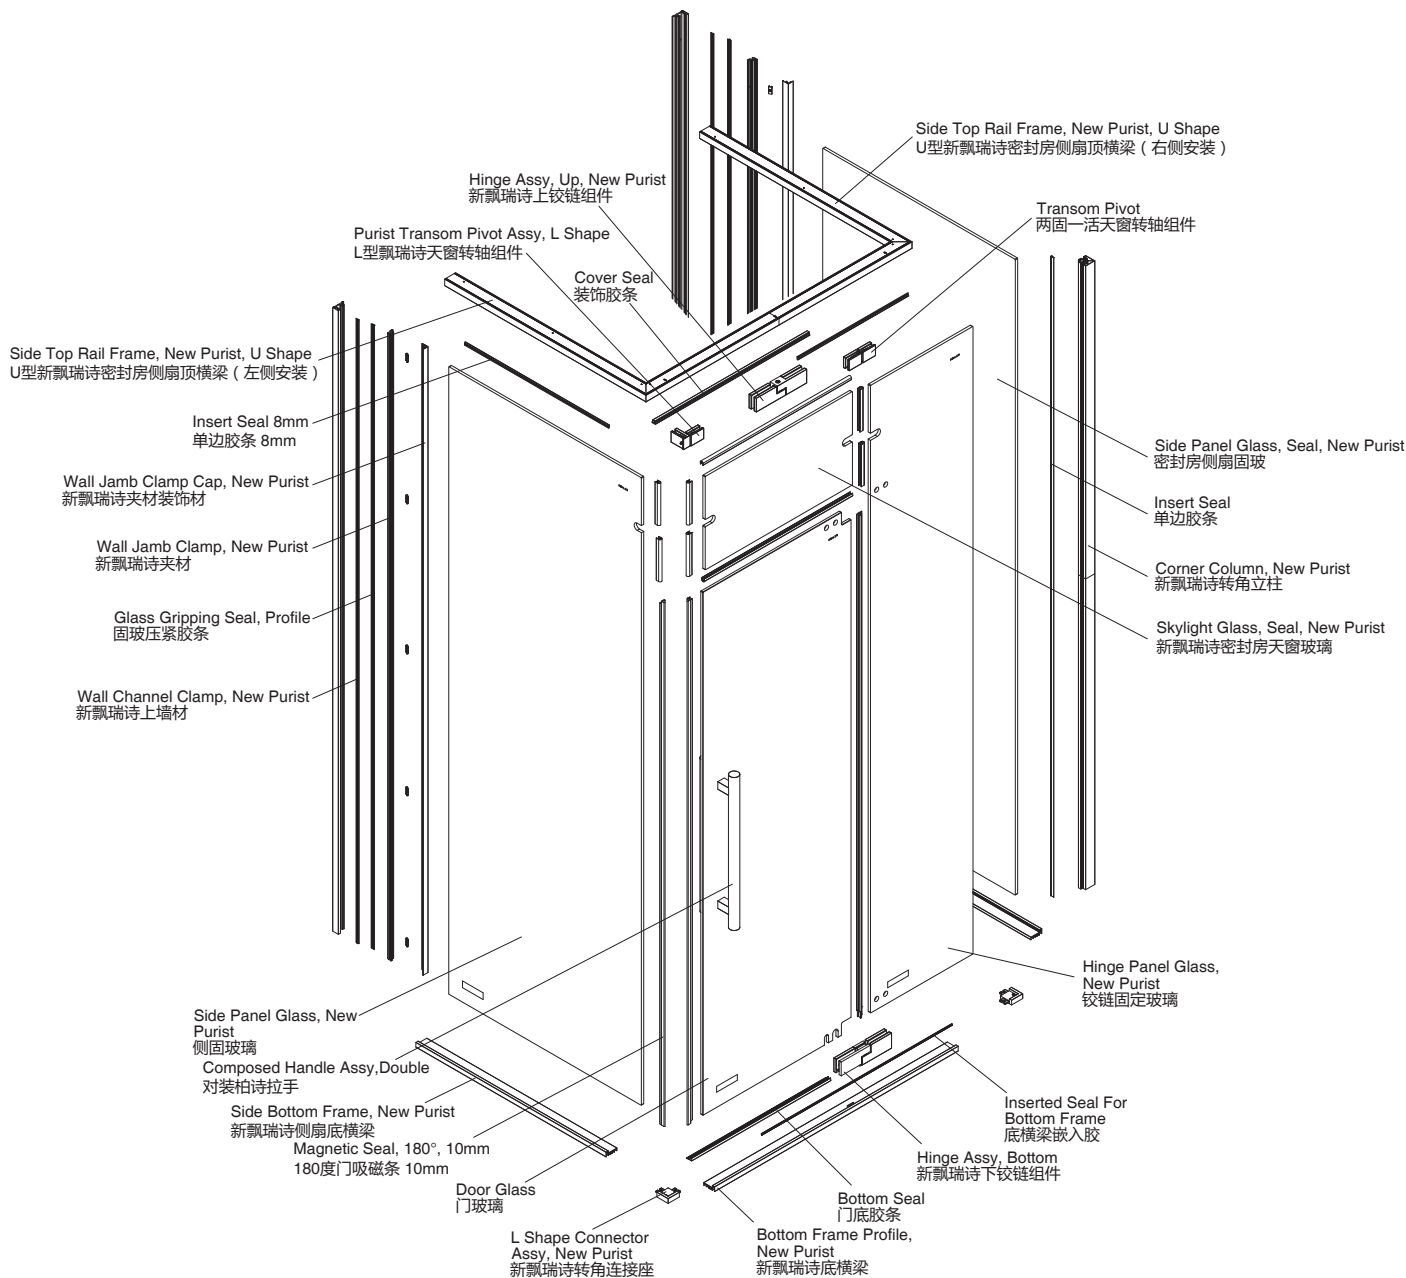


	X3 Side Frame, New Purist 新飘瑞诗边立柱
	X2 Wall Jamb Clamp Cap, New Purist 新飘瑞诗夹材装饰材
	X2 Wall Jamb Clamp, New Purist 新飘瑞诗夹材
	X2 Wall Channel Clamp, New Purist 新飘瑞诗上墙材
	X3 Bottom Frame Profile, New Purist 新飘瑞诗底横梁
	X1 Magnetic Seal, 180°, 10mm 180度门吸磁条 10mm
	X1 Side Seal, 10mm, Profile, Hinged Door 侧边胶条 10mm
	X1 Bottom Seal For Purist DR Glass Profile 门底胶条
	X4 Glass Gripping Seal, Profile, 10mm 固玻压紧胶条 10mm
	X1 Inserted Seal For Bottom Frame, Purist 底横梁嵌入胶
	X1 Insert Seal 单边胶条
	X1 Wall Side Seal, 10mm, Profile 泡胶条 10mm
	X1 Cover Seal 装饰胶条

	X1 L Shape Connector Assy, RH, New Purist 新飘瑞诗转角连接座
	X1 L Shape Connector Assy, LH, New Purist 新飘瑞诗转角连接座
	X1 Composed Handle Assy 450mm, Double 对装柏诗拉手 450mm
	X1 Purist Transom Pivot Assy, 1D2P 飘瑞诗两固一活天窗转轴组件
	X1 Purist Transom Pivot Assy, L Shape L型飘瑞诗天窗转轴组件
	X1 Hinge Assy, Up, New Purist 新飘瑞诗上铰链组件
	X1 Hinge Assy, Bottom, New Purist 新飘瑞诗下铰链组件
	X10 Connector Block 塑料压块
	X8 Cap 装饰盖
	X10 CSK Screw ST3.5X6 沉头平尾螺丝 ST3.5X6
	X10 Pan Screw ST3.5X40 圆头螺丝 ST3.5X40
	X10 Hollow Wall Anchor, Nylon 膨胀套

Tools Required/所需工具

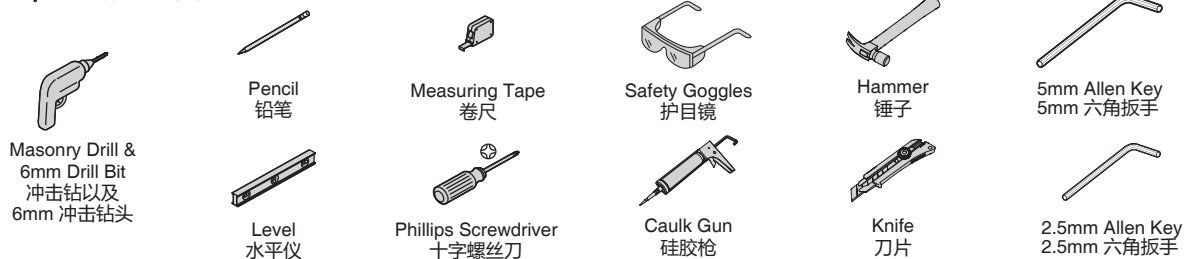


Connect the three bottom rails with the connector. Pay attention to the orientation (left/right) of the connector.
用转角连接件分别将三根底横梁连接起来，注意转角连接件需要分左右。

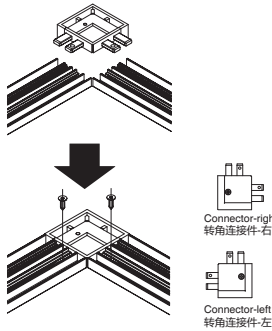

STEP 1


Place the weather bar. The installation surface in the bathroom must be flat.
放置挡水条，淋浴房安装面必须打水平。

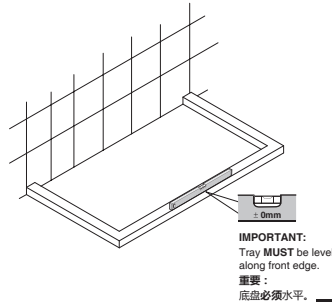

STEP 2


Install the bottom frame (20 mm to the edge from the inside). Fix the wall channels at both ends and make sure that the channels are aligned to the bottom frame.
安装底横梁（内偏20mm安装），固定两端上墙铝材，请确保上墙铝材固定时与底横梁对齐。

IMPORTANT: Make sure the seals are pre-installed on the wall channels.
重要：安装前确保铝材有预装好胶条。

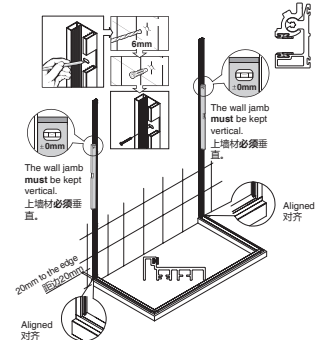


STEP 3

Connect and combine top frame.
拼接顶横梁。

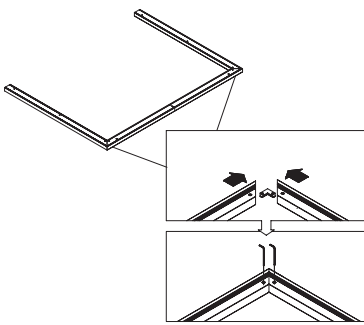


STEP 4

Remove the outer cover of the connector assembly. Insert the two side glass panels.
先卸开转角座外板，再分别插入两侧侧扇固玻。

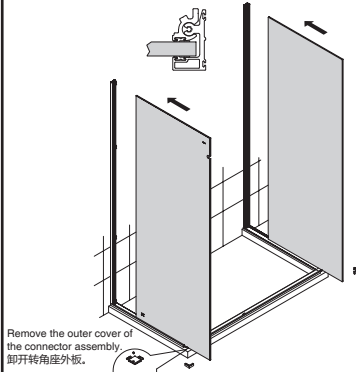


STEP 5

Reinstall the outer cover. Then push the side top rail frame into top.
将转角座外板安装回去，之后整体推入顶横梁。

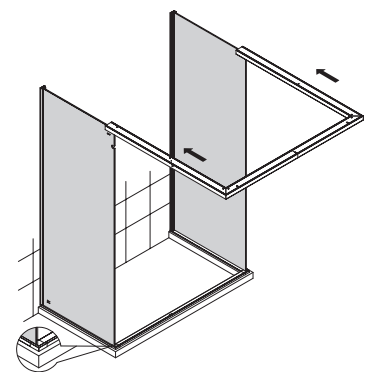


STEP 6

Fix the top frame onto the ceiling.
将顶横梁固定在天花板上。

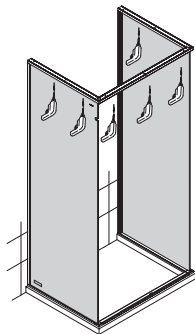


STEP 7

Install the corner column so that it is aligned to the bottom rail. Then insert the insert seal.
安装转角立柱，转角立柱需与底横梁对齐，之后再压入单边胶条。

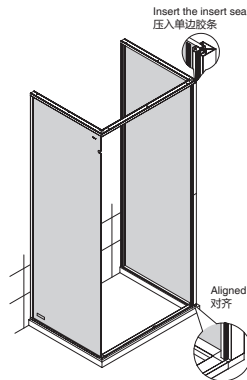


STEP 8

Install the hinged panel glass. Then install the bottom hinge onto the hinged panel glass. Adjust the distance between the hinged panel glass and the side panel glass to 664 mm. Insert the insert seal.
安装铰链固玻，保持距侧扇内侧尺寸为664mm，再压入单边胶条，之后将下铰链装上。

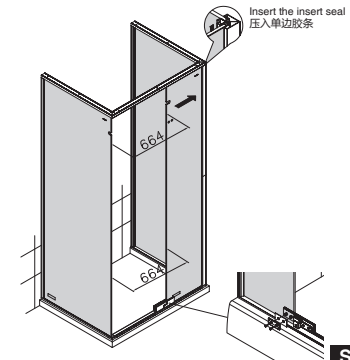


STEP 9

Tighten the screws of the wall channels and clamp the side panels.
锁紧墙材的螺丝，将固定玻璃夹紧。

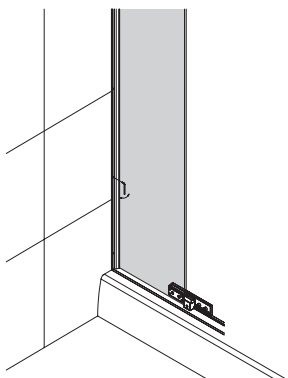


STEP 10

Fix the upper hinge onto the door glass.
将上铰链固定到门玻璃上。

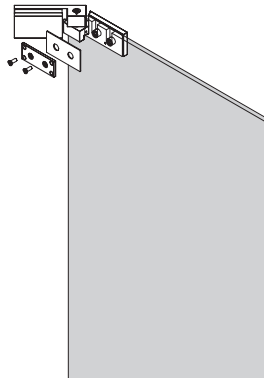

STEP 11


Lift the door glass and insert into the bottom hinge.
将门玻璃抬起，插入下铰链里。

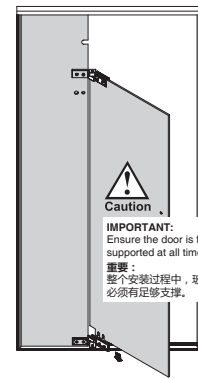

Caution:
IMPORTANT: Ensure the door is fully supported at all times.
重要：整个安装过程中，玻璃门必须有足够支撑。

STEP 12


IMPORTANT: Tighten the backboard of the top hinge and then that of the bottom hinge when the door glass is closed.
重要: 门玻璃处于闭合状态时，锁紧上铰链背板，之后锁紧下铰链背板。

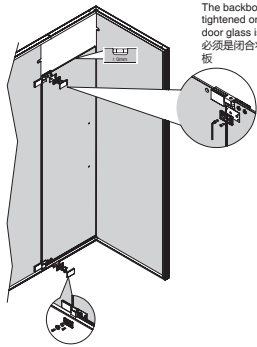

The backboard may be tightened only when the door glass is closed.
 必须是闭合状态下再锁紧背板。


STEP 13

Fix the transom assembly to the side panel and wall channel. Do not tighten the screws.
 将天窗转轴组件固定到固定玻璃上，不需要锁紧螺丝。

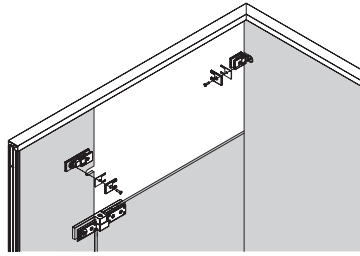


STEP 14

Fix the transom assembly, adjust the gaps on each side and then tighten the screws.
 将天窗固定到转轴上，调节好各边间隙，锁紧螺丝。

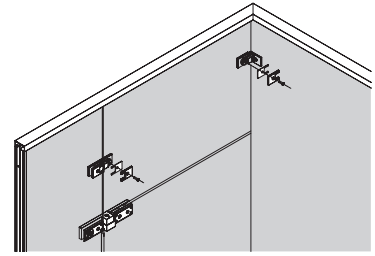


STEP 15

Fix decorative cover of the transom assembly.
 安装天窗转轴装饰盖。

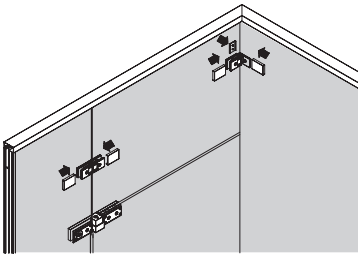

STEP 16


Insert side seal between side panel and top frame.
 固定玻璃与上横梁间卡入单边胶条。



Insert decorative seal into top frame.
 将装饰胶条卡入上横梁。




Insert wall side seal, make sure seals match length dimension, total eight seals.
 插入泡胶条，注意对应长度尺寸，共计8条。

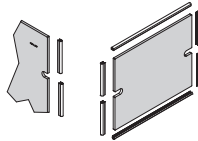


STEP 17

Install the magnetic strip and the side and bottom waterproof seals.
 安装磁条，侧边防水胶条和底边防水胶条。

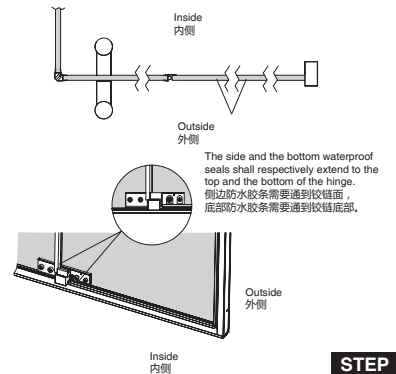

STEP 18


Install the decorative frames and then install the handle.
 扣上铝材装饰盖材，再安装拉手。

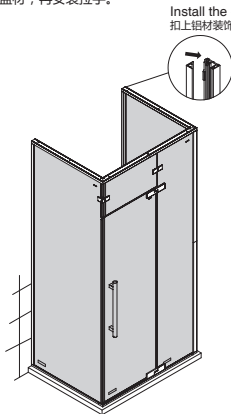

Install the decorative frame.
 扣上铝材装饰盖材。

STEP 19

Apply the silicone sealant.
 打防水胶

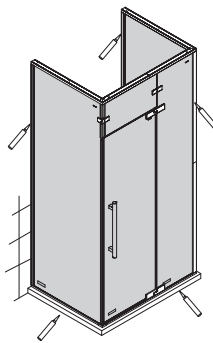

IMPORTANT: Sealant needs to be applied onto the bottoms of the two side glass panels at the inside.
重要: 两边侧窗固域内侧底部都需要打胶固定。

STEP 20