

BEFORE YOU BEGIN

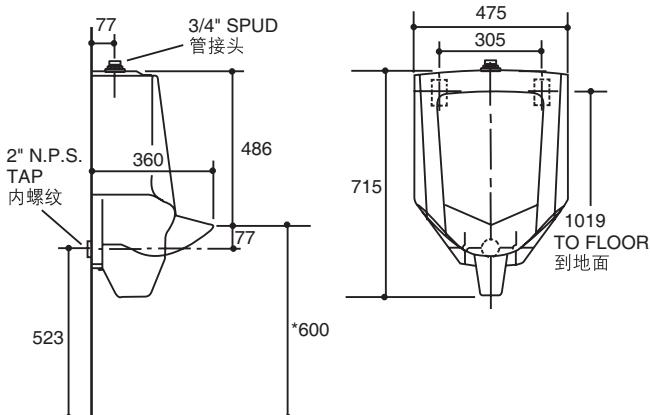
- Please read these instructions carefully to familiarize yourself with the required tools, materials, and installation sequences. Follow the sections that pertain to your particular installation. This will help you avoid costly mistakes. In addition to proper installation, read all operating and safety instructions.
- All information in these instructions is based upon the latest product information available at the time of publication. Kohler China reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.
- These instructions contain important care, cleaning, and warranty information - **please leave instructions for the consumer.**
- Fixture dimensions are nominal and conform to tolerances established by ASME Standards (A112.19.2-2003).

ROUGHING-IN

* Recommended dimensions for installation only, please adjust according to actual situation.


K-4960T-ET/K-4960T-WET

Reference Value
参考值






K-4960T-ER/K-4960T-WER

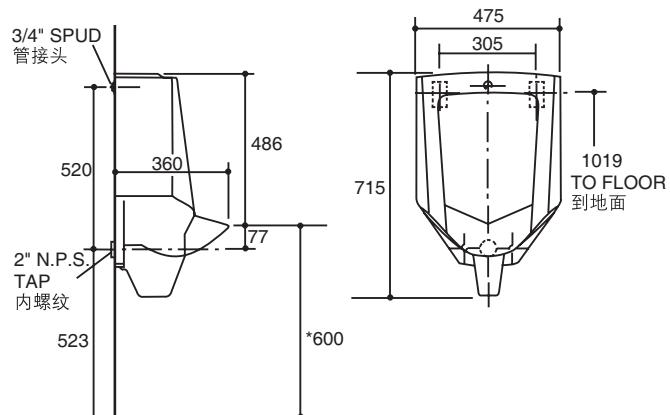UNIT: mm
单位: 毫米



广东省佛山市三水区乐平镇
三水中心工业园区科勒大道 邮编: 528137

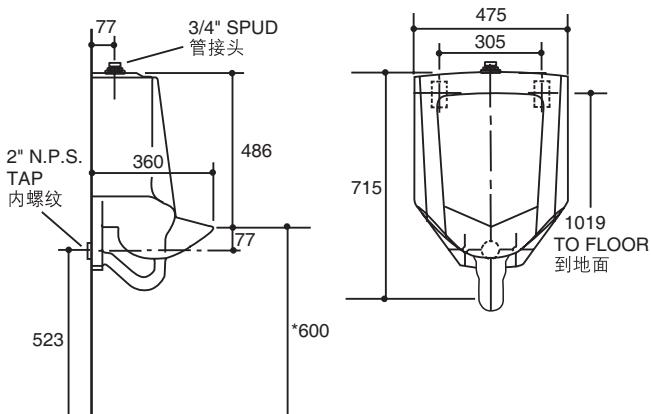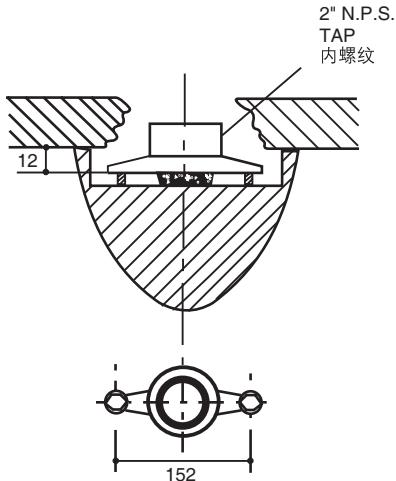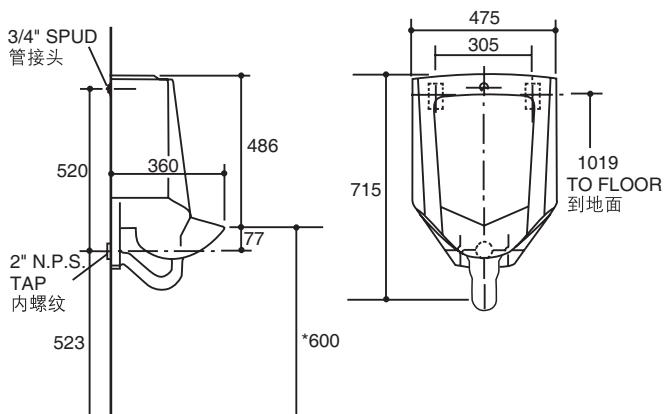K-4904T-ET**K-4904T-ER****OUTLET DETAILS**
出水口详细图

科勒公司保留随时变更图中标示尺寸的权利，无需另行通知。
Kohler reserves the right to change marked dimensions without prior notice.

INSTALLATION

Refer to the roughing-in drawing for proper heights of supply and waste locations. Install supply piping and waste piping in accordance with local plumbing codes.

- Measure from floor to centerline of waste outlet 523mm high and anchor waste pipe with 2" NPS male nipple protruding approximate 13mm past the finished wall.
- Measure from floor to centerline of hanger brackets 1019mm and anchor hangers securely to the wall.
- Screw the waste fitting (supplied with urinal) to the waste pipe nipple so that the face of outlet flange is 12mm from finished wall. **Refer OUTLET DETAILS.**
- Place sponge rubber gasket onto waste fitting (beveled side facing urinal).
- Place urinal on hangers and let gently slide down into position.
- Secure waste fitting to urinal using the two bolts and washers supplied.

安装

请参照尺寸图，以确保供水管及污水管的位置正确；且须遵守当地给排水规定来安装供水管和污水管。

- 由地面到污水管出口中心线高度为523mm，用2" NPS的公螺纹接套固定污水管，公螺纹接套须凸出完工墙约13mm。
- 由地面到挂钩的中心线高度应为1019mm，把挂钩安稳地固定在墙上。
- 将污水管装置(随产品供应)上紧于污水管螺纹接套上，出水法兰到完工墙的距离为12mm。请参考出水口详细图。
- 把海绵橡胶密封垫圈放在污水管装置之上(斜面应朝向小便器)。
- 把小便器放在挂钩上，轻轻向下推至恰当的位置。
- 用已提供的两个螺栓和垫圈，把污水管装置固定在小便器上。

7. Connect the flushometer valve to the supply nipple and urinal according to the flushometer valve manufacturer's recommendations.
8. Check for tightness of all connections and turn on the water. Flush urinal and adjust the control stop on the flushometer valve for flow volume, if needed.

NOTE: For rear inlet urinals, when planning installation, installer must allow connection of inlet water supply behind urinal.

IMPORTANT CONSUMER INFORMATION

CONSUMER RESPONSIBILITIES

If you live in a hard water area, make certain that the holes in the toilet rim are kept clean to ensure proper flushing. Toilet bowl cleaners should be used at least once a week. Use a long-handled brush to clean the rim holes, and to clean as far into the trap as possible to prevent mineral deposits from forming.

Most toilet bowl cleaners are not harmful to the vitreous china surface of the urinal. Please follow the bowl cleaner manufacturer's instructions carefully.

Do not use abrasive cleaners or solvents.

⚠ WARNING: Risk of property or product damage. Do not use cleaners inside the wash basin. Products containing chlorine (calcium hypochlorite) can seriously damage fittings in the urinal. This damage can cause leakage and property damage.

Kohler Company shall not be responsible or liable for any damage to these urinal fittings caused by the use of cleaners containing chlorine (calcium hypochlorite).

⚠ WARNING: Never spit phlegm and throw stub or something else into the urinal.

⚠ WARNING: Risk of product damage.
Do not throw into the urinal what is easy to block it, such as newspaper, paper pitch.
Do not bump the vitreous china with great force to prevent it from damaging and leaking.
Do not use the product in the water below 0°C.

7. 按冲水表阀制造商的指引，把冲水表阀接上供水管螺纹接套及小便器。

8. 检查所有连接是否上紧，然后打开供水管，冲洗小便器，如有需要可调整冲水表阀上的流量调节器。

注：如果订购的是后进水小便器，当计划安装时，安装人员必须使进水连接口位于小便器的背后。

用户须知

用户责任

如果你居住地方的水质是硬性，你必须保持冲水孔清洁，令小便器冲水正常。每星期应最少使用厕所清洁剂清洁一次，用长把手的刷子清洁冲水孔，并尽量伸入排污管洗刷，防止矿物质积聚。

大部份厕所清洁剂都不会损坏小便器表面的釉面陶瓷，但烦请遵照厕所清洁剂生产商指示小心进行。

请勿使用腐蚀性剂或溶剂。

⚠ 警告： 提防楼宇受损或损坏产品。请勿使用小便池内用清洁剂。含氯(次氯酸钙)的清洁剂会严重破坏小便器附件，从而引起渗漏，或对楼宇结构造成损坏。

科勒公司对此类因使用氯(次氯酸钙)而引致的小便器附件损毁，概不负责。

⚠ 警告： 请勿往小便器内吐痰、扔烟蒂等杂物。

⚠ 警告： 提防损坏产品。
请不要向小便器内冲入新闻纸、纸尿垫等容易堵塞的物品。
请不要用重力撞击陶瓷，以防止破损漏水。

不要在0°C以下的水环境中使用。