



柏明 BEAM

小便器感应器

URINAL SENSOR WITH OVERRIDE AND BYPASS

安装说明书

INSTALLATION INSTRUCTIONS

K-30939T(DC/直流型)/K-30940T(DC/直流型)

K-30941T(AC/交流型)/K-30942T(AC/交流型)

BEFORE YOU BEGIN

- Please read these instructions carefully to familiarize yourself with the required tools, materials, and installation sequences. Follow the sections that pertain to your particular installation. This will help you avoid costly mistakes. In addition to proper installation, read all operating and safety instructions.
- All information in these instructions is based upon the latest product information available at the time of publication. Kohler China reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.
- These instructions contain important care, cleaning, and warranty information - **please leave instructions for the consumer.**

安装之前

- 请通读本说明书，以便了解所需工具、材料及安装程序。请遵照相关章节进行安装，以避免由于安装不当而导致不必要的损失。除了有关正确的安装方法之外，还务请详阅所有操作及安全说明。
- 本说明书所含一切资料，均以印刷时所有的最新产品为准，科勒中国保留随时更改产品特性、包装或供应情况的权利，恕不另行通知。
- 本说明书也包含了有关护理、清洁及保养等重要资料 - 请交予用户保存。

RECOMMENDED TOOLS AND MATERIALS

- Open end/adjustable wrenches
- Tape measure
- Basin wrench
- Pipe wrench
- Square
- Level
- Socket wrench with sockets
- Screw driver
- Seal tape
- Connection wire
- Wire cutter
- Insulation tape
- Bushing

所需工具及材料

- 开口/活动板钳
- 卷尺
- 梅花板钳
- 管板手
- 直角尺
- 水平尺
- 管钳子
- 十字螺丝刀
- 生料带
- 连接线
- 剥线器
- 绝缘胶布
- 电工套管

科勒（中国）投资有限公司
中国上海市静安区江场三路158号 邮编：200436
制造商：上海科勒电子科技有限公司
中国上海市宝山区丰翔路1955号 邮编：200444

SENSOR SPECIFICATIONS

感应器规格

Model	K-30939T(0.5/1L/DC)
	K-30940T(3L/DC)
	K-30941T(0.5/1L/AC)
	K-30942T(3L/AC)
Power	DC power unit 2 "AAA" size alkaline batteries (K-30939T/K-30940T) (Batteries For Largess)
	AC/DC transformer input AC 220V 50/60Hz (K-30941T/K-30942T) (Sold Separately)
Liter per flushing	Water pressure at 0.18~0.55 MPa: no more than 0.5L Water pressure at 0.1MPa: no more than 0.5L
	Water pressure at 0.18-0.55MPa, no more than 1L Water pressure at 0.1MPa, no more than 1L
	Water pressure at 0.18-0.55MPa, no more than 3L Water pressure at 0.1MPa, no more than 3L
Temperature	Environmental temperature: 1 to 55°C
Starting pressure	0.05~0.86MPa
Sensing distance	70cm away from sensing window (Automatic adjustiment range: 50~70cm)
Testing time	About 5 seconds or 8 seconds (Automatic adjustment)
Flushing Mode	Dual flushing(K-30940T/K-30942T)
	Flushing after used (K-30939T/ K-30941T)


型 号	K-30939T (0.5/1L/直流型)
	K-30940T (3L/直流型)
	K-30941T (0.5/1L/交流型)
	K-30942T (3L/交流型)
电 源	直流电源盒 2节7号碱性电池(AAA×2) (K-30939T/K-30940T) (电池为赠品)
	交流电源盒 输入电压 220V AC 50/60Hz (K-30941T/K-30942T) (需另行选配)
冲洗水量	水压为0.18~0.55MPa时, 不大于0.5L 水压为0.1MPa时, 不大于0.5L
	水压为 0.18~0.55MPa时, 不大于1L 水压为0.1MPa时, 不大于1L
	水压为 0.18~0.55MPa时, 不大于 3L 水压为0.1MPa时, 不大于3L
使用温度	环境温度: 1~55°C
启动压力	0.05~0.86 MPa
感应范围	距感应窗口70cm以内 (自动调节范围约: 50~70cm)
检测时间	约5秒或8秒 (自动调节)
冲洗方式	两段冲洗 (K-30940T/K-30942T)
	使用后冲洗 (K-30939T/K-30941T)

Note: the sensing distance in the table is measured with a 30 × 30cm² white board as the reflecting surface.


注：表中感应范围距离的测定是以30×30cm²白纸为反射平面。

No	型号 /Model	K-30939T/K-30941T		K-30940T/K-30942T
		0.5L	1L	3L
1	18645T-Y-0	√	√	√
2	4904T-ET/ER-0	√		
3	4960T--ET/ER-0		√	√
4	4978T-ET/ER-0			√
5	4986T-ER-0	√		
6	5016T-YET/YER-0	√	√	√
7	5777T-ET/ER-0	√	√	√
8	5889T-ET/ER-0		√	√

K-4960T-ET

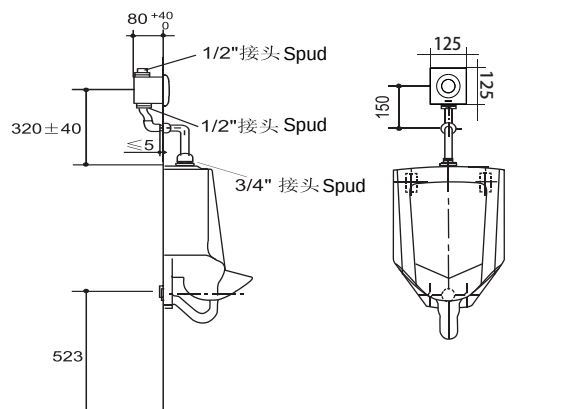


K-4960T-ER

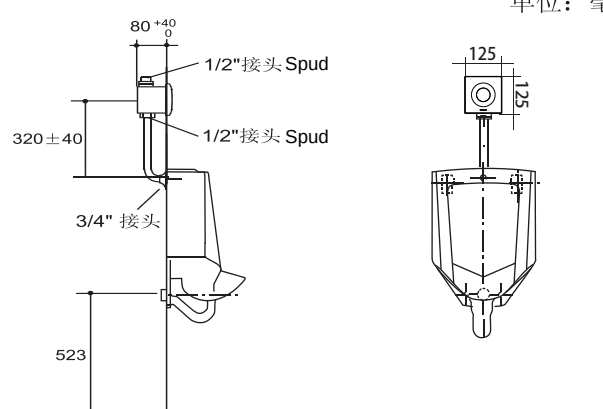


UNIT: mm
单位: 毫米


K-4978T-ET

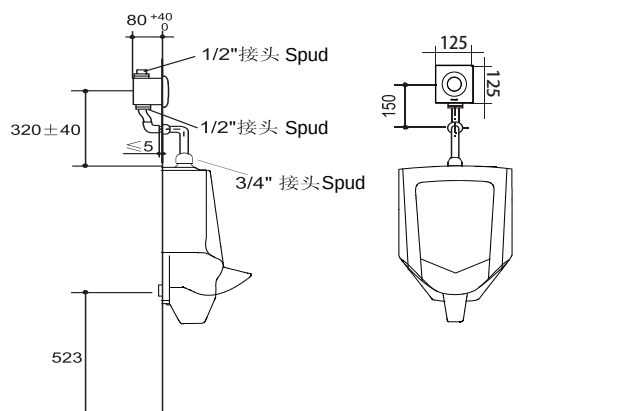

K-4978T-ER

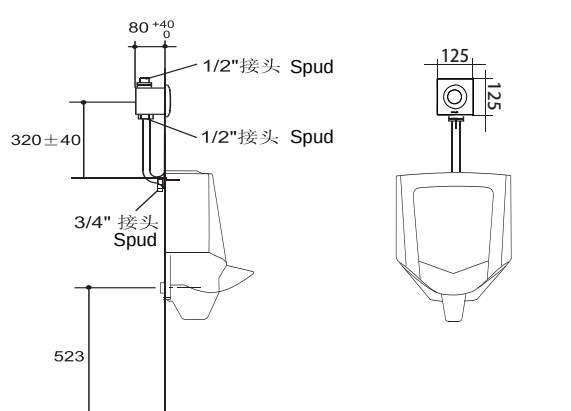


K-5016T-YET

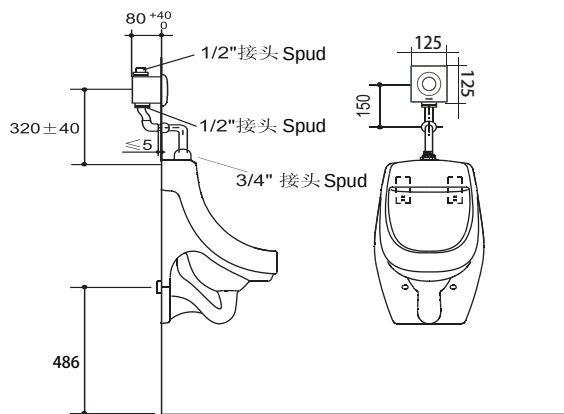


K-5016T-YER


UNIT: mm
单位: 毫米

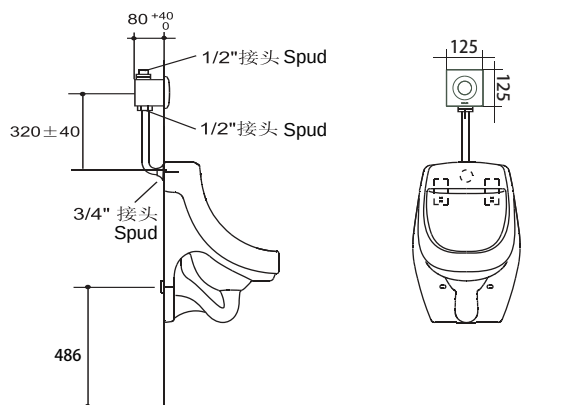


K-18645T-Y-0

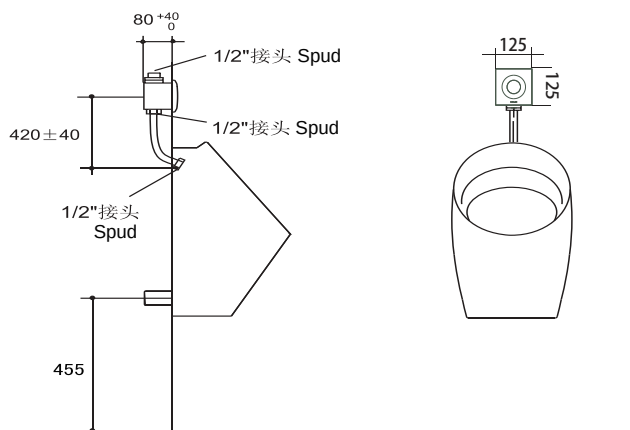


K-4986T-ER




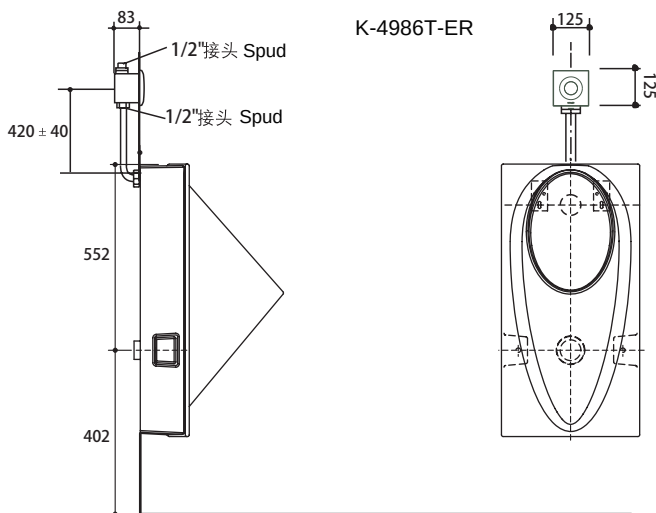


K-4904T-ET

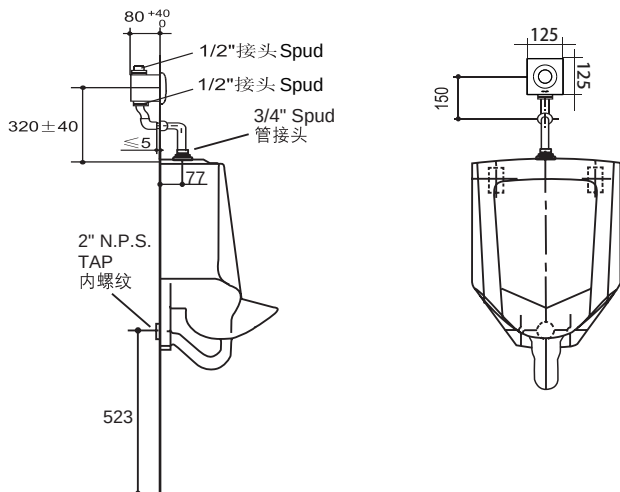

K-4904T-ER

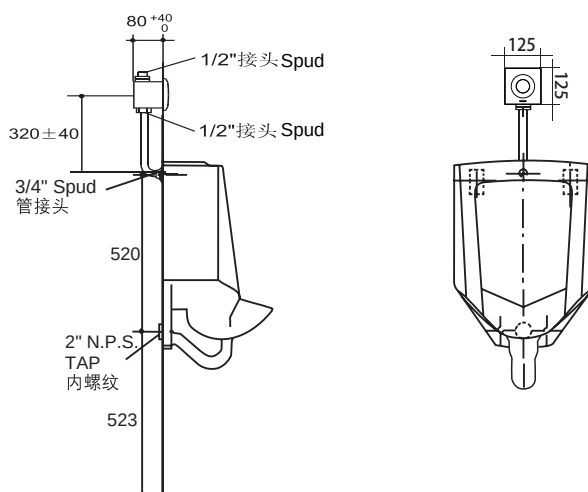

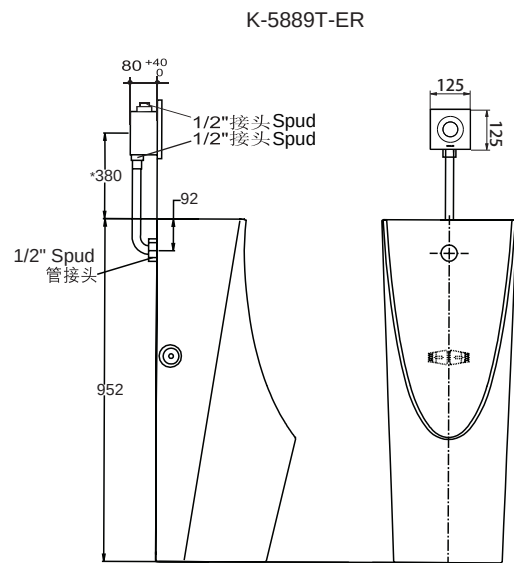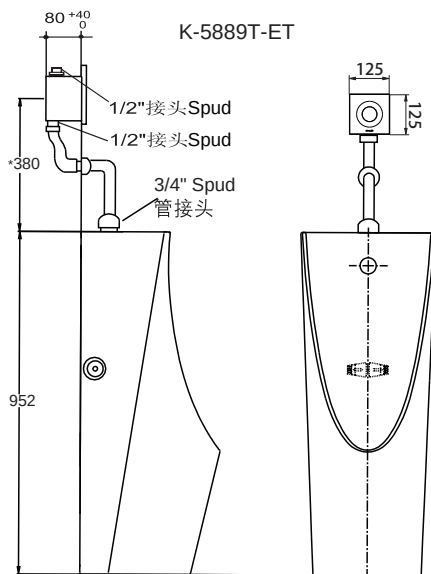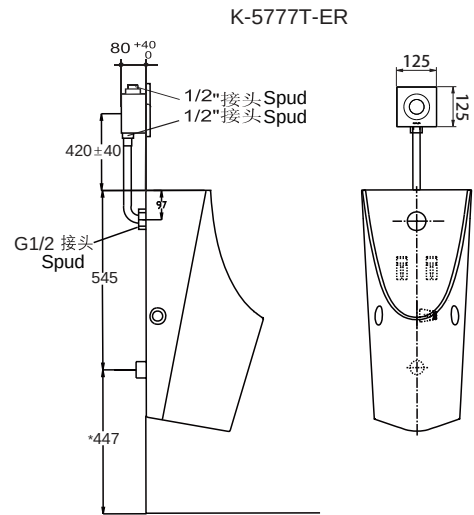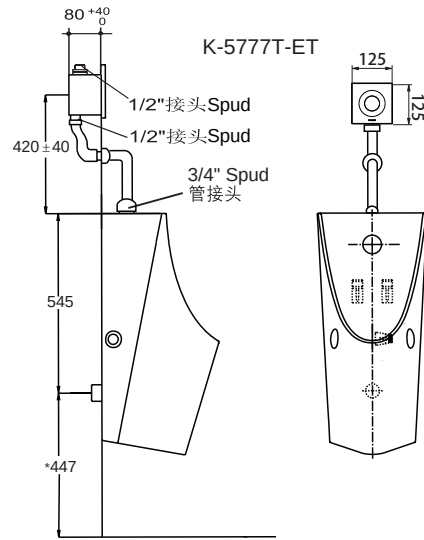

Recommended working water pressure (sensor inlet dynamic pressure): 0.18MPa~0.55MPa

c. 为保证有效冲洗，需配相应冲水量要求的小便斗，小便斗本身需符合ASME A112.19.2-2003要求；不推荐配虹吸式小便斗。

推荐工作压力（动压）：0.18MPa~0.55MPa


安装步骤

- 

- No light shall enter or be reflected into the sensing window.
- No reflectible objects in front of the sensing window (e.g., mirror, polishing stainless steel and some other polished plate).
- No strong ultraviolet radiation or electromagnetic field nearby.

- 


- a. 不能有光源直射或反射进入感应窗口。
- b. 不能在感应器正对面有易反射的物品(如镜子、光亮不锈钢板及其它镜面物体)。
- c. 不能靠近强列紫外线或电磁场。

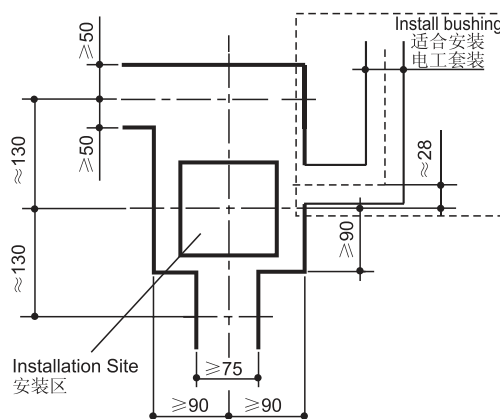

- 




注意：将本产品连接上供水管前，建议先冲洗干净供水管。

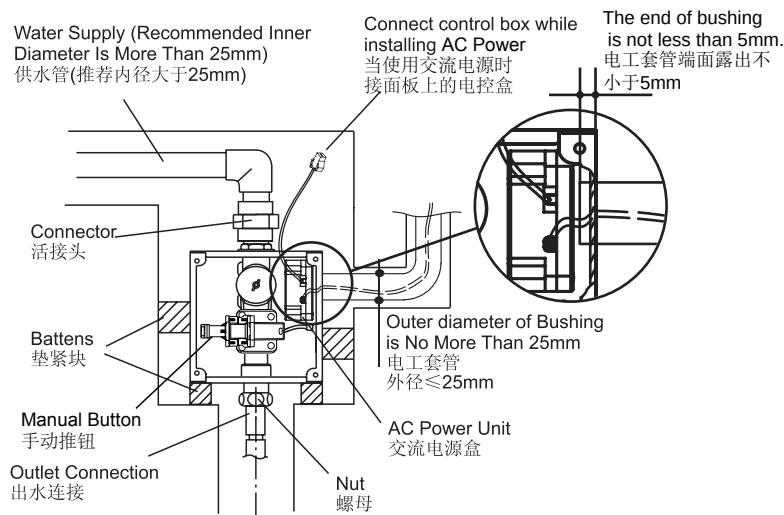


3. Tighten the slurry mold and valve box with short screws and then apply slurry into the crevice around the valve box. Lay the tiles.

3. 用短螺钉将灰浆模套与阀盒旋紧后用灰浆填埋冲洗阀箱体四周槽道，张贴瓷砖。

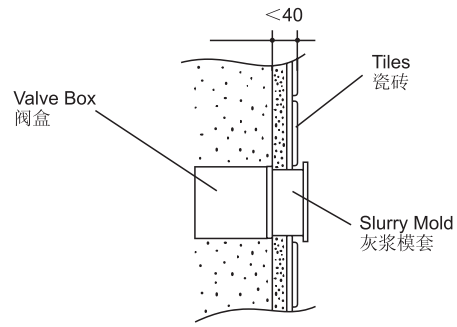

4. When the slurry turns solid, remove the short screws, pull out slurry mold, mount the bracket assy, and secure with long screws.

4. 灰浆固化后，取下短螺钉，揭去灰浆模套，并用长螺钉固定安装架。

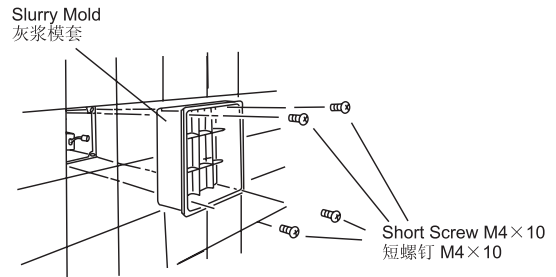

5 While using DC power ,take out the battery box from package box. Loose the screws of the battery box assy with a screw driver .Put 2 "AAA" size alkaline batteries and tighten the battery box cover with the screws. Placing the battery box in valve box. Then connect solenoid valve with control box assy and connect button with control box assy. Connect power supply to power unit at last. While using AC power, connect solenoid valve with control box assy, and connect button with control box assy. Connect AC power supply to power unit at last.

Install the cover as shown in the figure:

- Buckle the sensor cover into the wall slightly above bracket assy.
- Press the sensor cover down along the wall and fit tightly into the bracket assy.
- Push upward with hex wrench and rotate clockwise to lock the sensor cover.

5. 使用直流电源的情况时，从包装盒中取出电池盒组件，用十字螺丝刀旋开电池盒盖螺丝，装入2节7号碱性电池，拧紧电池盒盖的螺丝后，将电池盒组件放在阀盒内，然后连接电磁阀和控制盒组件及电子按钮和电控盒组件的接插件，最后连接电源和控制盒的接插件。





使用交流电源的情况时，连接电磁阀和控制盒组件的接插件，最后连接交流电源和控制盒的接插件。

如图安装面板：

- 将面板在固定板稍偏上方的位置扣向墙面；
- 紧贴墙面向下扣紧面板，使面板和安装架卡牢；
- 用六角扳手上顶后顺时针旋转，锁定面板。(逆时针旋转即可取下面板)

Notice: Don't mistake the polar of the batteries and don't mix new and used batteries together. When out of power, the indicator will flash every 2 seconds and the sensor will not work until new batteries are supplied. When replacing the batteries, open the cover of battery box and put in the new batteries. Put Keep the connector wire color is the same . Put on clean gloves when install sensor cover to avoid surface injury by cement or sand.

注意： 电池极性不能装反，新旧电池不能混用。电池耗尽时，电池指示灯每隔2秒闪烁一次，感应器停止工作，直至更换电池。更换电池时只需打开电池盒盖装入新电池即可。插头对应导线保持一致。安装面板时应戴上干净的手套，以防水泥或沙粒损伤表面。

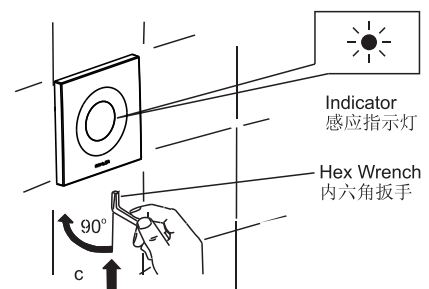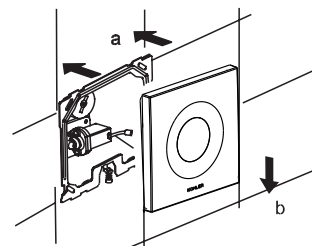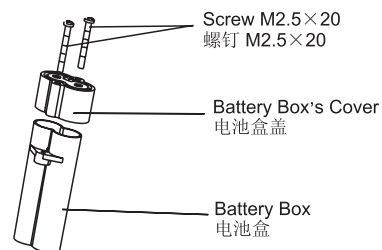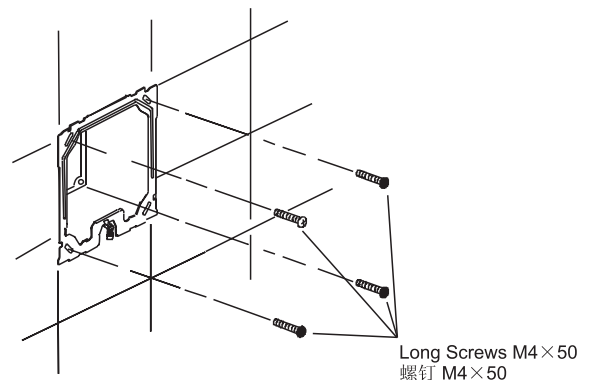

6.Installation AC power unit (only for AC) Please match 16306T-NA AC power unit . The way of installation is as below.
When using AC power must be cut off DC power ,the two can't power supply at the same time.



CAUTION:

- Outlet of AC power unit upward prohibited.
- Do not connect 220V C power supply to DC wiring terminal.
- Do not damage the covering of AC power unit or remove screws to avoid leakage.


6.安装交流电源盒（仅限于交流型）

请选配16306T-NA交流电源盒，安装方式如下：
使用交流电源时须先断开直流电源，二者不能同时供电。



警告：

- 禁止将交流电源盒出线朝上安装。
- 禁止将220V交流电源接入直流接线端。
- 安装时严禁损伤交流电源盒外壳或移开电源盒盖螺钉，以防止受潮漏电。

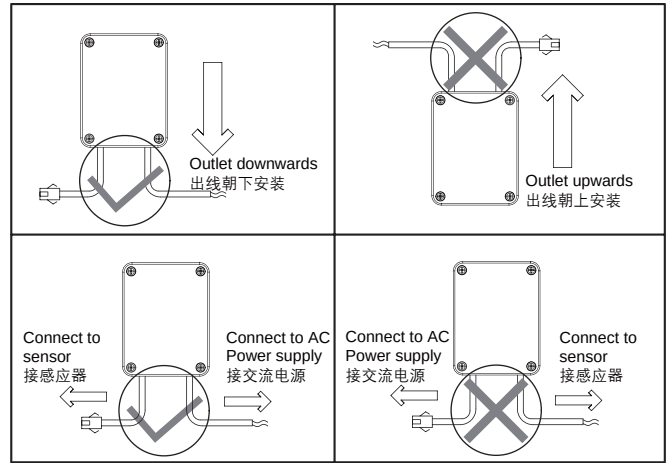

A. Fig. #1: AC power unit connection way 1:

AC power unit is directly connected to electric control box.

Fig. #2: AC power unit connection way 2:

AC power unit is connected to electric control box by connection wire.

A. 图1：交流电源盒连接方式一：

交流电源盒与电控盒直接相连。

图2：交流电源盒连接方式二：

交流电源盒通过连接线与电控盒相连。

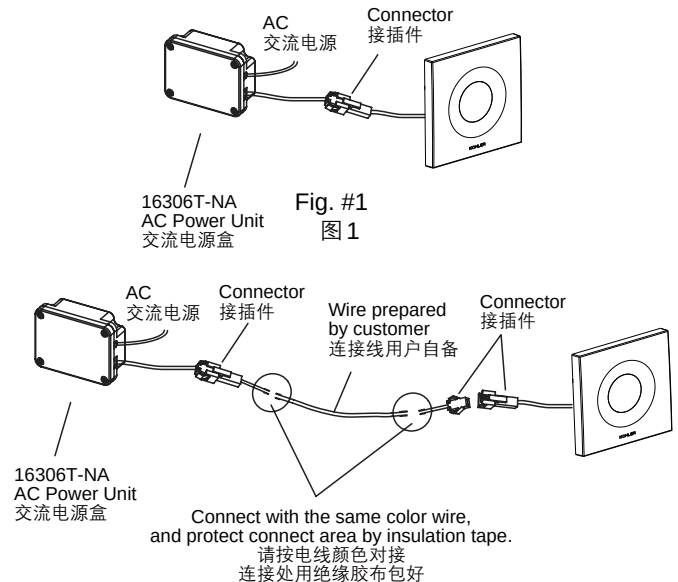


Fig. #2

图 2

B. When installing the AC power unit in cassette, please layout the bushing according to Fig.#3, and thread the wire through the bushing. Use of wires must be sheathed.
Fig.#3: Connection sketch AC power unit install in cassette.



CAUTION: One AC power unit can supply two sensors at most.

B. 将电源盒放在阀盒中时，如图示安装电工套管，管内装入电线。使用的电线必须是护套线。

图3：交流电源盒安装在阀盒内的连接示意图。



警告： 一个交流电源盒最多可连接两个感应器。

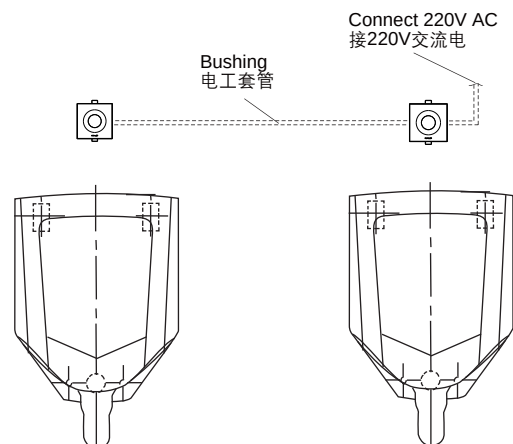


Fig. #3

图 3

- C. When installing the power unit on the ceiling, please layout bushing according to Fig. #4 and thread wire through the bushing.
Fig. #4: Connection sketch while installing power unit on the ceiling.

CAUTION: One AC power unit can supply two sensors at most.

- C. 将电源盒放在天花板上时，如图示安装电工套管，管内装入电线。

图4：交流电源盒安装在天花板上的连接示意图。

警告： 一个交流电源盒最多可连接两个感应器。

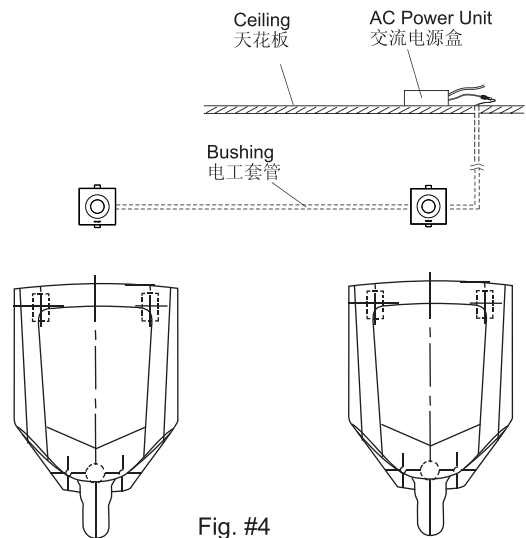


Fig. #4
图4

- Notice:**
- Keep the connector away from water.
 - Don't mistake the direction of inlet and outlet.
 - Do not connect the DC output of AC power unit to AC power supply.
 - Do not connect to power supply while installing. Connection line is not supplied. AC connection wire with insulating sleeving is recommended. Wire of which the nominal section area of conductor is not less than 0.5mm^2 is also recommended. DC connection line use wire of which the nominal section area is not less than 0.3mm^2 . It is cut according to acted installation requirements(The length of cut wire is recommended less than 10m).
 - The head AC power supply must be protected with appropriate fuse.
 - Please confirm the AC power supply and water supply should be shut off before maintaining the products with AC power related.

- 注意:**
- 不要让电线接插件接触水。
 - 不要将进出水方向弄错。
 - 不可将交流电源盒的直流输出端与交流电连接。
 - 安装时不要向电源盒供电。连接线请用户自备，建议交流电源线采用导体标称截面积 $\geq 0.5\text{mm}^2$ 的电线，直流连接线采用导体标称截面积 $\geq 0.3\text{mm}^2$ 的电线，电线长度根据实际安装需要自行裁剪(建议连接线长度小于10m)。
 - 交流电的总电源必须有合适的熔断丝加以保护。
 - 维修时必须断开交流电源并关闭水源。

USER'S GUIDE

- Notice:** The first 5 minutes with power is the standby time for adjusting sensing distance. Persons or subjects should avoid standing before the sensor. The sensor will not flush during this time.

Working Status

Before powering the system on, clear the unwanted objects in front of the sensor window lest shortening the sensing distance.

使用说明

- 注意：** 刚通电5分钟内为自动调节感应范围的待机状态，感应器前方应避免有人站立或有其它物体，在该时间内感应器不冲水。

工作状态

在电源接通前，务必清理感应冲洗器感应窗口前的杂物，以免影响自动调距，导致感应距离的缩短。

Set Working Status

1. K-30940T(DC)/K-30942T(AC)
The working status is set as dual-flush.
2. K-30939T(DC)/K-30941T(AC)
0.5L&1L flush mode change
The default flush mold of sensor is 0.5 L, you can switch to the 1L flush mode with flushing control stick. Operate as follow: after initial power on, during the first 5 minutes, you can switch the flush mode by putting the flushing control stick near the right part of the sensor lens. When the flushing control stick is near the right part of the sensor lens for 5 seconds. There will be one quick rinse and the indicator light flashes twice after you complete the 1L flush mode setting. If you need to reset the 0.5 L flush mold, you can cut off the power completely and restart the sensor, during the first 5 minutes, you can switch the flush mode by putting the flushing control stick near the right part of the sensor lens. When the flushing control stick is near the right part of the sensor lens for 5 seconds. There will be one quick rinse and the indicator light flashes once after you complete the 0.5 L flush mode setting.
3. The diction time is set as 5s to avoid improper function in narrow toilets, the detection time is automatically set from 5s to 8s.

工作状态的设定

1. K-30940T(直流型)/K-30942T(交流型)
工作状态为二段式冲洗状态。
2. K-30939T(直流型)/K-30941T(交流型)
0. 5L和1L可调式冲洗模式切换
出厂默认为0. 5L模式，在电控盒初始上电后5分钟内，可以通过磁棒靠近感应窗口进行0. 5L和1. 0L的冲洗切换，当磁棒贴近电控盒5秒后，电磁阀快速开关阀一次，同时指示灯闪两次，表示由0. 5L切换成1L；如果要从1L切换成0. 5L，必须放电后重新上电5分钟内进行切换，当磁棒贴近电控盒5秒后，电磁阀快速开关阀一次，同时指示灯闪一次，表示由1L切换成0. 5L。切换新的冲洗模式可以掉电后保存。
3. 检测时间为5秒，当卫生间狭小时，为防止误动作，本产品将自动把检测时间由5秒变成8秒。

Sensing Distance

During the first 5 minutes, when powered on, the system is in the phase of automatic regulation, and no operation is required.

感应范围

接通电源5分钟内系统处于自动调节感应阶段，无需使用者操作。

Deodorizing Flushing

The urinal will take a flush automatically when it's used 3 or 4 times in 2 minutes.

防臭冲洗

当2分钟内连续3-4人以上使用时，小便器自动冲洗一次。

Flushing Volume

If you need to regulate the flushing volume, you can take off the cover and turn the adjusting screw in the center of the stop valve to a proper place.

水流量


如需调节水流量，取下面板，旋动止水阀中心的水量调节螺钉至适量即可。



Manual Flushing

This system can have a good sense toward most of the clothes. However, it may have abnormal sense to a very small number of clothes. If this occurs, you may use the mode of manual flushing.

-  **Notice:** a. The button is a standby device that will be used when the sensor cannot perform correctly or the toilet is being repaired. It is not recommended to use when the sensor is normally functional.
- b. When the sensor cannot function properly, please refer to the list of troubleshooting on Page 13.
- c. Do not exert too much force to avoid the manual unit from damaged.

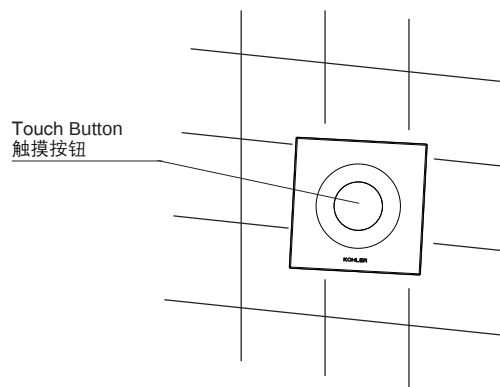

手控冲洗

本系统能对大部分衣物感应良好，但可能对极少数衣物出现感应不良现象。如有感应不良现象时可用手控冲洗。

-  **注意：** a. 按钮为备用机构，为感应器不能正常工作或维修便器时使用，在感应器能正常工作时不推荐使用。
- b. 当感应器不能正常工作时请参考故障排除。（见第13页）
- c. 不得用力过大，以免损坏手动机构。

MAINTENANCE

维护保养

Urinal Repair

When repairing, you don't have to dismount the sensor. Cover the sensing window with tape and work with ease.

-  **Notice:** Don't use very adhesive tape in case the scar will be hard to remove.

修理小便器

修理小便器时，不必拆下感应器，只需用电工胶布粘住感应窗口，您便可放心修理设备。

-  **注意：** 不要用强力胶布，因为粘痕会难以清除，而产生误动作。

Clean the Filter Screen

If the flushing volume declines sharply after installation or used for a long time with no cause from water pressure, the filter may need a wash.

Turn off the fixed cap with filter-key, take out the filter, clean with a brush and reinstall it.


-  **Notice:** Turn off the water supply or tighten the adjusting bolt before cleaning.

清洗过滤网

初装或使用较长时间后，如发现出水量明显变小，而非水压原因，可清洗阀体中的过滤网。

用滤网钥匙旋下固定盖，取出滤网，刷洗后重新装入即可。

-  **注意：** 清洗前，请先关闭水源或拧紧调节栓。

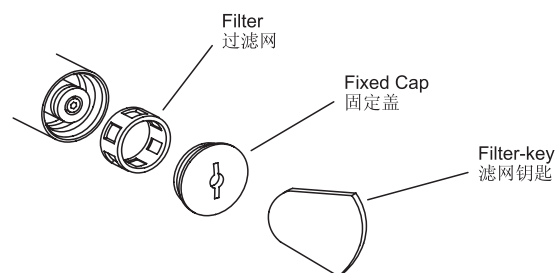

Care & Clean

Keep the sensing window clean. Wipe with soft cloth and mild cleaner.

-  **Notice:**
- a. Do not use dust-removing powder, abrasive powder or cleaner containing oil, acid or alkaline ingredient.
- b. Do not spray air-refresher, disinfectant, or other deodorizing, cleaning solvent directly into the sensing window.
- c. Keep wire away from water.
- d. Don't attack the sensor window.

清洁保养

保持感应窗口清洁，可用蘸有中性清洁剂的软布擦洗。

-  **注意：**
- a. 禁止使用去污粉、研磨粉及油类、酸性类、碱性类清洁剂。
- b. 禁止直接对感应窗口喷洒空气清新剂、消毒液或其他除臭、清洁类有机溶剂。
- c. 避免水直接接触电线接插件。
- d. 勿撞击感应窗口。

TROUBLESHOOTING

Please make following checks before repair:

Symptoms	Probable causes	Corrective actions
No flushing (Indicator not flashing).	1. No power or mistake connected. 2. There is a mirror or some other reflectible objects within the sensing distance. 3. The sensing window needs cleaning.	1. Check the power connect. 2. Remove the object . 3. Clean the window.
No flushing or poor flushing while the indicator can flash.	1. Still in the waiting status. 2. Adjusting bolt not fully open. 3. Low water pressure. 4. Filter is obstructed. 5. The connector is not connected well.	1. Wait for 5 minutes. 2. Open the adjusting bolt. 3. Improve water supply. 4. Clean the filter. 5. Check the connector.
Keep flushing indicator not flashing.	1. Dirt in valve unit. 2. The manual unit is damaged.	1. Repeat the sensing action several times after cleaning the filter . 2. Check the manual unit.
Battery indicating light flashes every 2 seconds and no flushing.	Out of electricity.	Replace batteries.
Battery indicating light flashes every 6 seconds, and the product works properly.	Battery can be uses for 1 week.	Replace batteriesl.

If the trouble remains after above-mentioned actions are taken, please contact with us via distributor.

简单故障排除

请在委托修理前做以下检查：

现象	可能原因	处理方法
不出水 (感应指示灯不亮)	1. 无电源或接线有误 2. 感应范围内有镜子或其它易反射物体 3. 感应窗口较脏	1. 检查电源连接 2. 清理物体 3. 清洁窗口
感应指示灯闪烁 而无水流出或出水较差	1. 通电待机状态 2. 调节栓未完全打开 3. 水压太低 4. 过滤装置脏堵 5. 接线端未接好	1. 等待5分钟 2. 打开调节栓 3. 改善供水情况 4. 清洗过滤装置 5. 检查接线端
不停水 感应灯也不在闪烁	1. 阀体部件内有脏物 2. 手动装置损坏	1. 清洗过滤装置后， 使感应器连续感应动作数次 2. 检查手动装置
电池指示灯每2秒闪烁一次 而不出水	电池耗尽	更换新电池
电池指示灯每6秒闪烁一次， 但此时可以正常工作	电池可用一周时间左右	更换新电池

如按以上操作仍未解除故障，请通过销售商与本公司联系。

IMPORTANT CONSUMER INFORMATION

用户须知

Consumer Responsibilities

1. Do not attack the sensor.
2. Do not directly flush the sensor with water. The sensor is an electronic instrument.
3. Do not let sunlight or other light source enter or be reflected into Sensor Window.
4. Do not hang on the opposite wall any reflective items or install light/electronic sensor such as toilet flushing sensor.
5. Do not make Sensor Window near strong ultraviolet or electromagnetic field.
6. Keep the sensor window clean.
The sensor cover can be cleaned by soft rag with neutral liquid detergent.
Do not use eradicator, abrasive powder or oil, acid or alkali liquid detergent.
Do not spray air freshener, disinfectant or other kinds of odious removing, cleaning organic liquid to the sensor directly.
7. Urinal is designed for use with potable water. Avoid water that includes a lot of contaminants or acid/alkali water and impure water.
8. When AC power unit is connected to 220V AC power supply, corresponding protective measures should be taken.
9. Please confirm no water penetration at the connection area of AC wire, and the connection area is not easy to be affected by damp.
10. Don't connect power unit to AC power supply until the sensor installation is finished.
11. The head AC power supply must be protected with appropriate fuse.
12. Please confirm the AC power supply and water supply should be shut off before maintaining the products with AC power related.
13. All electrical connection must be compliance with related regulation and codes.
14. All installation staff should be well familiar with installation instruction.

用户责任

1. 请勿敲击感应窗口。
2. 感应器为电子器具，请勿直接用水冲洗。
3. 避免阳光或其他光源直接或反射进入感应窗口。
4. 请勿在感应器正面墙壁上挂贴易反射的物体或安装光电感应器(如大便自动感应冲洗器)。
5. 请勿靠近强烈紫外线或电磁场。
6. 保持感应窗口清洁。
窗口外壳可用蘸有中性清洁剂的软布擦洗。
禁止使用去污粉、研磨粉及油类、酸性类、碱性类清洁剂。
禁止直接对感应窗口喷洒空气清新剂、消毒液或其他除臭、清洁类有机溶剂。
7. 使用水源为自来水或可供饮用井水。
避免使用含有杂质较多或带有酸、碱性的处理水或未加工处理的水。
8. 将交流电源盒接入220V电源时，应采取相应的防卫措施。
9. 应确保交流导线连接处无水渗入以及不易受潮。
10. 务必在感应器安装完毕后，才向交流电源盒供电。
11. 交流电的总电源必须有合适的熔断丝加以保护。
12. 维修交流供电型的产品时，必须首先断开交流电源并关闭水源。
13. 所有电路连接必须符合相关规范和条例要求。
14. 所有参与安装人员都必须熟知安装说明。

Description of Content of Hazardous Substances in Product

Reclaim Indication

When the product exceeds service life or is unable to use after repair, do not throw the product away in the normal trash. Please dispose the waste electronic parts through a qualified reclamation enterprise. Make sure the product is handled properly. Disposing of product must be done in accordance with the local or national government law.

Statistics of Contents of Toxic or Hazardous Substances or Elements

Part name	Toxic or Hazardous Substance or Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Cover Assy.	○	○	○	○	○	○
Valve Assy.	×	○	○	○	○	○
Control Box Assy.	×	○	○	○	○	○
* Battery Box Assy.	○	○	○	○	○	○
* Battery	○	○	○	○	○	○
* AC Power Box	○	○	○	○	○	○
* Water Inlet Assy.	○	○	○	○	○	○
* Electronic Key Assy.	○	○	○	○	○	○
Accessories	○	○	○	○	○	○

○ : Indicates that the substance in the material composition is below the high limits of the current requirements in GB/T26572.

× : Indicates that at least one of the homogeneous substance in the material composition is below the high limits of the current requirements in GB/T 26572.

* : Indicate only partial product series contains this substance.

Note: the information provided is based on the supplier data and Kohler inspection results. The product is designed not to hurt the environment. Under current technology, all hazardous materials have been used in the smallest amounts possible. Kohler will strive to reduce the use of these hazardous materials used in this product.



The product "service life for environment protection" is 10 years; Kohler Company will specify product service life based on product characteristics. The product "service life for environment protection" is only effective when the product is used as described in the product specification.

产品中有害物质含量的说明

回收提示

本产品超过使用期限或经过维修无法正常使用后，不应随意丢弃，请交由有废弃电器电子产品处理资质的企业处理，正确的处理方法请查阅国家或当地有关废旧电器电子产品处理的规定。

有害物质统计表

部件名称	有害物质名称					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
面板组件	○	○	○	○	○	○
阀体组件	×	○	○	○	○	○
控制盒组件	×	○	○	○	○	○
* 电池盒组件	○	○	○	○	○	○
* 电池	○	○	○	○	○	○
* 交流电源盒	○	○	○	○	○	○
* 水箱组件	○	○	○	○	○	○
* 电子按钮组件	○	○	○	○	○	○
附件类	○	○	○	○	○	○

- ：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572现行有效版本规定的限量要求以下。
- ×：表示有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572现行有效版本规定的限量要求。
- *：表示部分机型含有该部件。

注：本表格提供的信息是基于供应商提供的数据及科勒公司的检测结果。本产品应用环保设计理念，在当前技术水平下，所有有害物质或元素的使用已经控制到了最低程度，科勒公司会继续努力通过改善现有技术来减少这些物质的使用。



本产品的“环保使用期限”为10年，科勒公司根据产品设计特性指定该期限。只有在本产品使用说明书所述的正常情况下使用本产品时，“环保使用期限”才有效。

